


# Magic Chef W20FA5 02 - CONTROL PANEL

MAGIC CHEF W20FN-5 BACKGUARD

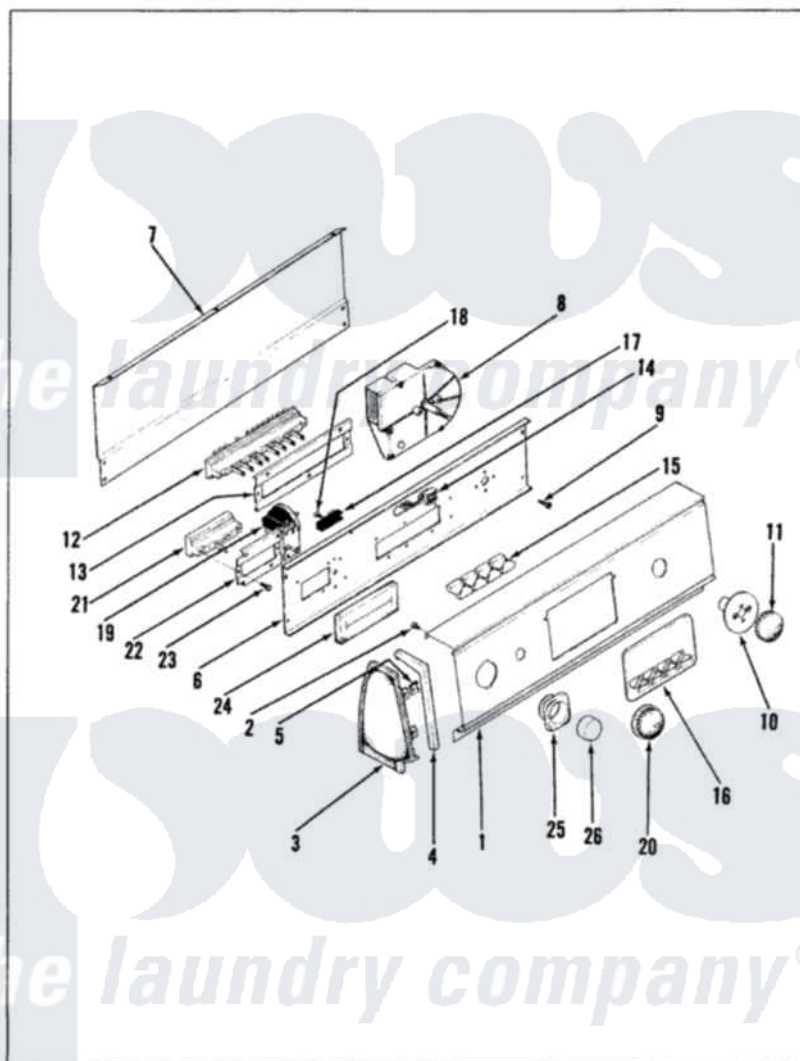

Issued 11/87

Magic Chef [Residential Magic Chef W20FA5 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0687		Not Available	CONTROL PANEL
2	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
3	25-7649	<a href="#">910187</a>		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	25-7697	<a href="#">25-2219</a>		Screw
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">53-0265</a>			LH Endcap
"	<a href="#">53-0264</a>			RH Endcap
4	<a href="#">25-7760</a>			Screw
"	53-0278		Not Available	TRIM, END CAP (LT)

"	53-0277		Not Available	TRIM, END CAP (RT)
5	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
6	35-0686-1		Not Available	CONTROL SHIELD
7	<a href="#">25-3457</a>			Screw, Sems
"	25-7583		Not Available	PLASTIC NUT
"	53-0268	<a href="#">21001460</a>		Shield, Rear
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
8	<a href="#">35-0728</a>			Timer
"	<a href="#">35-0116</a>			Timer Motor 3/5 RPM
9	25-0088	<a href="#">489483</a>		Screw 10-32 X 1/2
10	35-0679	<a href="#">12500057</a>		Knob Ski
11	35-0676	<a href="#">12500057</a>		Knob Ski
12	35-0689		Not Available	PB SWITCH
13	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6623		Not Available	BRACKET
14	35-0691-02		Not Available	SIGNAL LIGHT
"	35-0691-01		Not Available	SIGNAL LIGHT
"	35-0691-04		Not Available	SIGNAL LIGHT
"	35-0691-03		Not Available	SIGNAL LIGHT
15	35-0682-01		Not Available	PUSHBUTTON
"	35-0682-06		Not Available	PUSHBUTTON
"	35-0682-05		Not Available	PUSHBUTTON
"	35-0682-04		Not Available	PUSHBUTTON
"	35-0682-03		Not Available	PUSHBUTTON
"	35-0682-02		Not Available	PUSHBUTTON
"	35-0682-07		Not Available	PUSHBUTTON
16	25-7882		Not Available	PALNUT
"	35-0685		Not Available	PB BEZEL
"	35-0692		Not Available	LENS
"	35-0690		Not Available	LENS
17	35-0279		Not Available	SELECTOR KNOB
18	25-7649	<a href="#">910187</a>		Screw
19	<a href="#">35-0782</a>			Pressure Switch
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
20	53-0849		Not Available	SELECTOR KNOB - FAB
21	35-0688		Not Available	PB SWITCH
22	33-6621		Not Available	BRACKET, SWITCH
23	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7712		Not Available	SCREW
24	33-8541		Not Available	SWITCH PAD
25	35-0684		Not Available	PB BEZEL
26	35-0683		Not Available	PUSHBUTTON