


Magic Chef W20FN2C 02 - CONTROL PANEL

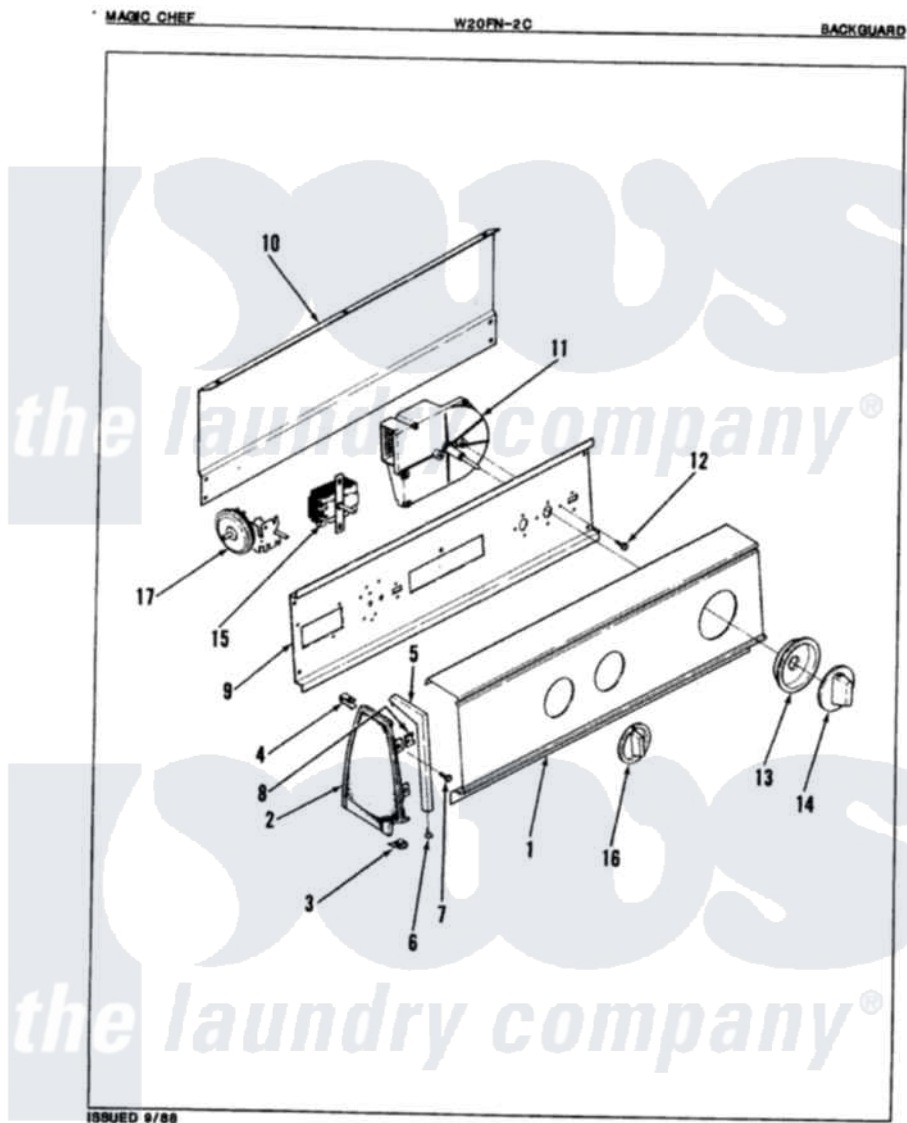

Magic Chef [Residential Magic Chef W20FN2C Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
2	53-0265			LH Endcap
"	53-0264			RH Endcap
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel

9	53-0365	53-1676		Shield, Control
10	25-7583		Not Available	PLASTIC NUT
"	25-3457			Screw, Sems
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0268	21001460		Shield, Rear
11	35-0117			Timer Motor 1/2rpm
"	35-0484		Not Available	TIMER
12	25-0088	489483		Screw 10-32 X 1/2
13	35-0318		Not Available	HUB/SKIRT ASM
14	35-0498	12500058		Knob Ski
15	35-0119			Rotary Switch
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-0168		Not Available	SELECTOR KNOB
17	35-0782			Pressure Switch
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

