


Magic Chef W20FY5 02 - CONTROL PANEL

MAGIC CHEF

W20FN-5

BACKGUARD

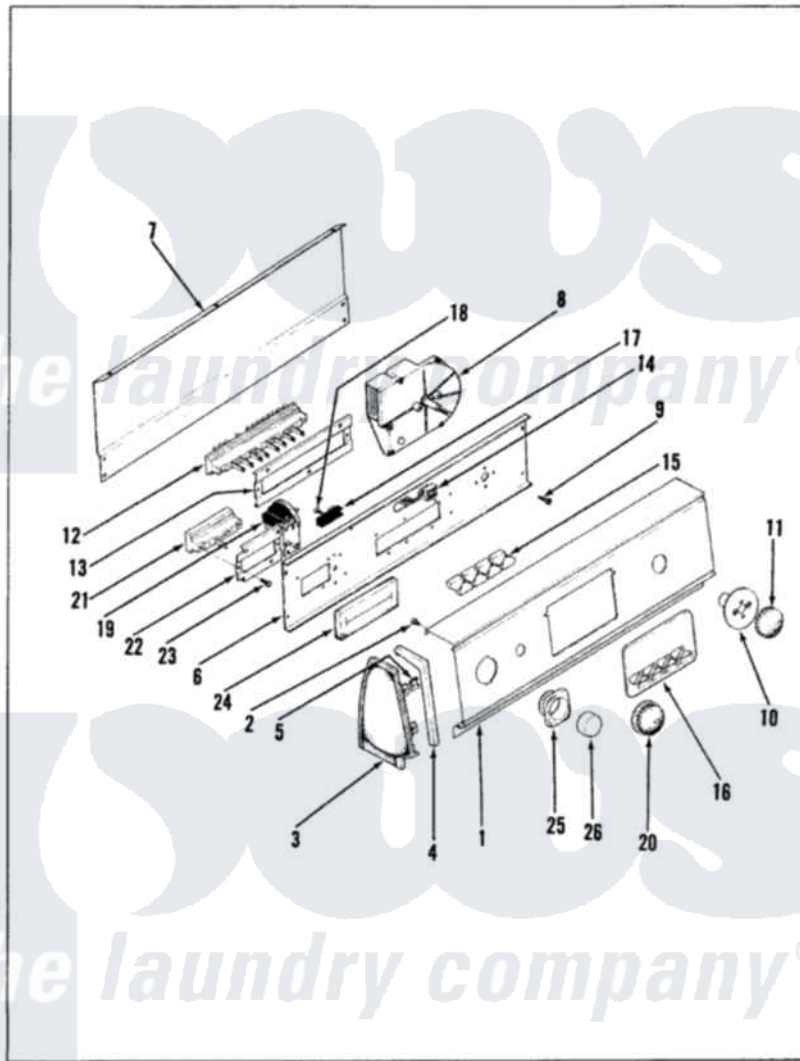

Issued 11/87

Magic Chef [Residential Magic Chef W20FY5 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0687		Not Available	CONTROL PANEL
2	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
3	25-7649	910187		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7852			Speedclip, Rr Shld To End Cap
"	25-7851			Speedclip, End Cap To Top
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7697	25-2219		Screw
"	25-7435	33002917		Screw, No.10-16
"	53-0265			LH Endcap
"	53-0264			RH Endcap
4	25-7760			Screw
"	53-0278		Not Available	TRIM, END CAP (LT)

"	53-0277		Not Available	TRIM, END CAP (RT)
5	25-7702			Speedclip, End Cap To Control Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	35-0686-1		Not Available	CONTROL SHIELD
7	25-3457			Screw, Sems
"	25-7583		Not Available	PLASTIC NUT
"	53-0268	21001460		Shield, Rear
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	35-0728			Timer
"	35-0116			Timer Motor 3/5 RPM
9	25-0088	489483		Screw 10-32 X 1/2
10	35-0679	12500057		Knob Ski
11	35-0676	12500057		Knob Ski
12	35-0689		Not Available	PB SWITCH
13	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6623		Not Available	BRACKET
14	35-0691-02		Not Available	SIGNAL LIGHT
"	35-0691-01		Not Available	SIGNAL LIGHT
"	35-0691-04		Not Available	SIGNAL LIGHT
"	35-0691-03		Not Available	SIGNAL LIGHT
15	35-0682-01		Not Available	PUSHBUTTON
"	35-0682-06		Not Available	PUSHBUTTON
"	35-0682-05		Not Available	PUSHBUTTON
"	35-0682-04		Not Available	PUSHBUTTON
"	35-0682-03		Not Available	PUSHBUTTON
"	35-0682-02		Not Available	PUSHBUTTON
"	35-0682-07		Not Available	PUSHBUTTON
16	25-7882		Not Available	PALNUT
"	35-0685		Not Available	PB BEZEL
"	35-0692		Not Available	LENS
"	35-0690		Not Available	LENS
17	35-0279		Not Available	SELECTOR KNOB
18	25-7649	910187		Screw
19	35-0782			Pressure Switch
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
20	53-0849		Not Available	SELECTOR KNOB - FAB
21	35-0688		Not Available	PB SWITCH
22	33-6621		Not Available	BRACKET, SWITCH
23	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7712		Not Available	SCREW
24	33-8541		Not Available	SWITCH PAD
25	35-0684		Not Available	PB BEZEL
26	35-0683		Not Available	PUSHBUTTON