


Magic Chef W20HA23 09 - TUB (W20H23T)

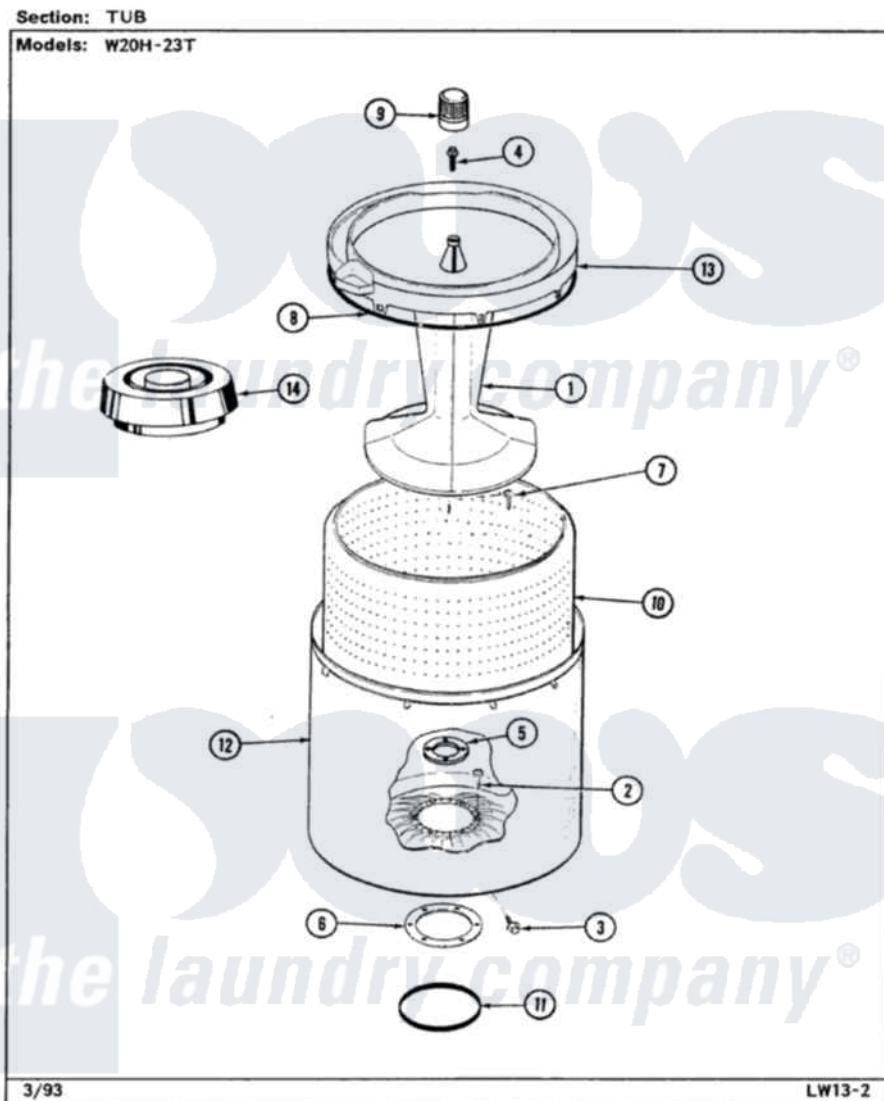

Magic Chef [Residential Magic Chef W20HA23 Washer Parts](#) Parts Diagram 09 - TUB (W20H23T)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-3580			Agitator
2	25-7947	21001063		Screw, Shoulder
3	25-7953	22002933		Screw
4	25-7948	W10309247		Screw
5	35-3685			Gasket, Basket To Centerpost
6	35-3686			Gasket, Tub To Housing
7	25-7965	3400504		Screw
8	35-2328			Seal, Tub Top
9	35-2733			Cap, Agitator
10	35-3687		Not Available	BASKET, SPIN
11	35-2978			Seal, Tub/Housing
12	35-3700			Tub Assembly
13	35-3578		Not Available	TOP, TUB
"	35-2262		Not Available	SHIELD, TUB TOP
14	35-2550			Dispenser, Rinse