


Magic Chef W20HA4 02 - CONTROL PANEL

MAGIC CHEF W20HN-4 BACKGUARD

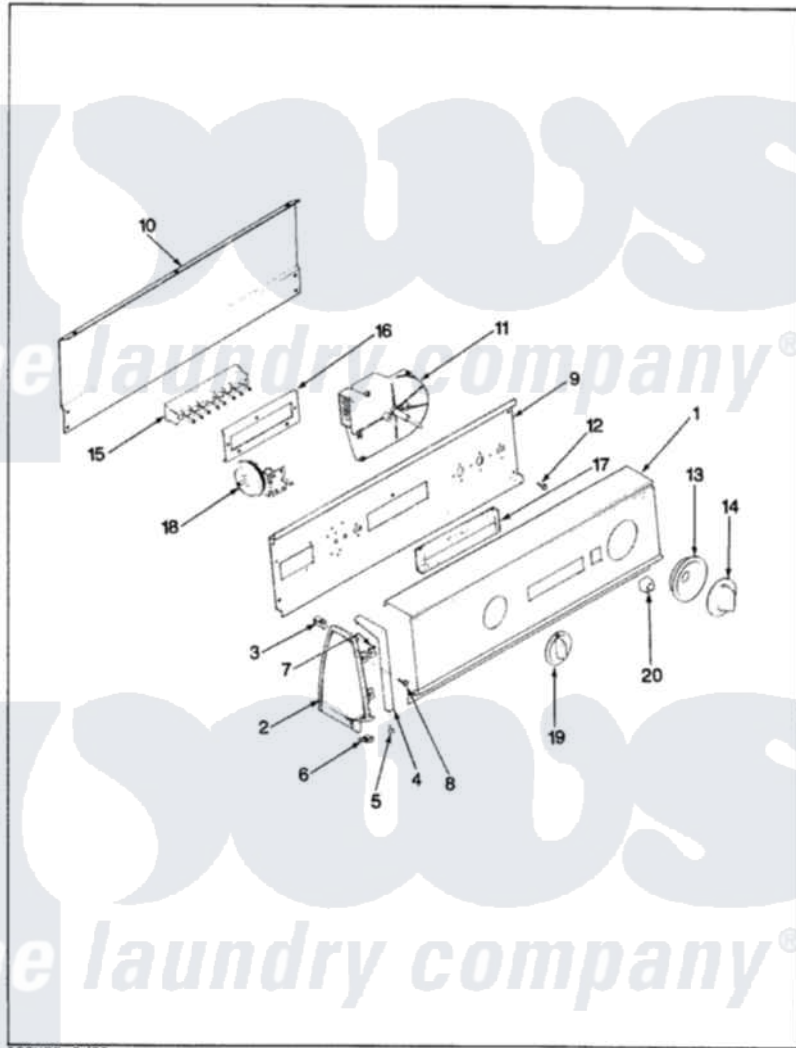

ISSUED 9/89

Magic Chef [Residential Magic Chef W20HA4 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	25-7649	910187		Screw
2	53-0265			LH Endcap
"	53-0264			RH Endcap
3	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
4	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
5	25-7760			Screw
6	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT
7	25-7702			Speedclip, End Cap To Control Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-0267		Not Available	CONTROL SHIELD
10	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7583		Not Available	PLASTIC NUT
"	25-3457			Screw, Sems
"	53-0268	21001460		Shield, Rear
11	35-2211		Not Available	TIMER
12	25-0205	216412		Screw, Bracket To Timer
13	35-2254	12500058		Knob Ski
14	35-2187	12500058		Knob Ski
15	35-2197			Switch
16	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6620		Not Available	BRACKET
17	33-8540		Not Available	SWITCH PAD
18	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2145	21001554		Switch, Water Level
19	35-2185	21001283		Knob, Selector----Piq
20	35-0385			Pushbutton
"	35-0872		Not Available	MANUAL, USE & CARE

