


Magic Chef W20HN2C 06 - CONTROL PANEL (W20HN-2C)(REV. A-D)

MAGIC CHEF W20HN-2C BACKGUARD

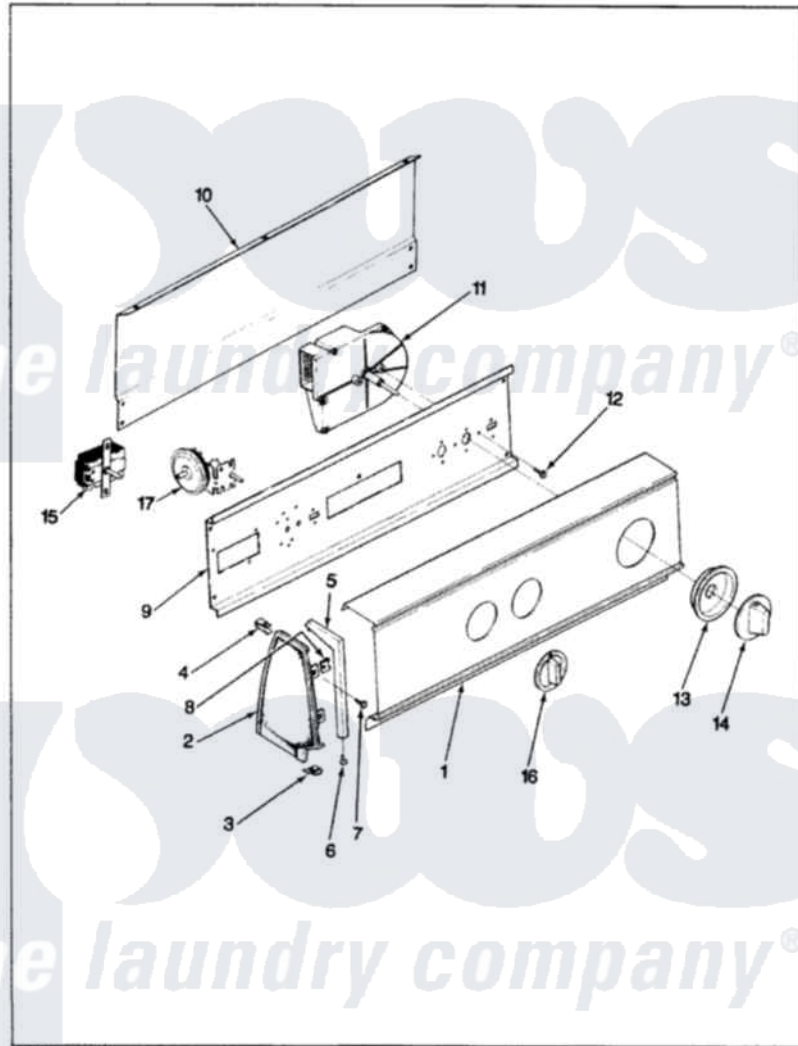

ISSUED 9/89

Magic Chef Residential Magic Chef W20HN2C Washer Parts Diagram 06 - CONTROL PANEL (W20HN-2C)(REV. A-D)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7793			Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2169		Not Available	CONTROL PANEL
2	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
"	53-0264			RH Endcap
"	53-0265			LH Endcap
3	25-7697	25-2219		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)

6	25-7760		Screw
7	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702		Speedclip, End Cap To Control Panel
9	53-0365	53-1676	Shield, Control
"	53-1676		Shield, Control
10	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460	Shield, Rear
"	53-0268	21001460	Shield, Rear
11	35-2210	35-2749	Timer
12	25-0088	489483	Screw 10-32 X 1/2
13	25-7835		Not Available RING, COMPRESSION
"	35-2254	12500058	Knob Ski
14	35-2187	12500058	Knob Ski
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0119		Rotary Switch
16	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2185	21001283	Knob, Selector---Piq
17	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2145	21001554	Switch, Water Level
18	35-2368		Not Available MANUAL, U&C INSERT

