


Magic Chef W20HN2C 07 - EXTERIOR (REV. E-G)

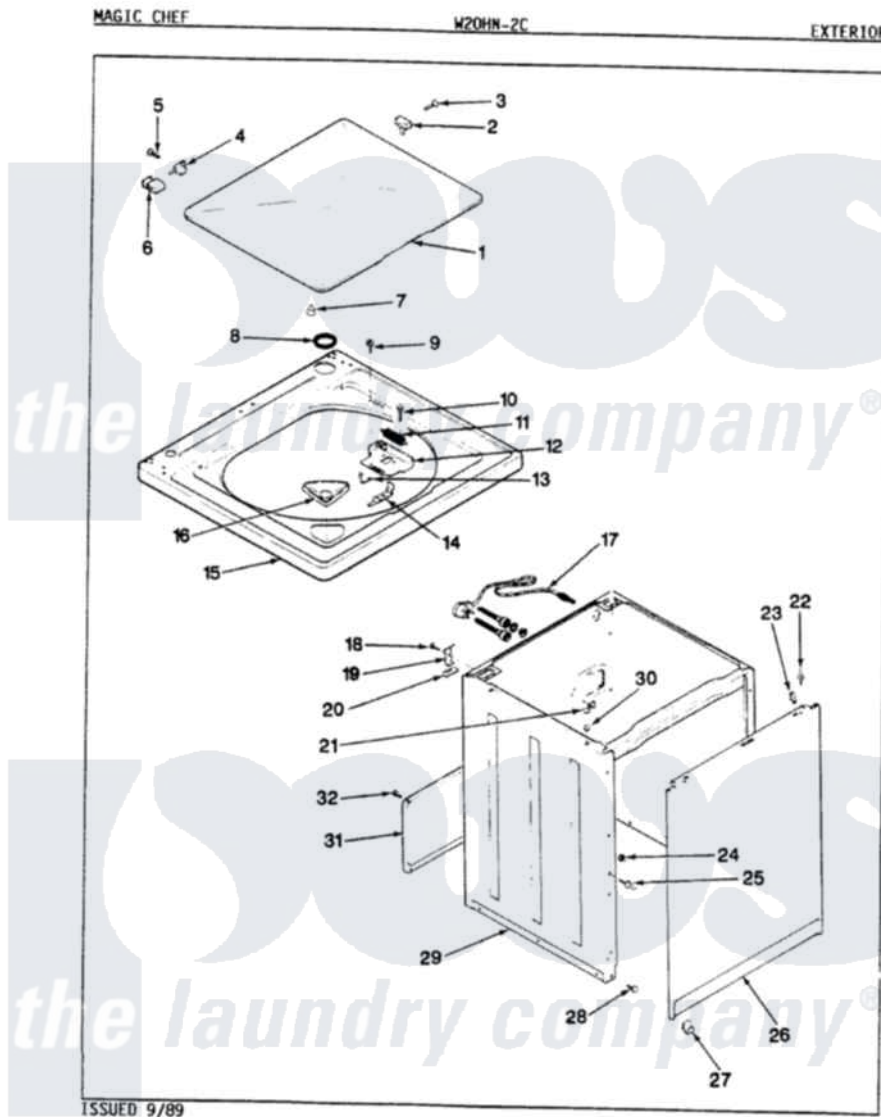

Magic Chef [Residential Magic Chef W20HN2C Washer Parts](#) Parts Diagram 07 - EXTERIOR (REV. E-G)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2343-24		Not Available	DOOR, CLOTHES
"	35-2341	35-2026		Lid
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	25-7086	Y0308025		Washer, Stainless Steel
"	35-2045			Pin, Hinge
5	25-7893			Screw
6	35-2044			Hinge, Lid
7	35-0581			Bumper, Door
8	35-2063			Bushing, Insulator
"	35-2064			Bushing, Insulating
9	25-7463	7101P012-60		Screw
10	25-7437	40040701		Screw, Tapping No.6b-20
11	33-9064	12001187		Kit, Lid Switch Assembly
"	33-8911	12001187		Kit, Lid Switch Assembly

12	33-8289	12001187		Kit, Lid Switch Assembly
13	25-7878			Clip
14	33-9063	12001187		Kit, Lid Switch Assembly
15	35-2739			Top, Cabinet
"	35-2739-24		Not Available	TOP, CABINET (ALM)
"	35-2739-25		Not Available	TOP, CABINET (HARV.WT)
16	33-9906	21001167		Dispenser, Bleach
17	35-0680		Not Available	CORD, POWER
18	25-7893			Screw
19	33-7450	35-2846		Hinge, Cabinet Top
20	33-0930			Pad, Top Hinge
21	33-6099			Clamp
22	53-0643			Pin, Locator
23	34-9701			Guide, Cabinet
24	25-0224	3400029		Nut, Adapter Plate
25	53-0643			Pin, Locator
26	35-2084			Panel, Front
"	35-2084-25		Not Available	PANEL, FRONT
"	35-2084-24			Panel, Front
27	53-0120			Clip, Front Panel
28	33-2653			Bumper, Cabinet
29	35-2106	21001871		Cabinet
"	35-2106-25		Not Available	CABINET ASSY. (HW)
30	33-2653			Bumper, Cabinet
31	35-2108	21001871		Cabinet
32	25-7733	681414		Screw, 10AB X 1/2

the laundry company[®]

the laundry company[®]