


Magic Chef W20HN3C 03 - CONTROL PANEL (REV. A-D)

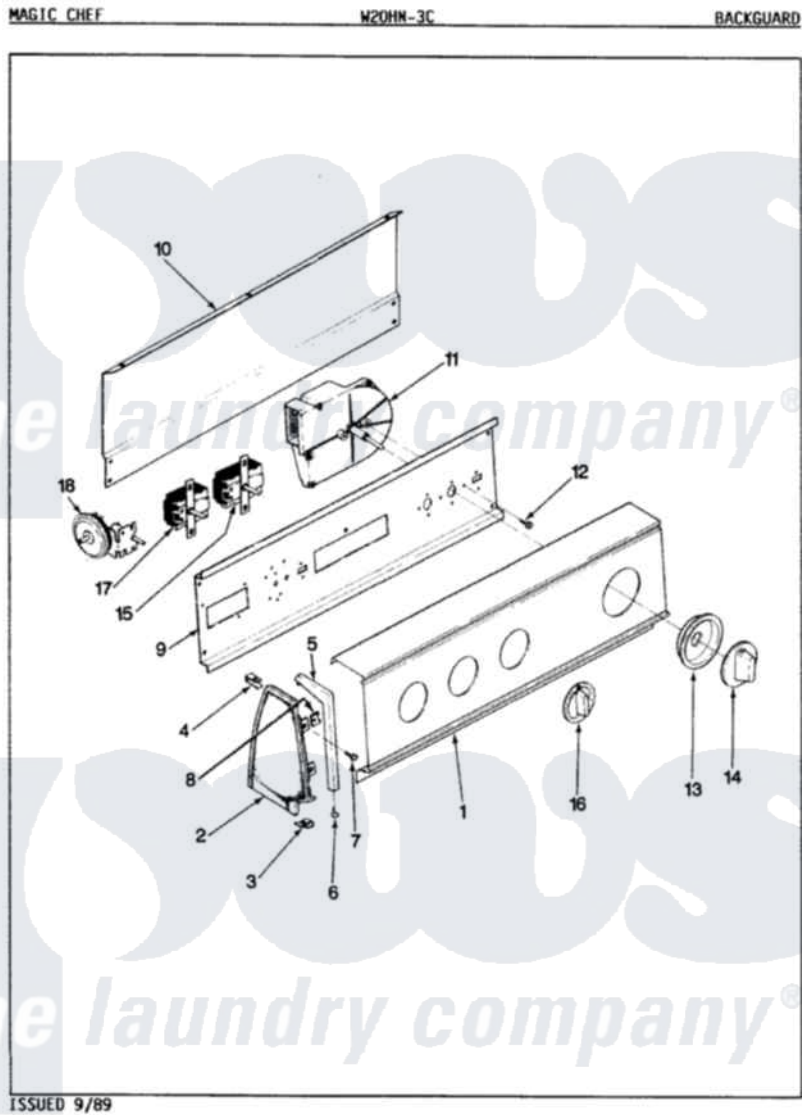

Magic Chef [Residential Magic Chef W20HN3C Washer Parts](#) Parts Diagram 03 - CONTROL PANEL (REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2168		Not Available	CONTROL PANEL
"	25-7793			Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2553		Not Available	PANEL, CONTROL
2	53-0265			LH Endcap
"	53-0264			RH Endcap
"	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)

6	25-7760		Screw
7	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702		Speedclip, End Cap To Control Panel
9	53-0365	53-1676	Shield, Control
"	53-1676		Shield, Control
10	25-7853	25-7933	Ring, Retaining
"	25-3457		Screw, Sems
"	53-0268	21001460	Shield, Rear
"	35-2688	21001460	Shield, Rear
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
11	35-2211	Not Available	TIMER
12	25-0205	216412	Screw, Bracket To Timer
13	35-2254	12500058	Knob Ski
14	35-2187	12500058	Knob Ski
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0114	Not Available	TEMP SWITCH
16	35-2185	21001283	Knob, Selector---Piq
17	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2193	Not Available	SWITCH, ROTARY SPEED
18	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2145	21001554	Switch, Water Level
19	35-2568	Not Available	MANUAL, USE & CARE

the laundry company[®]

the laundry company[®]