


Magic Chef W20HN3C 07 - TUB (REV. A-D)

SECTION: TUB
MODEL: W20HN-3C

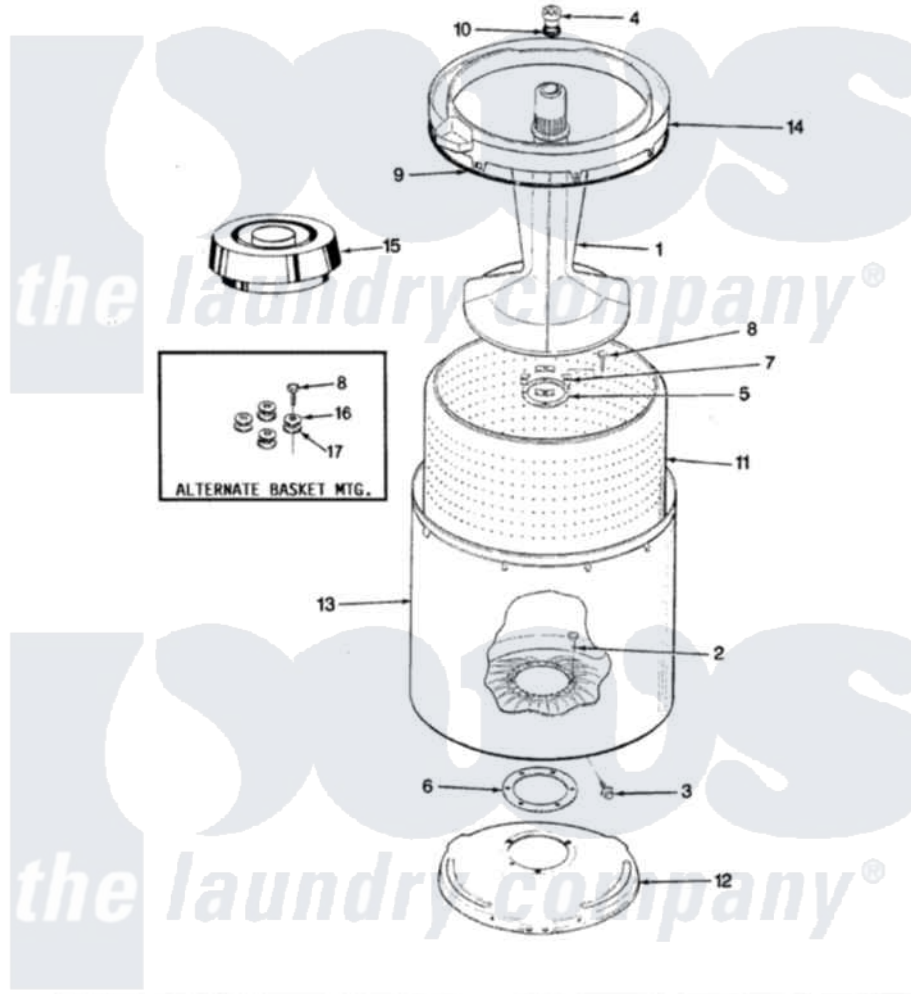

Issue Date: 6/90

Magic Chef [Residential Magic Chef W20HN3C Washer Parts](#) Parts Diagram 07 - TUB (REV. A-D)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2456	33-4352		Agitator
"	35-2371	33-4352		Agitator
2	35-2062	21001063		Screw, Shoulder
3	25-7914	22002933		Screw
4	33-6241			Cap
5	33-8959			Gasket
6	35-2061			Gasket, Tub To Housing
7	33-8799		Not Available	REINF PLATE
8	25-7783	4356852		Screw
9	35-2328			Seal, Tub Top
10	25-7330			Rubber Washer
11	35-2508		Not Available	BASKET WHITE
"	35-2381		Not Available	BASKET ASSY-WHITE
12	35-2023			Tub Support
"	35-2529		Not Available	TUB SUPPORT
13	35-2038			Tub

14	35-2262	Not Available	SHIELD, TUB TOP
"	35-2034	Not Available	TOP, TUB
15	33-9827	35-2550	Dispenser, Rinse
"	35-2550		Dispenser, Rinse
16	25-7921	Not Available	STEEL WASHER
17	25-7922		Cork Washer

