


Magic Chef W20HN4C 04 - TUB (REV. A-B)

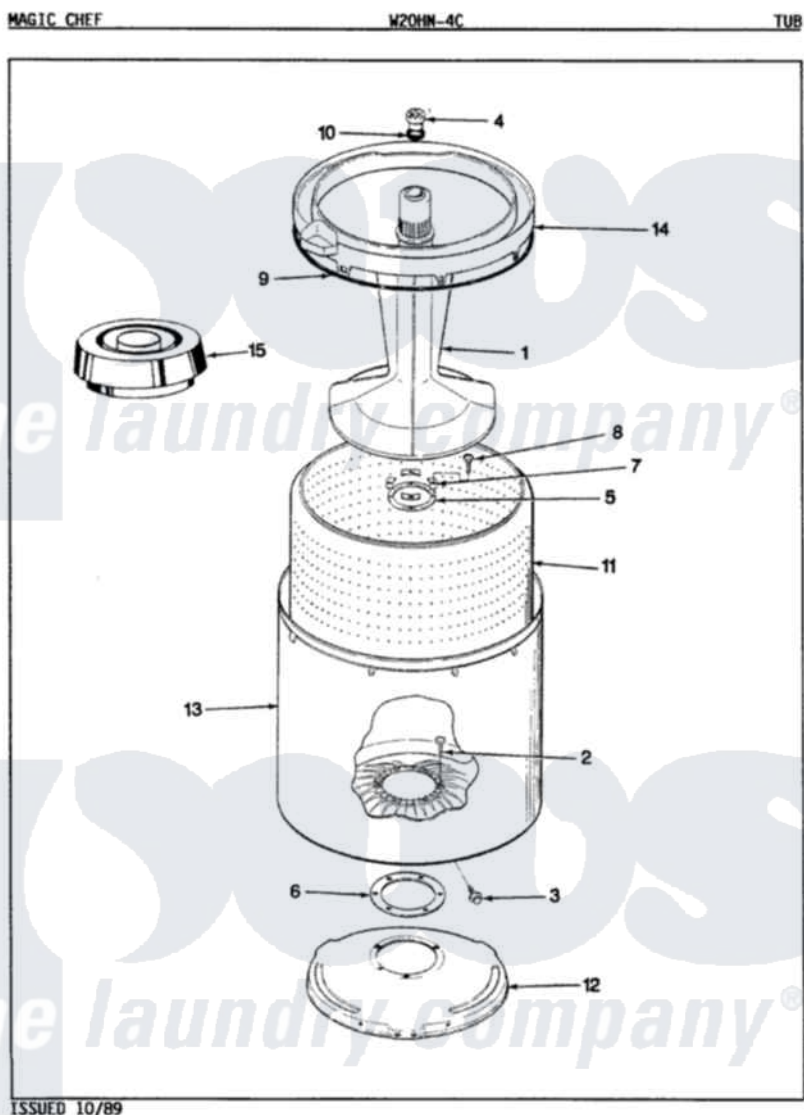

Magic Chef [Residential Magic Chef W20HN4C Washer Parts](#) Parts Diagram 04 - TUB (REV. A-B)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2456	33-4352		Agitator
"	35-2371	33-4352		Agitator
2	35-2062	21001063		Screw, Shoulder
3	25-7914	22002933		Screw
4	33-6241			Cap
5	33-8959			Gasket
6	35-2061			Gasket, Tub To Housing
7	33-8799		Not Available	REINF PLATE
8	25-7783	4356852		Screw
9	35-2328			Seal, Tub Top
10	25-7330			Rubber Washer
11	35-2508		Not Available	BASKET WHITE
"	35-2381		Not Available	BASKET ASSY-WHITE
12	35-2023			Tub Support
13	35-2038			Tub
14	35-2262		Not Available	SHIELD, TUB TOP

" 35-2034

Not Available

TOP, TUB

15 33-9827

[35-2550](#)

Dispenser, Rinse

"

[35-2550](#)

Dispenser, Rinse

