


Magic Chef W20HV3S 02 - CONTROL PANEL

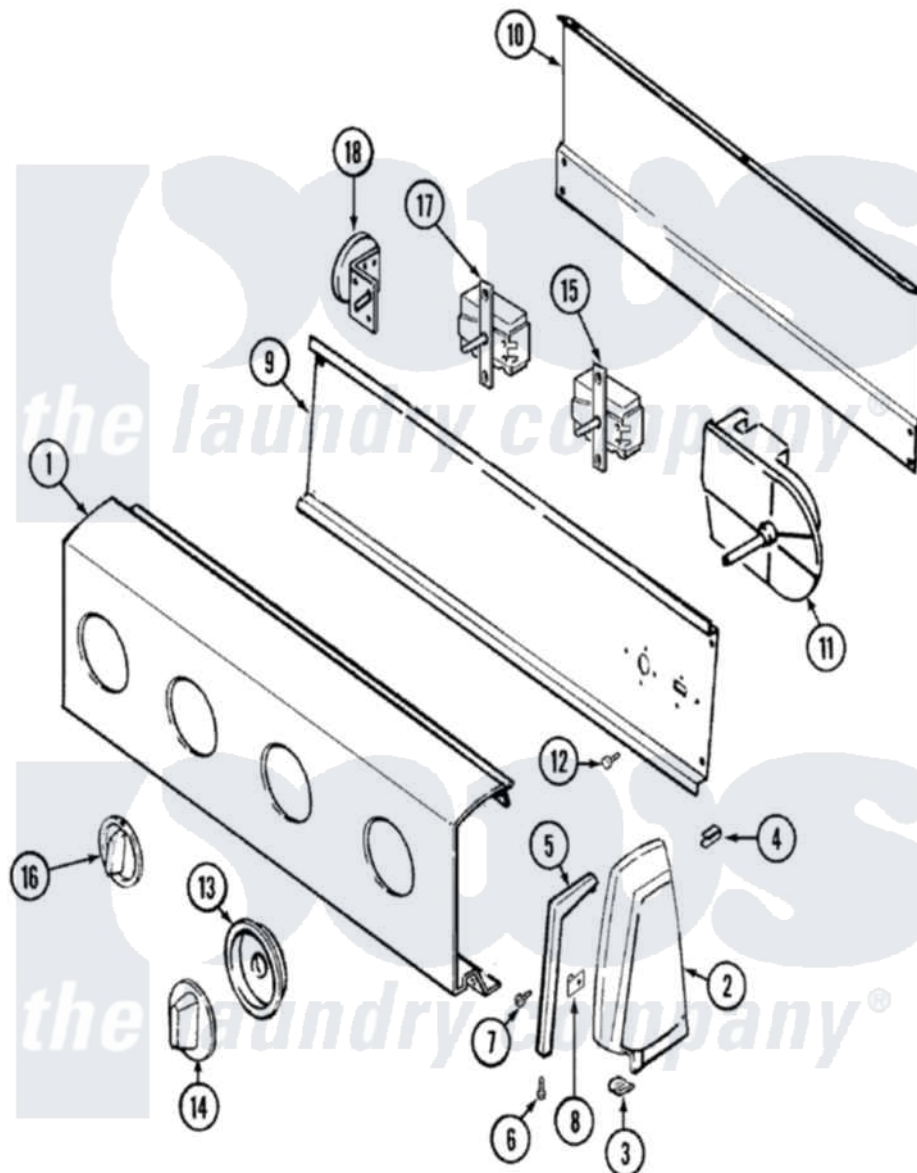

Magic Chef [Residential Magic Chef W20HV3S Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	35-3801			Control Panel
"	25-7793			Screw
2	35-2668	21001453		Cap- End
"	35-2669		Not Available	CAP, END (LT)(WHT)
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	53-1676		Shield, Control
10	25-7853	25-7933	Ring, Retaining
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	35-2688	21001460	Shield, Rear
11	35-2845		Timer
12	25-0205	216412	Screw, Bracket To Timer
13	35-2671	21001502	Skirt Ri
14	35-2672	21001237	Knob, Timer
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2839		Switch
16	35-2673	21001239	Knob, Selector
17	35-2193		Not Available SWITCH, ROTARY SPEED
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	35-3283	21001554	Switch, Water Level
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
19	35-3802		Not Available MANUAL, USE & CARE
"	16000329		Not Available GUIDE, QUICK REF. - MAGIC CHEF
20	35-0872-3		Not Available MANUAL, USE & CARE

