


# Magic Chef W20HY23 04 - CONTROL PANEL (W20H23T)

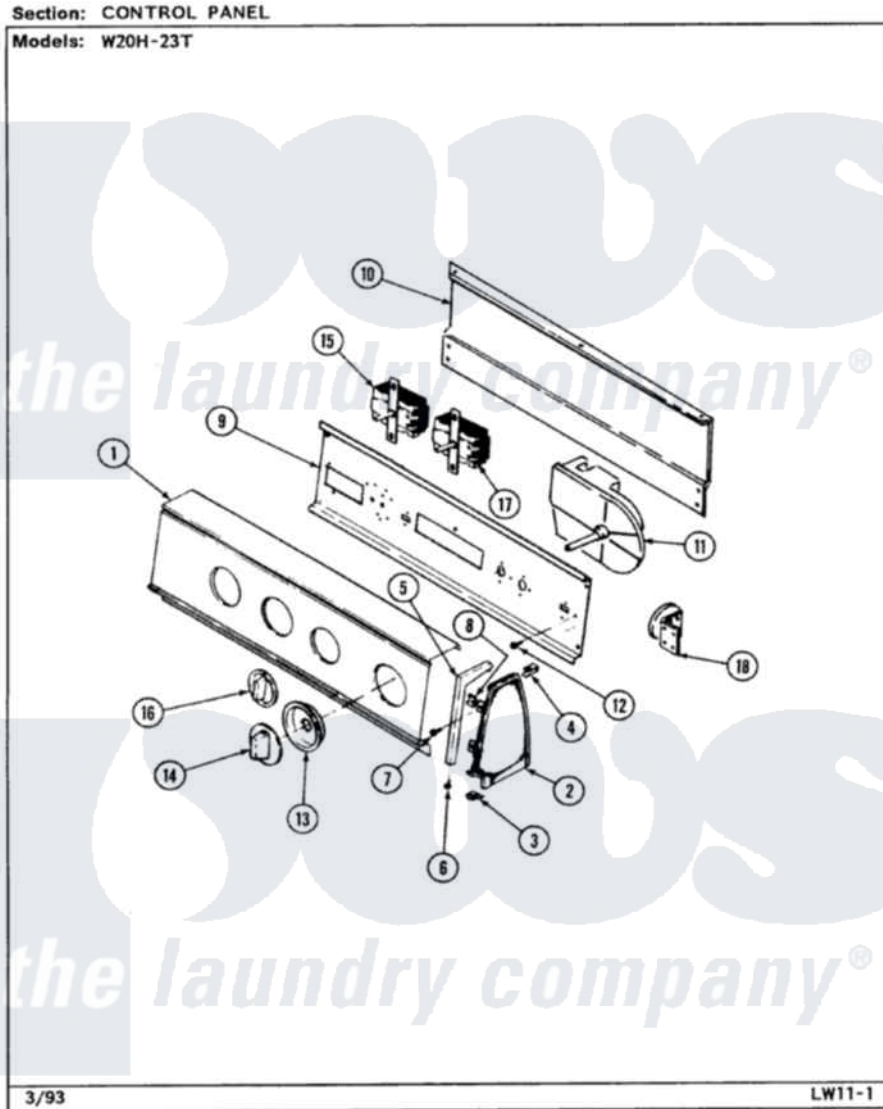

Magic Chef [Residential Magic Chef W20HY23 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL (W20H23T)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	<a href="#">25-7793</a>			Screw
"	<a href="#">35-3211</a>			Control Panel
2	35-2487	<a href="#">21001451</a>		Cap- End
"	35-2488	<a href="#">21001452</a>		Cap- End
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	<a href="#">25-7760</a>			Screw
7	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

8	<a href="#">25-7702</a>		Speedclip, End Cap To Control Panel
9	<a href="#">53-1676</a>		Shield, Control
10	<a href="#">25-3457</a>		Screw, Sems
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	<a href="#">21001460</a>	Shield, Rear
"	25-7853	<a href="#">25-7933</a>	Ring, Retaining
11	35-3690	Not Available	TIMER
12	25-0205	<a href="#">216412</a>	Screw, Bracket To Timer
13	35-2254	<a href="#">12500058</a>	Knob Ski
14	35-2486	<a href="#">12500058</a>	Knob Ski
15	<a href="#">35-0119</a>		Rotary Switch
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-2185	<a href="#">21001283</a>	Knob, Selector----Piq
17	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">35-3208</a>		Switch, Speed
18	35-3220	Not Available	MANUAL, USE & CARE
"	35-3691	<a href="#">21001554</a>	Switch, Water Level
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF

