


Magic Chef W20HY23 08 - TUB (REV. A-D)

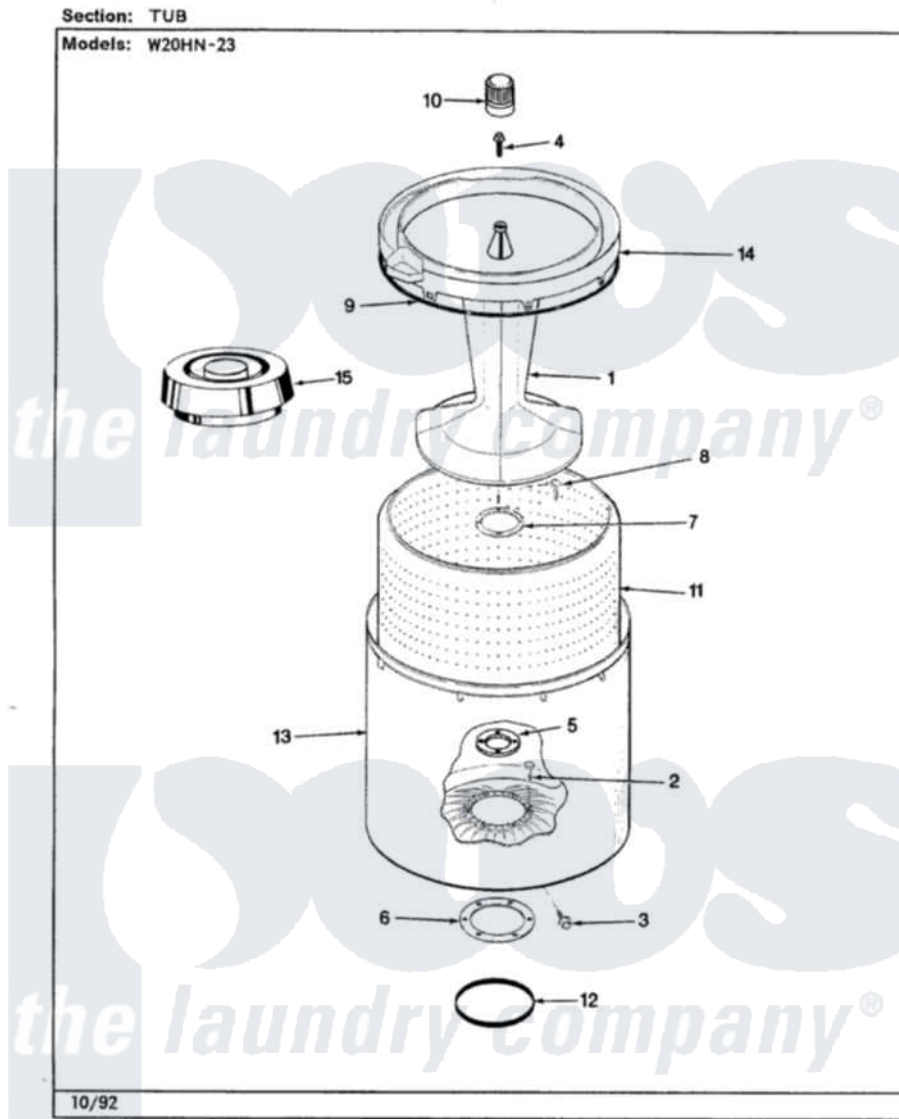

Magic Chef [Residential Magic Chef W20HY23 Washer Parts](#) Parts Diagram 08 - TUB (REV. A-D)
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|---------------|----------------------------------|
| 1 | 35-3580 | | | Agitator |
| " | 35-2717 | 35-3580 | | Agitator |
| 2 | 25-7947 | 21001063 | | Screw, Shoulder |
| 3 | 25-7953 | 22002933 | | Screw |
| 4 | 25-7948 | W10309247 | | Screw |
| 5 | 35-3685 | | | Gasket, Basket To Centerpost |
| " | 35-2980 | 35-3685 | | Gasket, Basket To Centerpost |
| 6 | 35-3686 | | | Gasket, Tub To Housing |
| " | 35-2979 | | | Gasket, Tub/Hsg |
| 7 | 35-3014 | | | Gasket And Reinf. Plate Assembly |
| 8 | 25-7783 | 4356852 | | Screw |
| 9 | 35-2328 | | | Seal, Tub Top |
| 10 | 35-2733 | | | Cap, Agitator |
| 11 | 35-3016 | | Not Available | BASKET ASSY |
| 12 | 35-2978 | | | Seal, Tub/Housing |
| 13 | 35-3700 | | | Tub Assembly |

| | | | |
|----|-------------------------|-------------------------|------------------|
| " | 35-2952 | 35-3700 | Tub Assembly |
| 14 | 35-2262 | Not Available | SHIELD, TUB TOP |
| " | 35-2034 | Not Available | TOP, TUB |
| " | 35-3578 | Not Available | TOP, TUB |
| 15 | 35-2550 | | Dispenser, Rinse |

