


## Magic Chef W20HY23 09 - TUB (W20H23T)

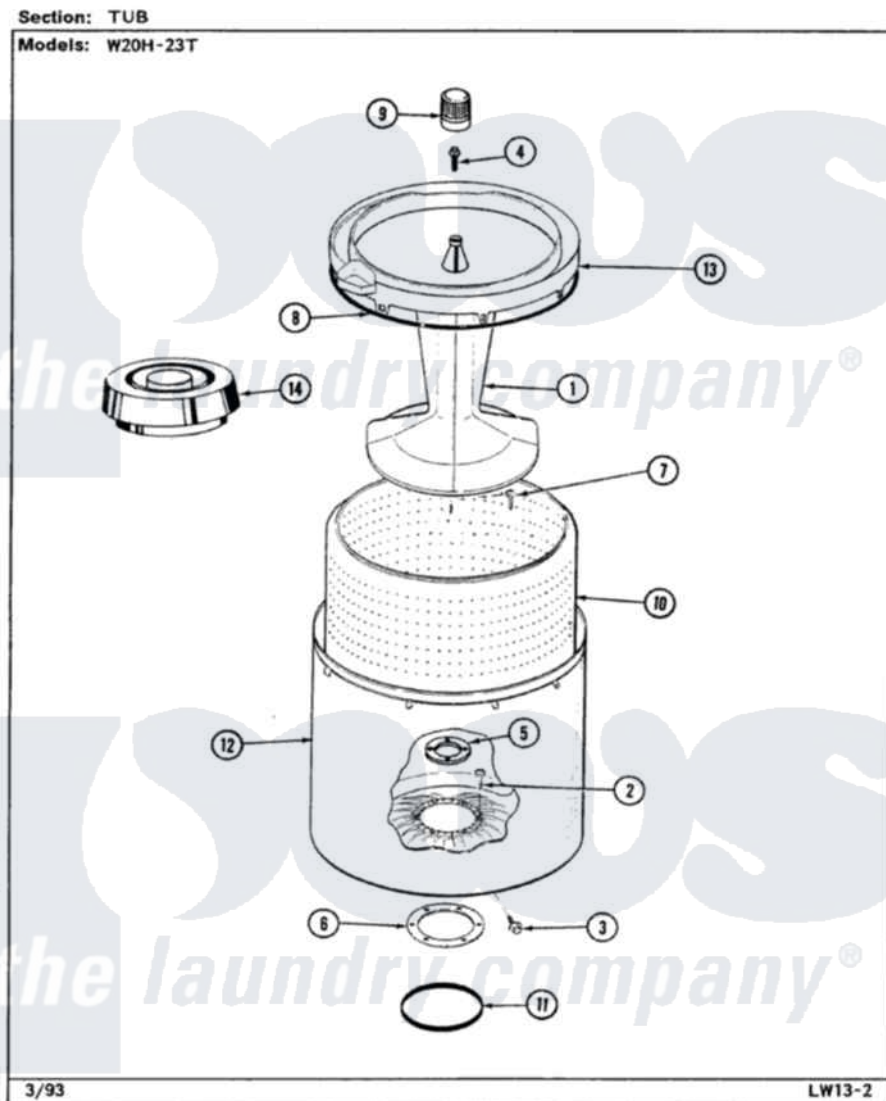

Magic Chef [Residential Magic Chef W20HY23 Washer Parts](#) Parts Diagram 09 - TUB (W20H23T)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">35-3580</a>			Agitator
2	25-7947	<a href="#">21001063</a>		Screw, Shoulder
3	25-7953	<a href="#">22002933</a>		Screw
4	25-7948	<a href="#">W10309247</a>		Screw
5	<a href="#">35-3685</a>			Gasket, Basket To Centerpost
6	<a href="#">35-3686</a>			Gasket, Tub To Housing
7	25-7965	<a href="#">3400504</a>		Screw
8	<a href="#">35-2328</a>			Seal, Tub Top
9	<a href="#">35-2733</a>			Cap, Agitator
10	35-3687		Not Available	BASKET, SPIN
11	<a href="#">35-2978</a>			Seal, Tub/Housing
12	<a href="#">35-3700</a>			Tub Assembly
13	35-3578		Not Available	TOP, TUB
"	35-2262		Not Available	SHIELD, TUB TOP
14	<a href="#">35-2550</a>			Dispenser, Rinse