


Magic Chef W20HY3S 04 - CONTROL PANEL (REV. A-E)(W20HN3S)

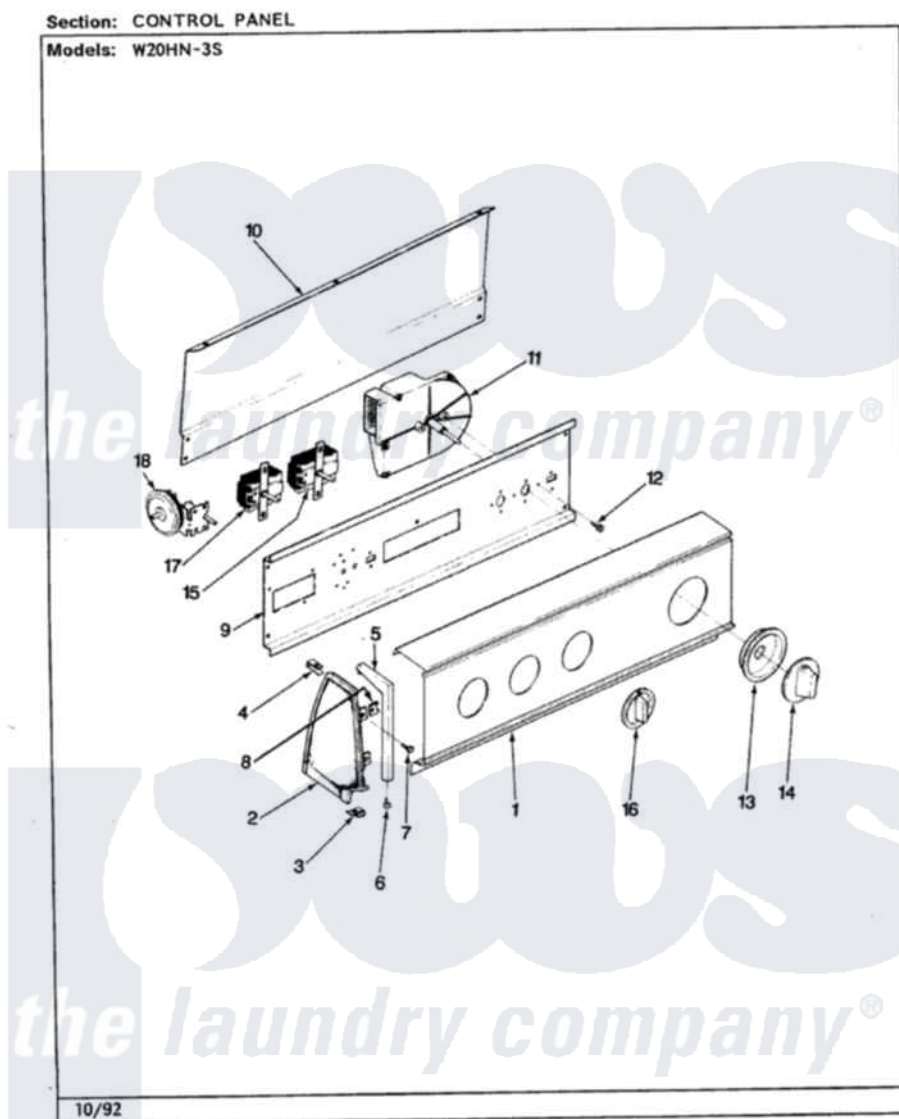

Magic Chef [Residential Magic Chef W20HY3S Washer Parts](#) Parts Diagram 04 - CONTROL PANEL (REV. A-E)(W20HN3S)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
"	35-2850			Control Panel
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	53-1676		Shield, Control
10	25-7853	25-7933	Ring, Retaining
"	35-2688	21001460	Shield, Rear
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
11	35-2845		Timer
12	25-0205	216412	Screw, Bracket To Timer
13	35-2254	12500058	Knob Ski
14	35-2486	12500058	Knob Ski
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2838	35-2839	Switch
16	35-2185	21001283	Knob, Selector----Piq
17	35-2619		Not Available SWITCH 4POS SPEED
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	35-3283	21001554	Switch, Water Level
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2871		Not Available MANUAL, USE & CARE
"	16000329		Not Available GUIDE, QUICK REF. - MAGIC CHEF
"	35-2801	21001554	Switch, Water Level

the laundry company[®]

the laundry company[®]