


Magic Chef W20HY4 02 - CONTROL PANEL

MAGIC CHEF

W20HN-4

BACKGUARD

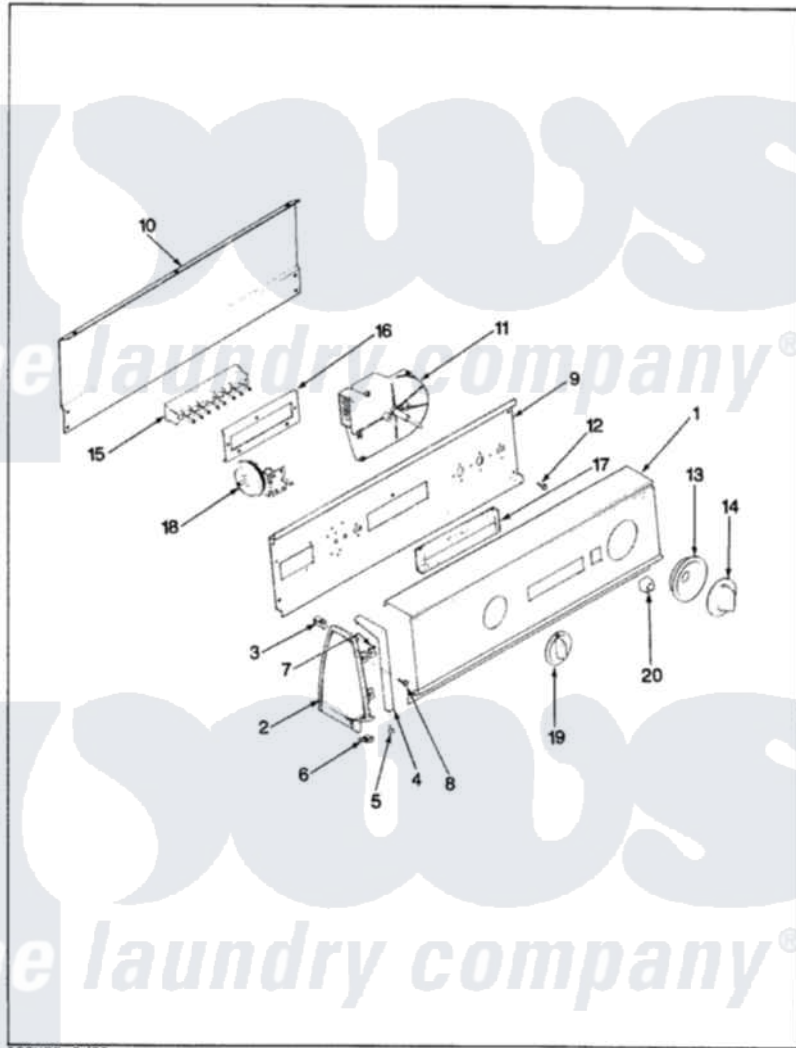

ISSUED 9/89

Magic Chef [Residential Magic Chef W20HY4 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	25-7649	910187		Screw
"	35-2167		Not Available	CONTROL PANEL
2	53-0265			LH Endcap
"	53-0264			RH Endcap
3	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
4	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
5	25-7760			Screw
6	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
7	25-7702			Speedclip, End Cap To Control Panel

8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-0267	Not Available	CONTROL SHIELD
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7583	Not Available	PLASTIC NUT
"	25-3457		Screw, Sems
"	53-0268	21001460	Shield, Rear
11	35-2211	Not Available	TIMER
12	25-0205	216412	Screw, Bracket To Timer
13	35-2254	12500058	Knob Ski
14	35-2187	12500058	Knob Ski
15	35-2197		Switch
16	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6620	Not Available	BRACKET
17	33-8540	Not Available	SWITCH PAD
18	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2145	21001554	Switch, Water Level
19	35-2185	21001283	Knob, Selector---Piq
20	35-0385		Pushbutton
"	35-0872	Not Available	MANUAL, USE & CARE

