


# Magic Chef W20HY4 05 - TUB

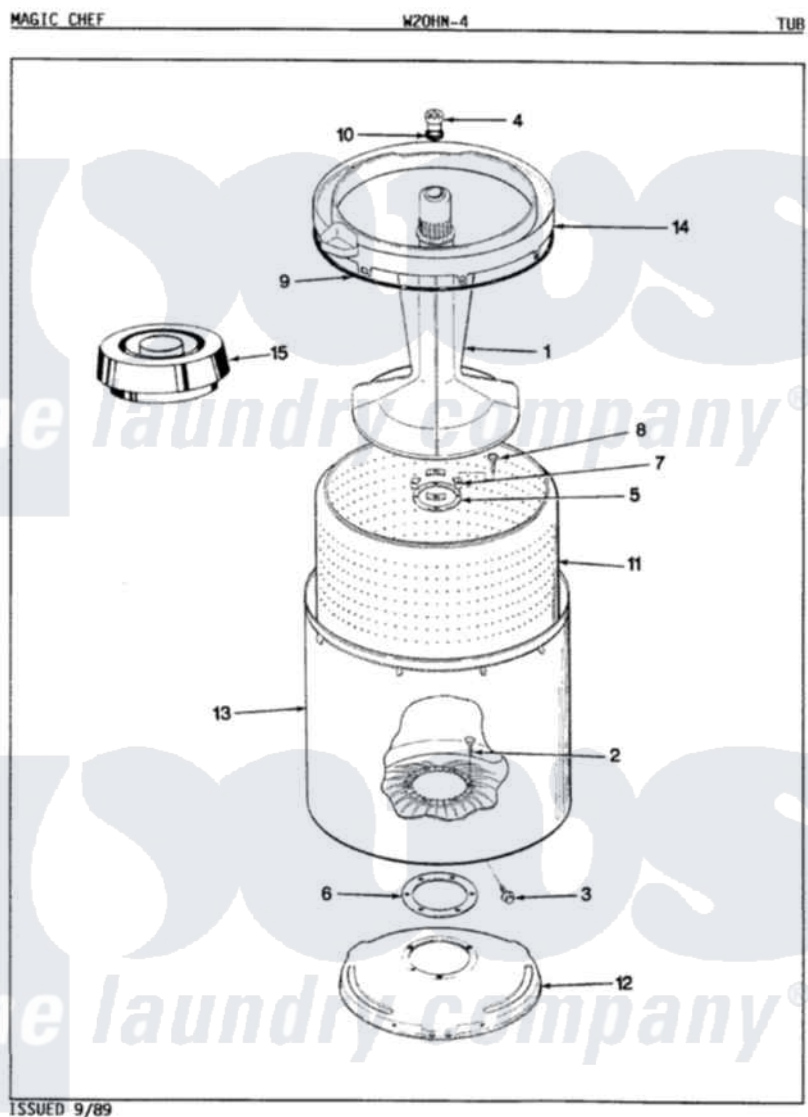

Magic Chef [Residential Magic Chef W20HY4 Washer Parts](#) Parts Diagram 05 - TUB  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2371	<a href="#">33-4352</a>		Agitator
2	35-2062	<a href="#">21001063</a>		Screw, Shoulder
3	25-7914	<a href="#">22002933</a>		Screw
4	<a href="#">33-6241</a>			Cap
5	<a href="#">33-8959</a>			Gasket
6	<a href="#">35-2061</a>			Gasket, Tub To Housing
7	33-8799		Not Available	REINF PLATE
8	25-7783	<a href="#">4356852</a>		Screw
9	<a href="#">35-2328</a>			Seal, Tub Top
10	<a href="#">25-7330</a>			Rubber Washer
11	35-2381		Not Available	BASKET ASSY-WHITE
12	<a href="#">35-2023</a>			Tub Support
13	<a href="#">35-2038</a>			Tub
14	35-2034		Not Available	TOP, TUB
"	35-2262		Not Available	SHIELD, TUB TOP
15	33-9827	<a href="#">35-2550</a>		Dispenser, Rinse