


# Magic Chef W20JA4C 01 - BACKGUARD (REV. E)

SECTION: BACKGUARD  
 MODEL: W20JN-4C

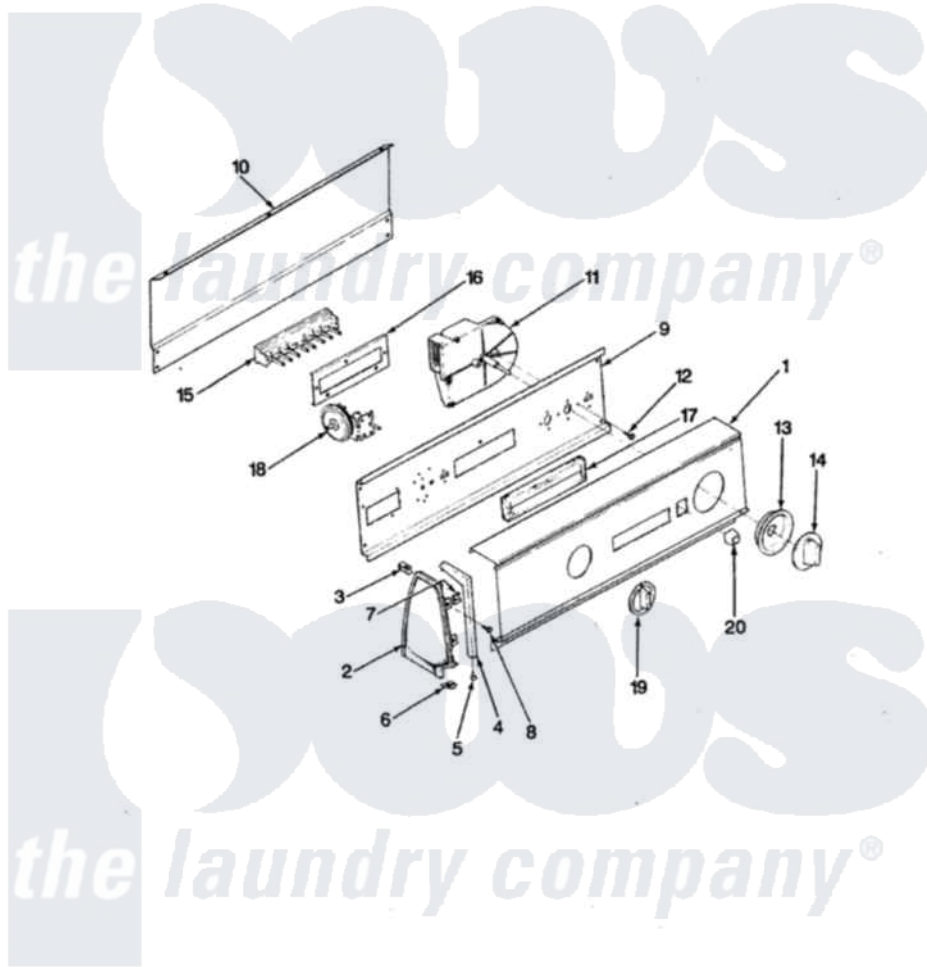

Issue Date: 5/90

Magic Chef [Residential Magic Chef W20JA4C Washer Parts](#) Parts Diagram 01 - BACKGUARD (REV. E)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	35-2167		Not Available	CONTROL PANEL
"	25-7649	<a href="#">910187</a>		Screw
2	35-2487	<a href="#">21001451</a>		Cap- End
"	35-2488	<a href="#">21001452</a>		Cap- End
3	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
4	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
5	<a href="#">25-7760</a>			Screw
6	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel

8	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1677	Not Available	CONTROL SHIELD
10	25-7583	Not Available	PLASTIC NUT
"	<a href="#">25-3457</a>		Screw, Sems
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	<a href="#">21001460</a>	Shield, Rear
11	35-2211	Not Available	TIMER
12	25-0205	<a href="#">216412</a>	Screw, Bracket To Timer
13	35-2254	<a href="#">12500058</a>	Knob Ski
14	35-2486	<a href="#">12500058</a>	Knob Ski
15	<a href="#">35-2197</a>		Switch
16	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6620	Not Available	BRACKET
17	33-8540	Not Available	SWITCH PAD
18	35-2145	<a href="#">21001554</a>	Switch, Water Level
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
19	35-2185	<a href="#">21001283</a>	Knob, Selector---Piq
20	35-2574-1	Not Available	MANUAL, USE & CARE
"	35-2588	Not Available	PUSHBUTTON - BLACK

