


Magic Chef W20JA4S 03 - CONTROL PANEL

SECTION: BACKGUARD
MODEL: W20JN-4S

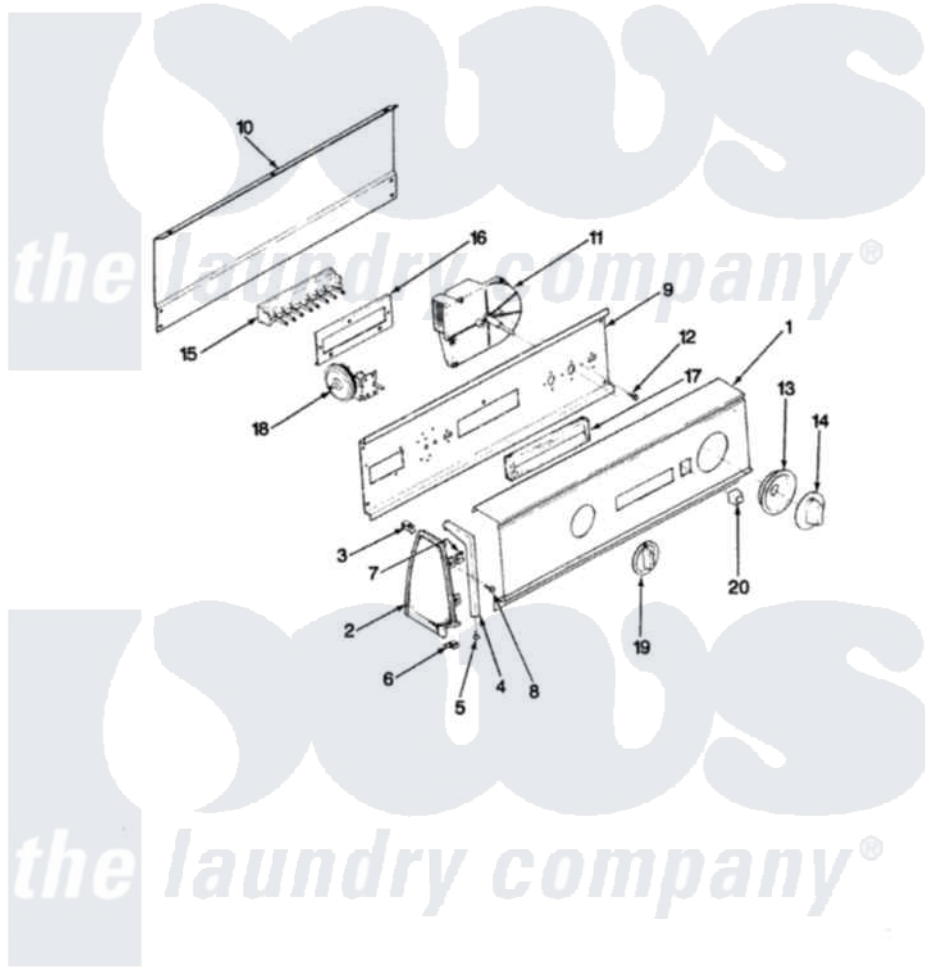

Issue Date: 4/91

Magic Chef [Residential Magic Chef W20JA4S Washer Parts](#) Parts Diagram 03 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	25-7649	910187		Screw
"	35-2849		Not Available	CONTROL PANEL
2	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
3	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
4	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
5	25-7760			Screw
6	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
7	25-7702			Speedclip, End Cap To Control Panel

8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1677	Not Available	CONTROL SHIELD
10	25-3457		Screw, Sems
"	35-2688	21001460	Shield, Rear
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7583	Not Available	PLASTIC NUT
11	35-2845		Timer
12	25-0205	216412	Screw, Bracket To Timer
13	35-2254	12500058	Knob Ski
14	35-2486	12500058	Knob Ski
15	35-2836	Not Available	SWITCH P.B. 8POS
16	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6620	Not Available	BRACKET
17	33-8540	Not Available	SWITCH PAD
18	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2801	21001554	Switch, Water Level
19	35-2185	21001283	Knob, Selector---Piq
20	35-2588	Not Available	PUSHBUTTON - BLACK
"	35-2872	Not Available	MANUAL, USE & CARE

