


# Magic Chef W20JA4S 04 - CONTROL PANEL (REV. A-E)(W20JN4S)

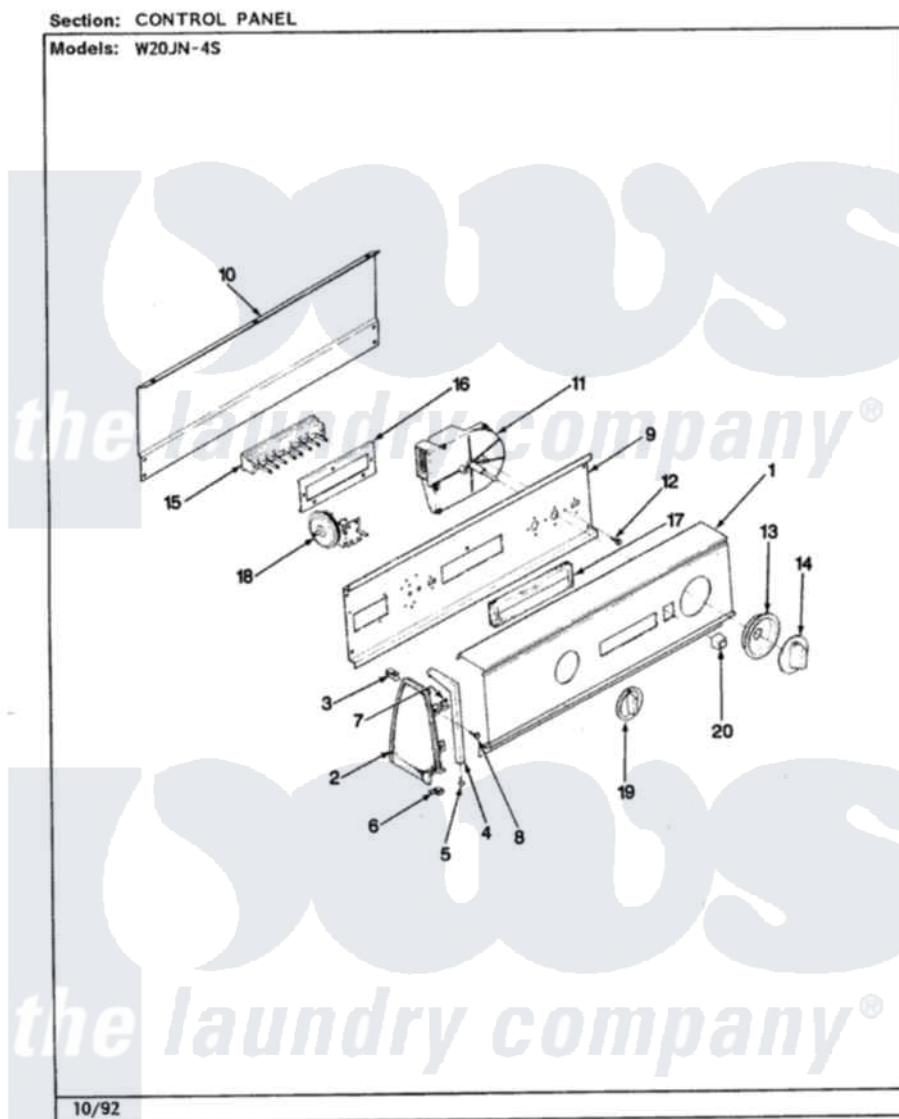

Magic Chef [Residential Magic Chef W20JA4S Washer Parts](#) Parts Diagram 04 - CONTROL PANEL (REV. A-E)(W20JN4S)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	25-7649	<a href="#">910187</a>		Screw
"	35-2849		Not Available	CONTROL PANEL
2	35-2488	<a href="#">21001452</a>		Cap- End
"	35-2487	<a href="#">21001451</a>		Cap- End
3	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
4	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
5	<a href="#">25-7760</a>			Screw
6	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel

8	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1677	Not Available	CONTROL SHIELD
10	35-2688	<a href="#">21001460</a>	Shield, Rear
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-3457</a>		Screw, Sems
"	25-7583	Not Available	PLASTIC NUT
11	<a href="#">35-2845</a>		Timer
12	25-0205	<a href="#">216412</a>	Screw, Bracket To Timer
13	35-2254	<a href="#">12500058</a>	Knob Ski
14	35-2486	<a href="#">12500058</a>	Knob Ski
15	35-2836	Not Available	SWITCH P.B. 8POS
16	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6620	Not Available	BRACKET
17	33-8540	Not Available	SWITCH PAD
18	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2801	<a href="#">21001554</a>	Switch, Water Level
"	35-3283	<a href="#">21001554</a>	Switch, Water Level
19	35-2185	<a href="#">21001283</a>	Knob, Selector---Piq
20	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF
"	35-2588	Not Available	PUSHBUTTON - BLACK
"	35-2872	Not Available	MANUAL, USE & CARE

