


# Magic Chef W20JA5 04 - CONTROL PANEL (W20JA5)(REV. E)

SECTION: BACKGUARD  
 MODEL: W20JA-5

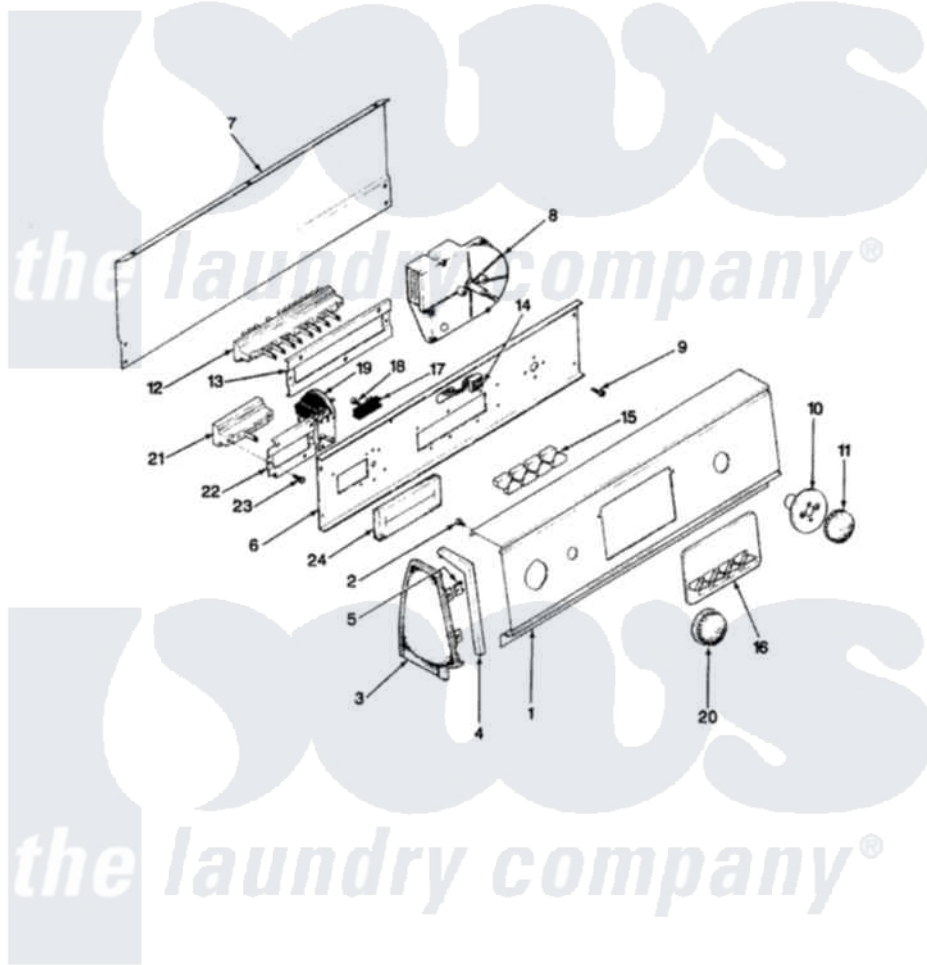

Issue Date: 8/90

Magic Chef [Residential Magic Chef W20JA5 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL (W20JA5)(REV. E)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2679		Not Available	CONTROL PANEL
2	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
3	25-7649	<a href="#">910187</a>		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	35-2487	<a href="#">21001451</a>		Cap- End
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
"	35-2488	<a href="#">21001452</a>		Cap- End
4	<a href="#">25-7760</a>			Screw
"	53-0277		Not Available	TRIM, END CAP (RT)

"	53-0278		Not Available	TRIM, END CAP (LT)
5	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
6	35-2680		Not Available	CONTROL SHIELD
7	<a href="#">25-3457</a>			Screw, Sems
"	35-2688	<a href="#">21001460</a>		Shield, Rear
"	25-7583		Not Available	PLASTIC NUT
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
8	35-2211		Not Available	TIMER
9	25-0205	<a href="#">216412</a>		Screw, Bracket To Timer
10	35-2254	<a href="#">12500058</a>		Knob Ski
11	35-2486	<a href="#">12500058</a>		Knob Ski
12	<a href="#">35-2198</a>			Switch
13	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6623		Not Available	BRACKET
14	35-0691-04		Not Available	SIGNAL LIGHT
"	35-0691-05		Not Available	LIGHT ASSY
"	35-0691-01		Not Available	SIGNAL LIGHT
"	35-0691-06		Not Available	LIGHT ASSY
15	<a href="#">35-2163-04</a>			Pushbutton
"	<a href="#">35-2163-01</a>			Pushbutton
"	<a href="#">35-2163-03</a>			Pushbutton
"	<a href="#">35-2163-05</a>			Pushbutton
"	<a href="#">35-2163-06</a>			Pushbutton
"	<a href="#">35-2163-07</a>			Pushbutton
"	<a href="#">35-2163-08</a>			Pushbutton
"	<a href="#">35-2163-02</a>			Pushbutton
16	25-7882		Not Available	PALNUT
"	35-0685		Not Available	PB BEZEL
"	35-0690		Not Available	LENS
"	35-2164		Not Available	LENS
17	35-2257	<a href="#">7401P037-60</a>		Block, Terminal
18	25-7649	<a href="#">910187</a>		Screw
19	35-2145	<a href="#">21001554</a>		Switch, Water Level
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
20	35-2475		Not Available	SELECTOR KNOB
21	35-0688		Not Available	PB SWITCH
22	33-6621		Not Available	BRACKET, SWITCH
23	25-7712		Not Available	SCREW
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
24	33-8541		Not Available	SWITCH PAD
"	35-2666		Not Available	MANUAL, U&C INSERT