


# Magic Chef W20JA5SC 03 - EXTERIOR (REV. A-D)

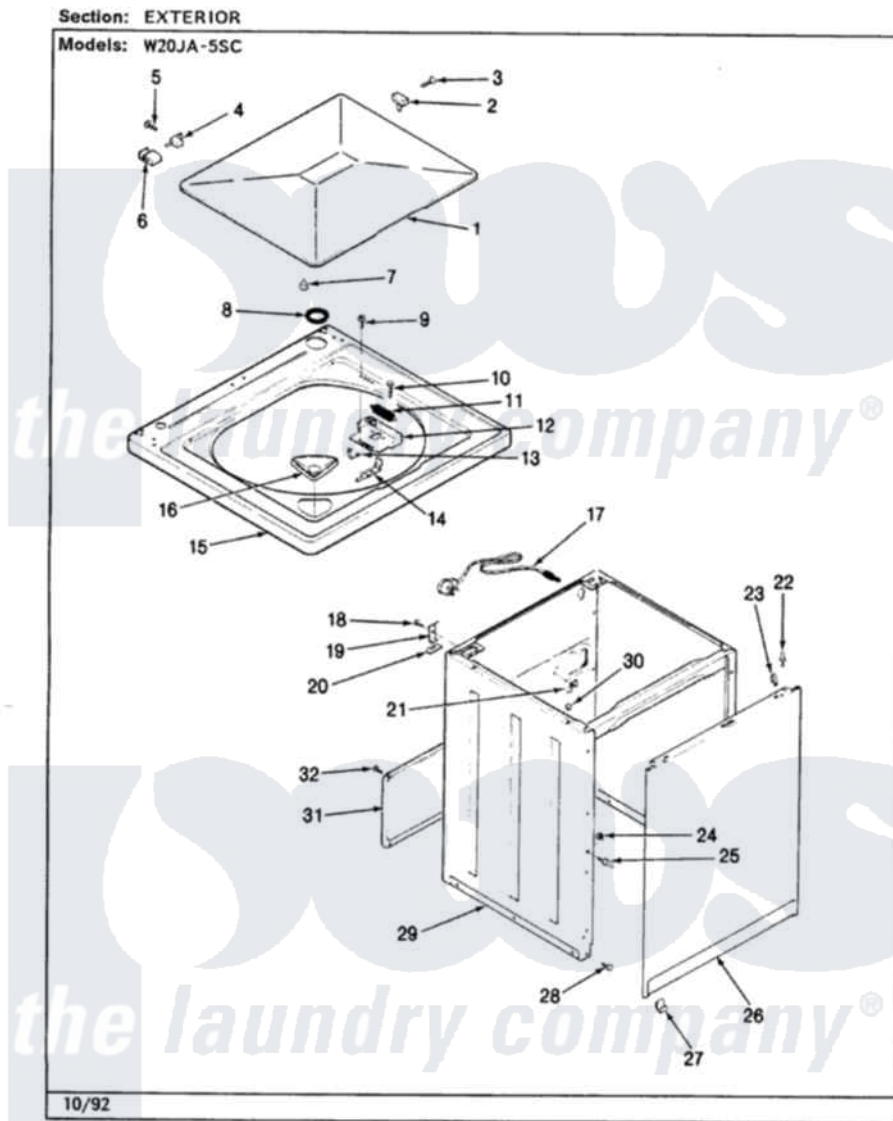

Magic Chef [Residential Magic Chef W20JA5SC Washer Parts](#) Parts Diagram 03 - EXTERIOR (REV. A-D)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-3062-24		Not Available	CLOTHES DOOR
2	<a href="#">25-7436</a>			Nylite Washer
"	<a href="#">43-0057</a>			Actuator, Door Switch
3	<a href="#">25-7438</a>			Screw
4	25-7086	<a href="#">Y0308025</a>		Washer, Stainless Steel
"	<a href="#">35-2045</a>			Pin, Hinge
5	<a href="#">25-7893</a>			Screw
6	<a href="#">35-2044</a>			Hinge, Lid
7	<a href="#">35-0581</a>			Bumper, Door
8	<a href="#">35-2063</a>			Bushing, Insulator
9	25-7463	<a href="#">7101P012-60</a>		Screw
10	25-7437	<a href="#">40040701</a>		Screw, Tapping No.6b-20
11	35-2814	<a href="#">12001187</a>		Kit, Lid Switch Assembly
12	35-2795	<a href="#">12001187</a>		Kit, Lid Switch Assembly
13	<a href="#">25-7878</a>			Clip
14	35-2805	<a href="#">12001187</a>		Kit, Lid Switch Assembly

15	35-2739-24		Not Available	TOP, CABINET (ALM)
16	35-2731	<a href="#">21001167</a>		Dispenser, Bleach
17	35-0680		Not Available	CORD, POWER
18	<a href="#">25-7893</a>			Screw
19	33-7450	<a href="#">35-2846</a>		Hinge, Cabinet Top
20	<a href="#">33-0930</a>			Pad, Top Hinge
21	25-7796	<a href="#">596669</a>		Clamp, Manifold
22	<a href="#">53-0643</a>			Pin, Locator
23	<a href="#">25-7220</a>			Clip, Cabinet Top
24	25-0224	<a href="#">3400029</a>		Nut, Adapter Plate
25	<a href="#">53-0643</a>			Pin, Locator
26	<a href="#">35-2084-24</a>			Panel, Front
27	<a href="#">53-0120</a>			Clip, Front Panel
28	<a href="#">33-2653</a>			Bumper, Cabinet
29	35-2106-24	<a href="#">12001802</a>		Kit, Cabinet/Rear Shield
30	<a href="#">33-2653</a>			Bumper, Cabinet
31	35-2108	<a href="#">21001871</a>		Cabinet
32	25-7733	<a href="#">681414</a>		Screw, 10AB X 1/2

