


Magic Chef W20JN4C 01 - BACKGUARD (REV. E)

SECTION: BACKGUARD
MODEL: W20JN-4C

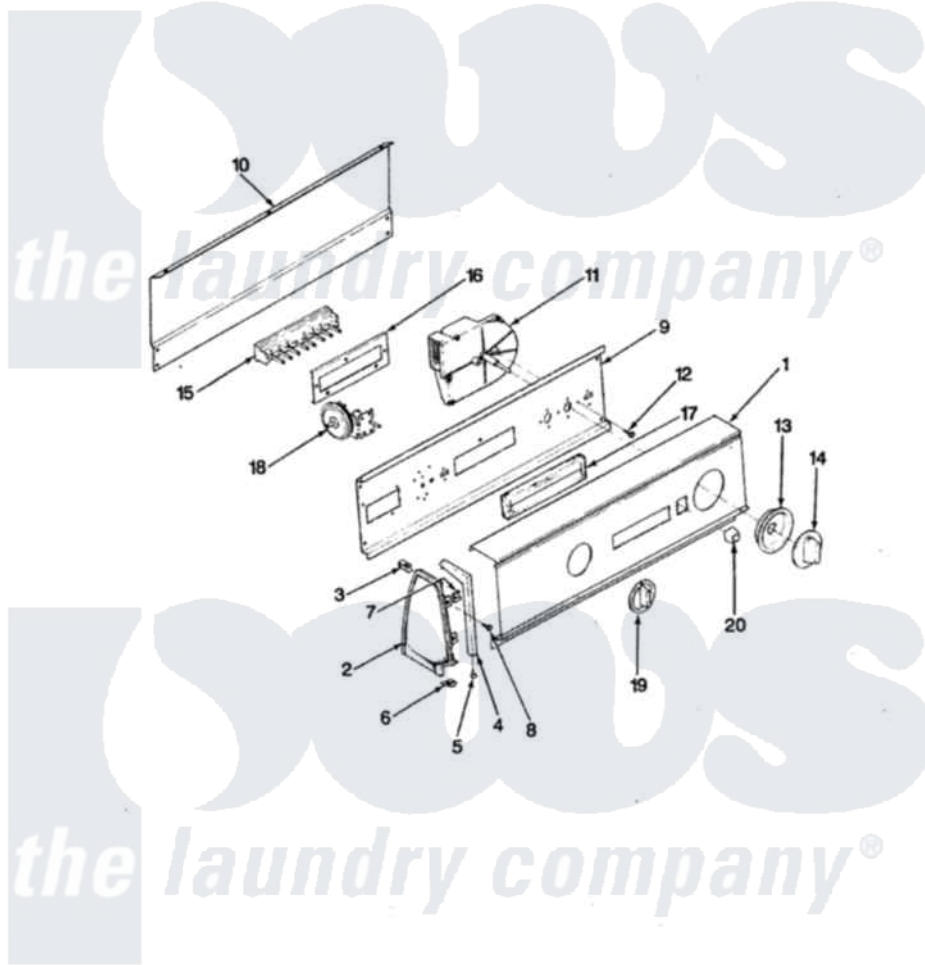

Issue Date: 5/90

Magic Chef [Residential Magic Chef W20JN4C Washer Parts](#) Parts Diagram 01 - BACKGUARD (REV. E)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	35-2167		Not Available	CONTROL PANEL
"	25-7649	910187		Screw
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
4	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
5	25-7760			Screw
6	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT
7	25-7702			Speedclip, End Cap To Control Panel

8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1677	Not Available	CONTROL SHIELD
10	25-7583	Not Available	PLASTIC NUT
"	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460	Shield, Rear
11	35-2211	Not Available	TIMER
12	25-0205	216412	Screw, Bracket To Timer
13	35-2254	12500058	Knob Ski
14	35-2486	12500058	Knob Ski
15	35-2197		Switch
16	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6620	Not Available	BRACKET
17	33-8540	Not Available	SWITCH PAD
18	35-2145	21001554	Switch, Water Level
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
19	35-2185	21001283	Knob, Selector----Piq
20	35-2574-1	Not Available	MANUAL, USE & CARE
"	35-2588	Not Available	PUSHBUTTON - BLACK