


# Magic Chef W20JN4S 10 - TUB (W20JN4S)(REV. A-E)

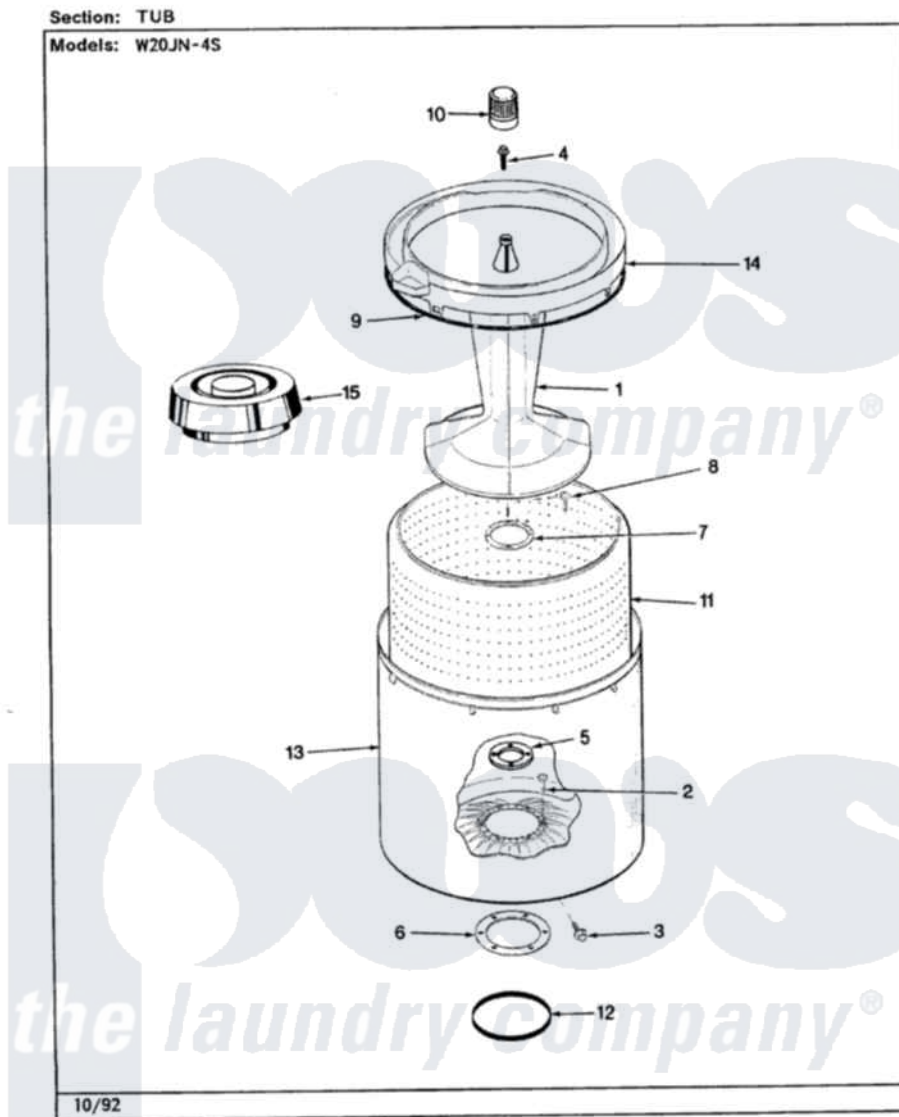

Magic Chef [Residential Magic Chef W20JN4S Washer Parts](#) Parts Diagram 10 - TUB (W20JN4S)(REV. A-E)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">35-3580</a>			Agitator
"	35-2717	<a href="#">35-3580</a>		Agitator
2	25-7947	<a href="#">21001063</a>		Screw, Shoulder
3	25-7953	<a href="#">22002933</a>		Screw
4	25-7948	<a href="#">W10309247</a>		Screw
5	<a href="#">35-3685</a>			Gasket, Basket To Centerpost
"	35-2980	<a href="#">35-3685</a>		Gasket, Basket To Centerpost
6	<a href="#">35-3686</a>			Gasket, Tub To Housing
"	<a href="#">35-2979</a>			Gasket, Tub/Hsg
7	<a href="#">35-3014</a>			Gasket And Reinf. Plate Assembly
8	25-7783	<a href="#">4356852</a>		Screw
9	<a href="#">35-2328</a>			Seal, Tub Top
10	<a href="#">35-2733</a>			Cap, Agitator
11	35-3016		Not Available	BASKET ASSY
12	<a href="#">35-2978</a>			Seal, Tub/Housing
13	<a href="#">35-3700</a>			Tub Assembly

"	35-2952	<a href="#">35-3700</a>	Tub Assembly
14	35-2262	Not Available	SHIELD, TUB TOP
"	35-2034	Not Available	TOP, TUB
"	35-3578	Not Available	TOP, TUB
15	<a href="#">35-2550</a>		Dispenser, Rinse

