


Magic Chef W20JN5 02 - CONTROL PANEL (W20JN5)(REV. A-D)

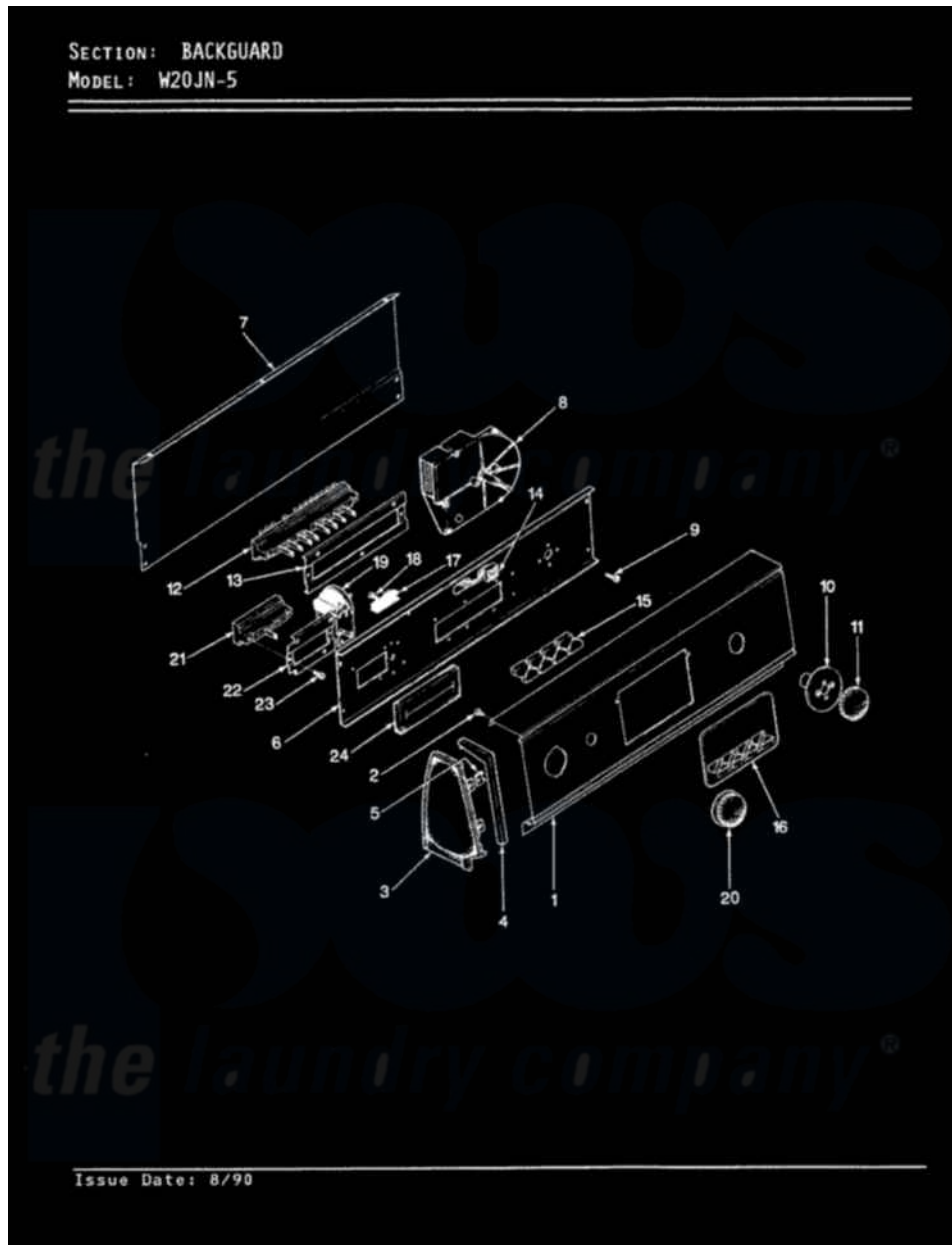

Magic Chef [Residential Magic Chef W20JN5 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL (W20JN5)(REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2653		Not Available	CONTROL PANEL
2	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
3	25-7649	910187		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7852			Speedclip, Rr Shld To End Cap
"	25-7851			Speedclip, End Cap To Top
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7697	25-2219		Screw
"	25-7435	33002917		Screw, No.10-16
"	35-2668	21001453		Cap- End
"	35-2669		Not Available	CAP, END (LT)(WHT)
4	25-7760			Screw
"	53-0277		Not Available	TRIM, END CAP (RT)

"	53-0278		Not Available	TRIM, END CAP (LT)
5	25-7702			Speedclip, End Cap To Control Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	35-2680		Not Available	CONTROL SHIELD
7	25-3457			Screw, Sems
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460		Shield, Rear
"	25-7583		Not Available	PLASTIC NUT
8	35-2211		Not Available	TIMER
9	25-0205	216412		Screw, Bracket To Timer
10	35-2671	21001502		Skirt Ri
11	35-2672	21001237		Knob, Timer
12	35-2198			Switch
13	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6623		Not Available	BRACKET
14	35-0691-04		Not Available	SIGNAL LIGHT
"	35-0691-01		Not Available	SIGNAL LIGHT
"	35-0691-05		Not Available	LIGHT ASSY
"	35-0691-06		Not Available	LIGHT ASSY
15	35-2656-01		Not Available	PUSHBUTTON (SUPER SCRUB)
"	35-2656-08		Not Available	PUSHBUTTON (KNITS & BLANKETS)
"	35-2656-07		Not Available	PUSHBUTTON (DELICATE)
"	35-2656-06		Not Available	PUSHBUTTON (ENERGY SAVER)
"	35-2656-05		Not Available	PUSHBUTTON (NON COLOR FAST)
"	35-2656-04		Not Available	PUSHBUTTON (SUPER SCRUB)
"	35-2656-03		Not Available	PUSHBUTTON (ENERGY SAVER)
"	35-2656-02		Not Available	PUSHBUTTON (NON COLOR FAST)
16	35-2655		Not Available	BEZEL - P.B.
"	35-0690		Not Available	LENS
"	35-2164		Not Available	LENS
"	25-7882		Not Available	PALNUT
17	35-2257	7401P037-60		Block, Terminal
18	25-7649	910187		Screw
19	35-2145	21001554		Switch, Water Level
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
20	35-2676		Not Available	KNOB, SELECTOR
21	35-0688		Not Available	PB SWITCH
22	33-6621		Not Available	BRACKET, SWITCH
23	25-7712		Not Available	SCREW
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
24	33-8541		Not Available	SWITCH PAD
"	35-2666		Not Available	MANUAL, U&C INSERT