


Magic Chef W20JN5 03 - CONTROL PANEL (W20JN5)(REV. E)

SECTION: BACKGUARD
MODEL: W20JN-5

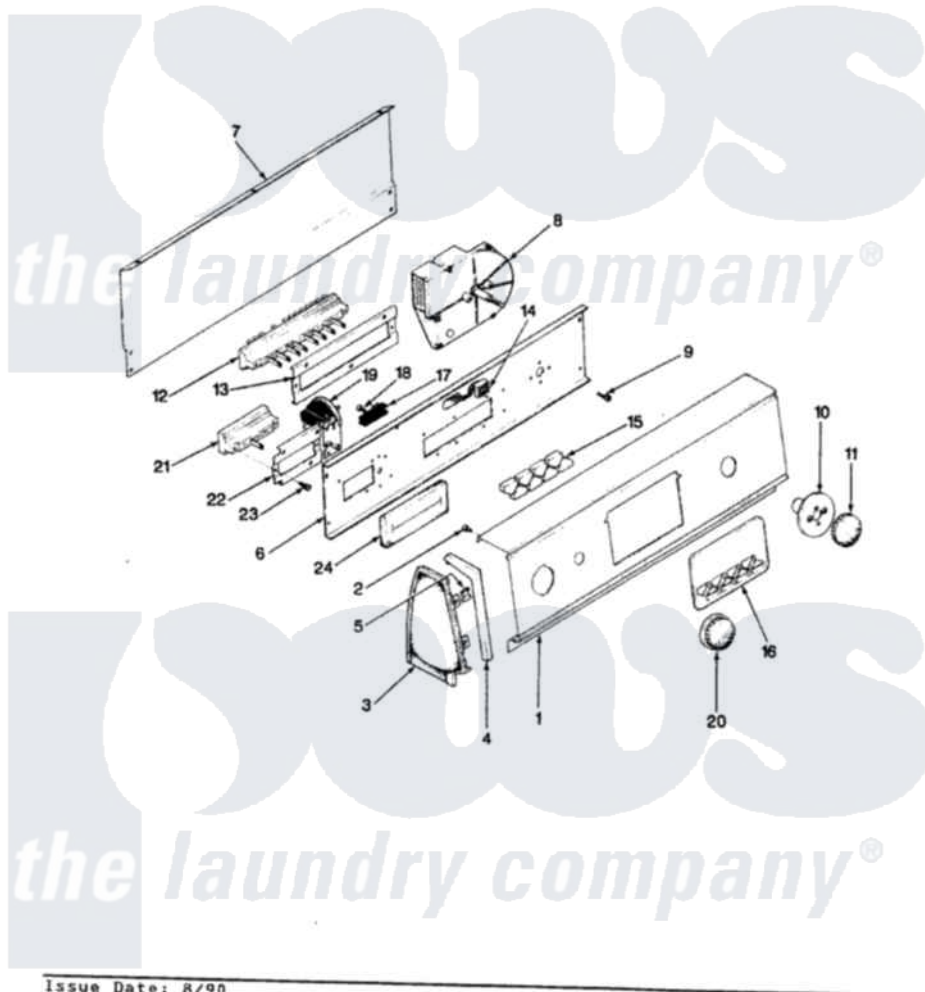

Issue Date: 8/90

Magic Chef Residential Magic Chef W20JN5 Washer Parts Parts Diagram 03 - CONTROL PANEL (W20JN5)(REV. E)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2653		Not Available	CONTROL PANEL
2	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
3	25-7649	910187		Screw
"	25-7852			Speedclip, Rr Shld To End Cap
"	25-7851			Speedclip, End Cap To Top
"	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7435	33002917		Screw, No.10-16
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2668	21001453		Cap- End
"	35-2669		Not Available	CAP, END (LT)(WHT)

4	25-7760		Screw
"	53-0278	Not Available	TRIM, END CAP (LT)
"	53-0277	Not Available	TRIM, END CAP (RT)
5	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7702		Speedclip, End Cap To Control Panel
6	35-2680	Not Available	CONTROL SHIELD
7	25-3457		Screw, Sems
"	25-7583	Not Available	PLASTIC NUT
"	35-2688	21001460	Shield, Rear
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
8	35-2211	Not Available	TIMER
9	25-0205	216412	Screw, Bracket To Timer
10	35-2671	21001502	Skirt Ri
11	35-2672	21001237	Knob, Timer
12	35-2198		Switch
13	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6623	Not Available	BRACKET
14	35-0691-05	Not Available	LIGHT ASSY
"	35-0691-04	Not Available	SIGNAL LIGHT
"	35-0691-06	Not Available	LIGHT ASSY
"	35-0691-01	Not Available	SIGNAL LIGHT
15	35-2656-01	Not Available	PUSHBUTTON (SUPER SCRUB)
"	35-2656-06	Not Available	PUSHBUTTON (ENERGY SAVER)
"	35-2656-05	Not Available	PUSHBUTTON (NON COLOR FAST)
"	35-2656-04	Not Available	PUSHBUTTON (SUPER SCRUB)
"	35-2656-03	Not Available	PUSHBUTTON (ENERGY SAVER)
"	35-2656-02	Not Available	PUSHBUTTON (NON COLOR FAST)
16	35-0690	Not Available	LENS
"	35-2655	Not Available	BEZEL - P.B.
"	35-2164	Not Available	LENS
"	25-7882	Not Available	PALNUT
17	35-2257	7401P037-60	Block, Terminal
18	25-7649	910187	Screw
19	35-2145	21001554	Switch, Water Level
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
20	35-2676	Not Available	KNOB, SELECTOR
21	35-0688	Not Available	PB SWITCH
22	33-6621	Not Available	BRACKET, SWITCH
23	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7712	Not Available	SCREW
24	35-2666	Not Available	MANUAL, U&C INSERT
"	33-8541	Not Available	SWITCH PAD
35	35-2656-07	Not Available	PUSHBUTTON (DELICATE)
"	35-2656-08	Not Available	PUSHBUTTON (KNITS & BLANKETS)