


Magic Chef W20JN5SC 02 - CONTROL PANEL (REV. A-D)(W20JN5SC)

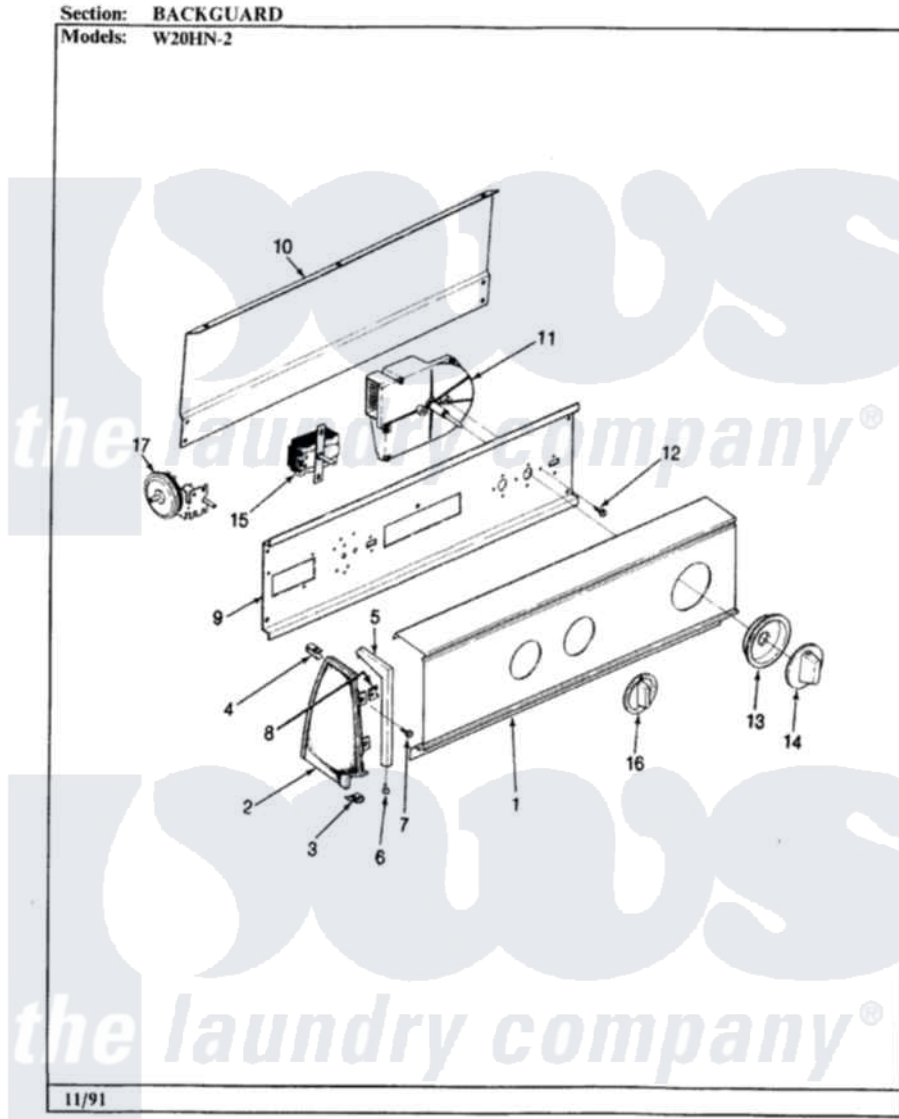

Magic Chef [Residential Magic Chef W20JN5SC Washer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. A-D)(W20JN5SC)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2847			Control Panel
2	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
3	25-7851			Speedclip, End Cap To Top
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2669		Not Available	CAP, END (LT)(WHT)
"	35-2668	21001453		Cap- End
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7649	910187		Screw
"	25-7697	25-2219		Screw
4	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
"	25-7760			Screw
5	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

"	25-7702		Speedclip, End Cap To Control Panel
6	35-2680	Not Available	CONTROL SHIELD
7	25-7583	Not Available	PLASTIC NUT
"	35-2688	21001460	Shield, Rear
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
8	35-2845		Timer
9	25-0205	216412	Screw, Bracket To Timer
10	35-2671	21001502	Skirt Ri
11	35-2672	21001237	Knob, Timer
12	35-2837		Switch P.b. 8pos
13	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6623	Not Available	BRACKET
14	35-0691-01	Not Available	SIGNAL LIGHT
"	35-0691-08	Not Available	LIGHT - COLD/RINSE
"	35-0691-04	Not Available	SIGNAL LIGHT
"	35-0691-03	Not Available	SIGNAL LIGHT
15	35-2656-09	Not Available	PUSHBUTTON - MIX LOAD
"	35-2656-13	Not Available	PUSHBUTTON (COLORFAST)
"	35-2656-12	Not Available	PUSHBUTTON (WHITES)
"	35-2656-11	Not Available	PUSHBUTTON STAINCLEANER II
"	35-2656-10	Not Available	PUSHBUTTON - STAINCLEANER I
"	35-2656-03	Not Available	PUSHBUTTON (ENERGY SAVER)
"	53-1640-04	Not Available	PUSHBUTTON (DELICATE)
"	35-2656-02	Not Available	PUSHBUTTON (NON COLOR FAST)
16	35-2853	Not Available	LENS
"	35-0690	Not Available	LENS
"	25-7882	Not Available	PALNUT
"	35-2655	Not Available	BEZEL - P.B.
17	35-2257	7401P037-60	Block, Terminal
18	25-7649	910187	Screw
19	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2801	21001554	Switch, Water Level
"	35-3283	21001554	Switch, Water Level
20	35-2676	Not Available	KNOB, SELECTOR
22	33-6621	Not Available	BRACKET, SWITCH
23	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7712	Not Available	SCREW
"	35-3289	Not Available	MANUAL, USE & CARE