


Magic Chef W20JN5SC 03 - EXTERIOR (W20JN5SC)(REV. A-D)

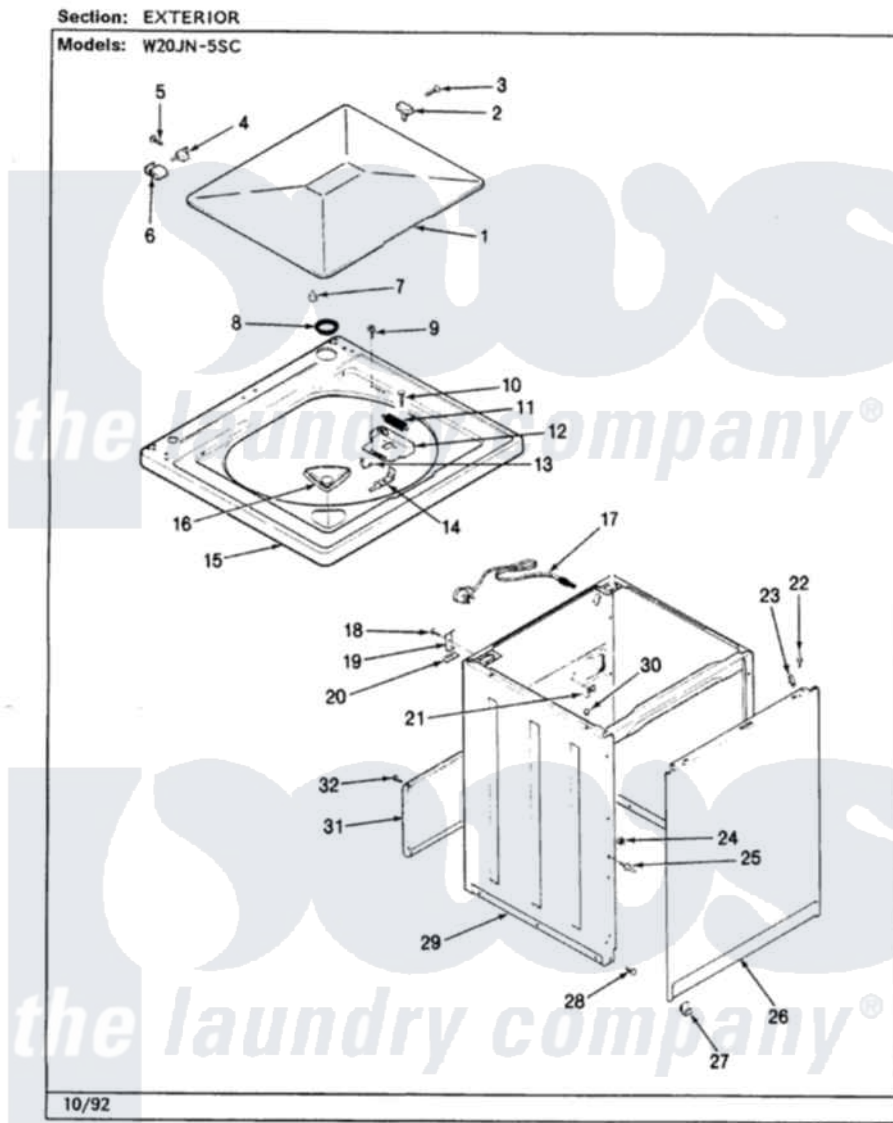

Magic Chef [Residential Magic Chef W20JN5SC Washer Parts](#) Parts Diagram 03 - EXTERIOR (W20JN5SC)(REV. A-D)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	35-3062	35-2026		Lid
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	25-7086	Y0308025		Washer, Stainless Steel
"	35-2045			Pin, Hinge
5	25-7893			Screw
6	35-2044			Hinge, Lid
7	35-0581			Bumper, Door
8	35-2063			Bushing, Insulator
9	25-7463	7101P012-60		Screw
10	25-7437	40040701		Screw, Tapping No.6b-20
11	35-2814	12001187		Kit, Lid Switch Assembly
12	35-2795	12001187		Kit, Lid Switch Assembly
13	25-7878			Clip
14	35-2805	12001187		Kit, Lid Switch Assembly

15	35-2739		Top, Cabinet
16	35-2731	21001167	Dispenser, Bleach
17	35-0680		Not Available
18	25-7893		CORD, POWER
19	33-7450	35-2846	Screw
20	33-0930		Hinge, Cabinet Top
21	25-7796	596669	Pad, Top Hinge
22	53-0643		Clamp, Manifold
23	25-7220		Pin, Locator
24	25-0224	3400029	Clip, Cabinet Top
25	53-0643		Nut, Adapter Plate
26	35-2084		Pin, Locator
27	53-0120		Panel, Front
28	33-2653		Clip, Front Panel
29	35-2106	21001871	Bumper, Cabinet
30	33-2653		Cabinet
31	35-2108	21001871	Bumper, Cabinet
32	25-7733	681414	Cabinet
			Screw, 10AB X 1/2

