


Magic Chef W20JN5SC 05 - TUB (W20JN5SC)(REV. A-D)

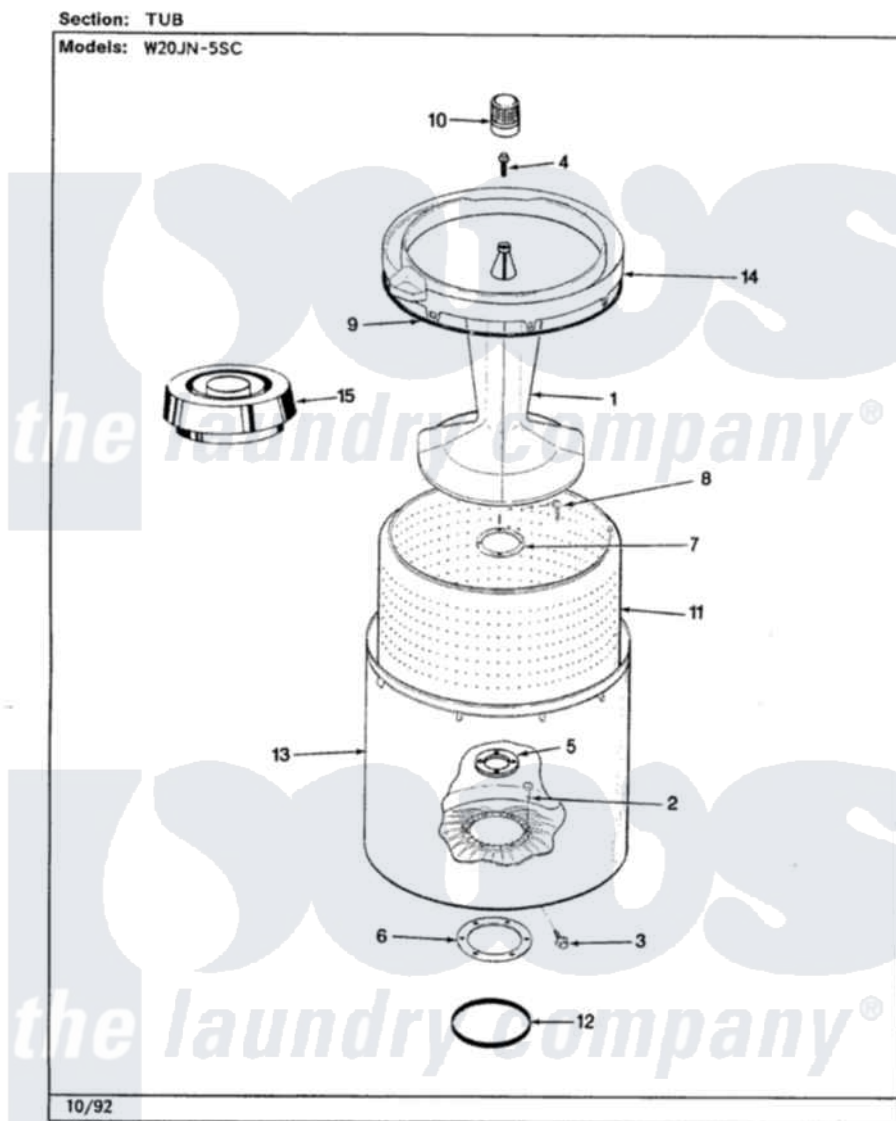

Magic Chef [Residential Magic Chef W20JN5SC Washer Parts](#) Parts Diagram 05 - TUB (W20JN5SC)(REV. A-D)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-3580			Agitator
"	35-2717	35-3580		Agitator
2	25-7947	21001063		Screw, Shoulder
3	25-7953	22002933		Screw
4	25-7948	W10309247		Screw
5	35-3685			Gasket, Basket To Centerpost
"	35-2980	35-3685		Gasket, Basket To Centerpost
6	35-3686			Gasket, Tub To Housing
"	35-2979			Gasket, Tub/Hsg
7	35-3014			Gasket And Reinf. Plate Assembly
8	25-7783	4356852		Screw
9	35-2328			Seal, Tub Top
10	35-2733			Cap, Agitator
11	35-3016		Not Available	BASKET ASSY
12	35-2978			Seal, Tub/Housing
13	35-3700			Tub Assembly

"	35-2952	35-3700	Tub Assembly
14	35-2262	Not Available	SHIELD, TUB TOP
"	35-2034	Not Available	TOP, TUB
"	35-3578	Not Available	TOP, TUB
15	35-2550		Dispenser, Rinse

