


Magic Chef W20JY1 04 - CONTROL PANEL (REV. A-D)

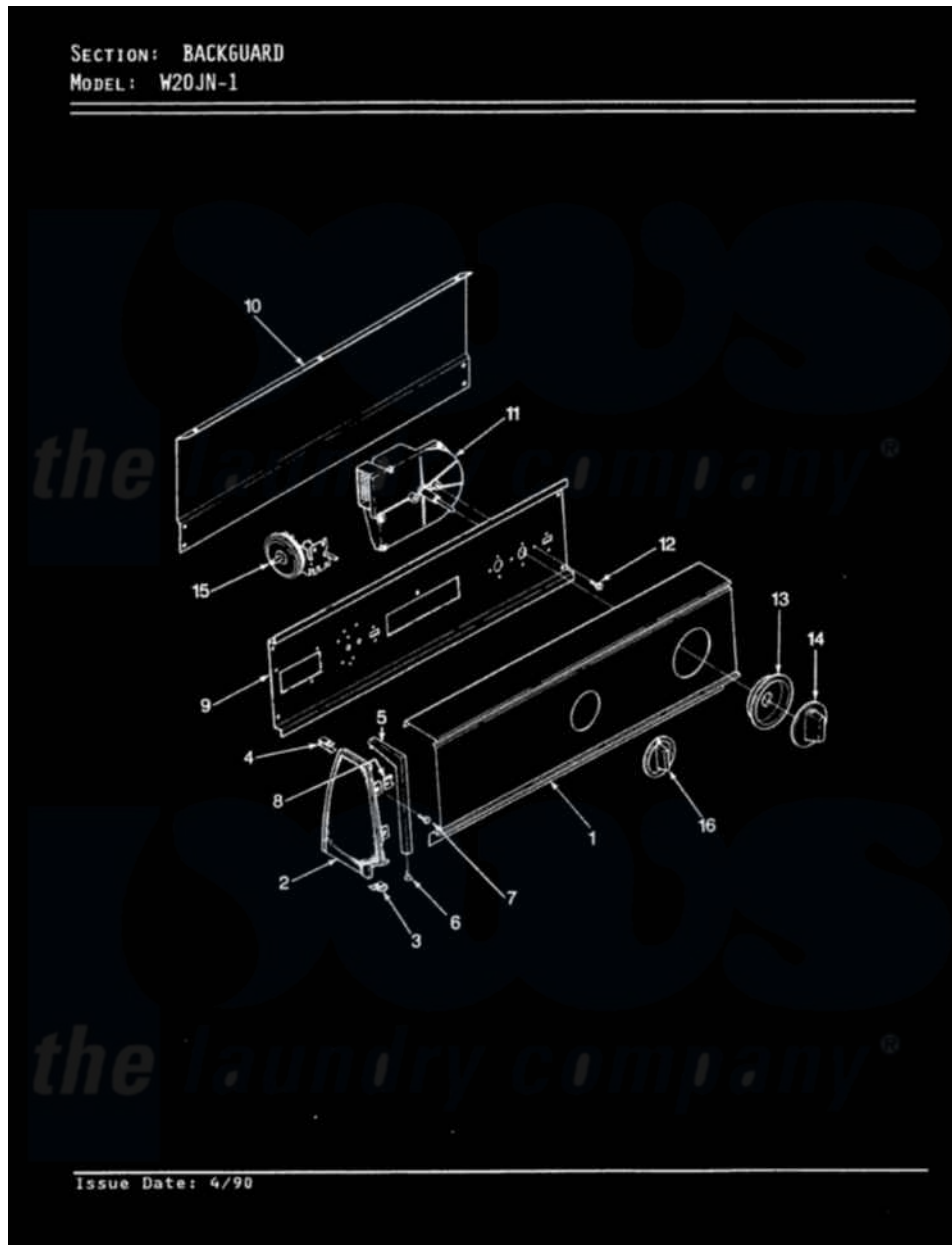

Magic Chef [Residential Magic Chef W20JY1 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL (REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2580		Not Available	PANEL, CONTROL
"	25-7793			Screw
"	25-7702			Speedclip, End Cap To Control Panel
2	53-0265			LH Endcap
"	53-0264			RH Endcap
"	35-2669		Not Available	CAP, END (LT)(WHT)
"	35-2668	21001453		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
4	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw

7	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702		Speedclip, End Cap To Control Panel
9	53-0365	53-1676	Shield, Control
"	35-2680		Not Available CONTROL SHIELD
10	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460	Shield, Rear
"	53-0268	21001460	Shield, Rear
11	35-2208		Not Available TIMER
12	25-0205	216412	Screw, Bracket To Timer
13	35-2254	12500058	Knob Ski
14	35-2187	12500058	Knob Ski
15	35-2145	21001554	Switch, Water Level
16	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2519		Not Available MANUAL, USE & CARE
"	35-2185	21001283	Knob, Selector----Piq

