


Magic Chef W20JY1 07 - EXTERIOR (REV. A-D)

SECTION: EXTERIOR

MODEL: W20JN-1

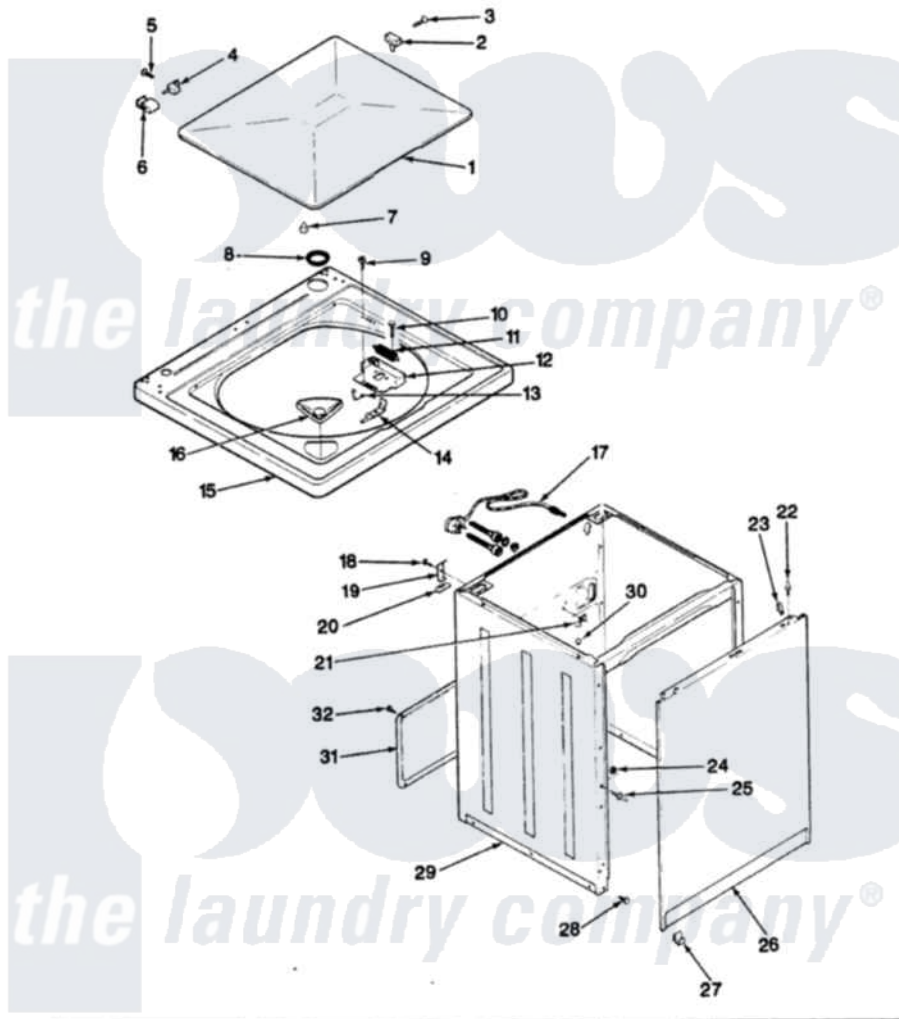

Issue Date: 4/90

Magic Chef [Residential Magic Chef W20JY1 Washer Parts](#) Parts Diagram 07 - EXTERIOR (REV. A-D)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0581			Bumper, Door
"	35-2026-25		Not Available	LID (H WHT)
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	35-2045			Pin, Hinge
"	25-7086	Y0308025		Washer, Stainless Steel
5	25-7455	99002757		Screw
6	35-2044			Hinge, Lid
7	25-7455	99002757		Screw
8	35-2063			Bushing, Insulator
9	25-7463	7101P012-60		Screw
10	25-7437	40040701		Screw, Tapping No.6b-20
11	33-8911	12001187		Kit, Lid Switch Assembly
"	33-9064	12001187		Kit, Lid Switch Assembly
12	33-8289	12001187		Kit, Lid Switch Assembly

"	25-7463	7101P012-60	Screw
"	25-7436		Nylite Washer
13	25-7878		Clip
14	33-9063	12001187	Kit, Lid Switch Assembly
15	35-2739-25		Not Available
			TOP, CABINET (HARV.WT)
"	35-2027-25		Not Available
			TOP, CABINET
16	25-7733	681414	Screw, 10AB X 1/2
"	33-9906	21001167	Dispenser, Bleach
17	35-0680		Not Available
			CORD, POWER
18	25-7893		Screw
19	33-7450	35-2846	Hinge, Cabinet Top
20	33-0930		Pad, Top Hinge
21	33-6099		Clamp
25	53-0643		Pin, Locator
26	35-2084-25		Not Available
			PANEL, FRONT
"	25-7732	681414	Screw, 10AB X 1/2
27	53-0120		Clip, Front Panel
28	33-2653		Bumper, Cabinet
29	35-2106-25		Not Available
			CABINET ASSY. (HW)
30	33-2653		Bumper, Cabinet
31	35-2108	21001871	Cabinet

