


Magic Chef W20JY4 03 - CONTROL PANEL (ORIG/REV. A-D)

SECTION: BACKGUARD

MODEL: W20JN-4

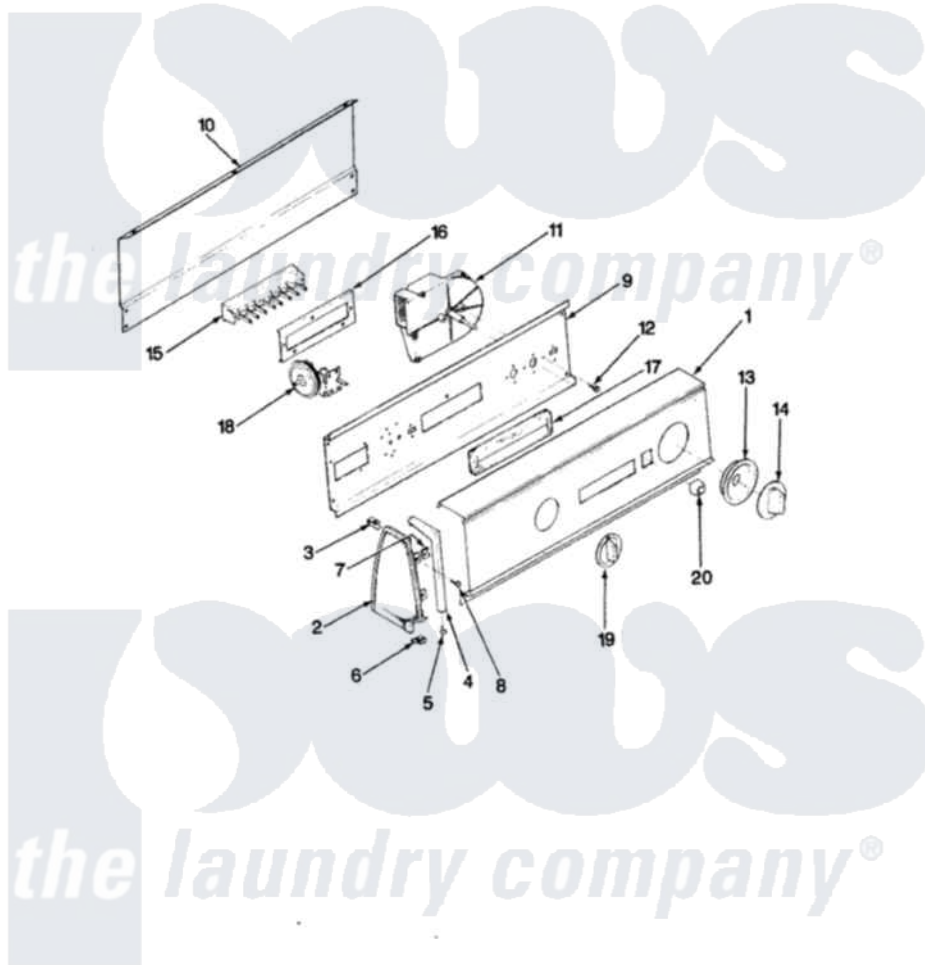

Issue Date: 4/98

Magic Chef [Residential Magic Chef W20JY4 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL (ORIG/REV. A-D)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2167		Not Available	CONTROL PANEL
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
2	53-0265			LH Endcap
"	53-0264			RH Endcap
"	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
3	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
4	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
5	25-7760			Screw
6	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT

7	25-7702		Speedclip, End Cap To Control Panel
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1677		Not Available
"	53-0267		Not Available
			CONTROL SHIELD
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	53-0268	21001460	Shield, Rear
"	25-7583		Not Available
			PLASTIC NUT
"	35-2688	21001460	Shield, Rear
11	35-2211		Not Available
			TIMER
12	25-0205	216412	Screw, Bracket To Timer
13	35-2254	12500058	Knob Ski
14	35-2486	12500058	Knob Ski
15	35-2197		Switch
16	33-6620		Not Available
			BRACKET
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
17	33-8540		Not Available
			SWITCH PAD
18	35-2145	21001554	Switch, Water Level
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
19	35-2185	21001283	Knob, Selector---Piq
20	35-2573		Not Available
			MANUAL, USE & CARE
"	35-2588		Not Available
			PUSHBUTTON - BLACK

the laundry company[®]

the laundry company[®]