


# Magic Chef W20JY5 03 - EXTERIOR (W20JY5)

SECTION: EXTERIOR  
MODEL: W20JH-5

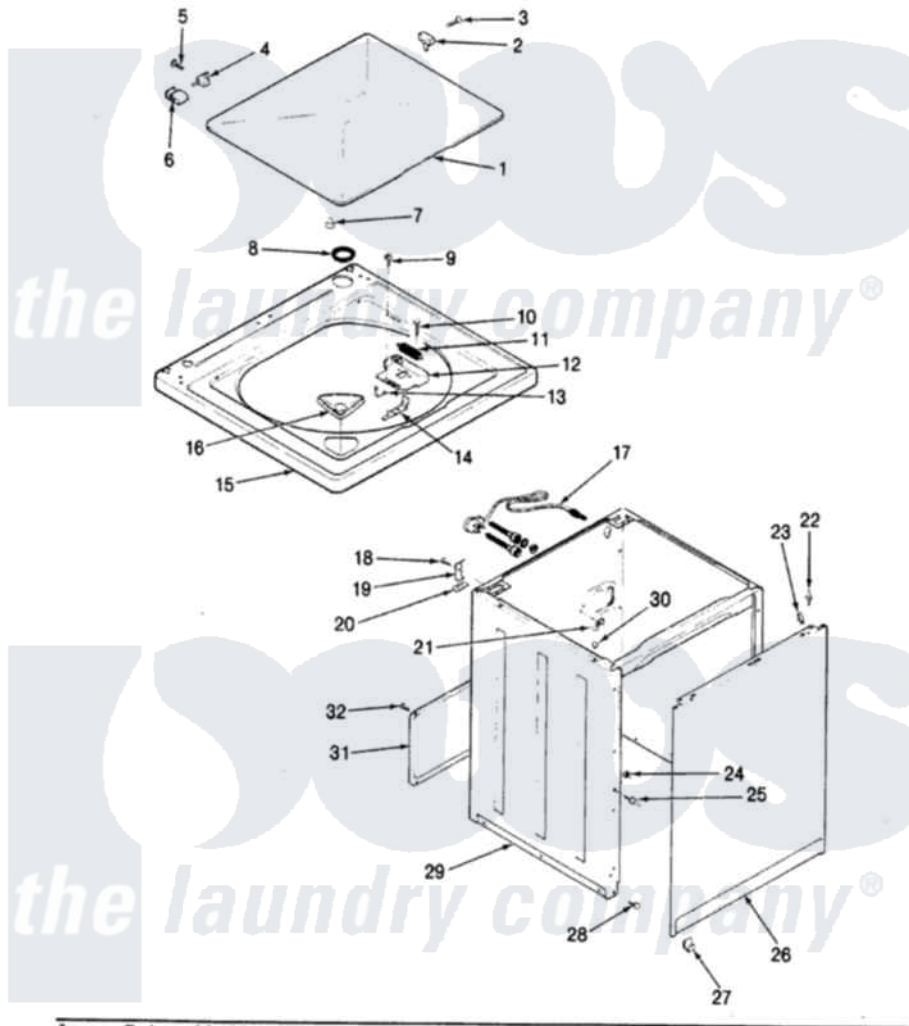

Issue Date: 11/90

Magic Chef [Residential Magic Chef W20JY5 Washer Parts](#) Parts Diagram 03 - EXTERIOR (W20JY5)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2026-25		Not Available	LID (H WHT)
2	<a href="#">25-7436</a>			Nylite Washer
"	<a href="#">43-0057</a>			Actuator, Door Switch
3	<a href="#">25-7438</a>			Screw
4	<a href="#">35-2045</a>			Pin, Hinge
5	<a href="#">25-7893</a>			Screw
6	<a href="#">35-2044</a>			Hinge, Lid
7	<a href="#">35-0581</a>			Bumper, Door
8	<a href="#">35-2063</a>			Bushing, Insulator
9	25-7463	<a href="#">7101P012-60</a>		Screw
10	25-7437	<a href="#">40040701</a>		Screw, Tapping No.6b-20
11	33-9064	<a href="#">12001187</a>		Kit, Lid Switch Assembly
"	33-8911	<a href="#">12001187</a>		Kit, Lid Switch Assembly
12	33-8289	<a href="#">12001187</a>		Kit, Lid Switch Assembly
13	<a href="#">25-7878</a>			Clip
14	33-9063	<a href="#">12001187</a>		Kit, Lid Switch Assembly

15	35-2739-25		Not Available	TOP, CABINET (HARV.WT)
16	33-9906	<a href="#">21001167</a>		Dispenser, Bleach
17	35-0680		Not Available	CORD, POWER
18	<a href="#">25-7893</a>			Screw
19	33-7450	<a href="#">35-2846</a>		Hinge, Cabinet Top
20	<a href="#">33-0930</a>			Pad, Top Hinge
21	<a href="#">33-6099</a>			Clamp
22	<a href="#">53-0643</a>			Pin, Locator
23	<a href="#">34-9701</a>			Guide, Cabinet
24	25-0224	<a href="#">3400029</a>		Nut, Adapter Plate
25	<a href="#">53-0643</a>			Pin, Locator
26	35-2084-25		Not Available	PANEL, FRONT
27	<a href="#">53-0120</a>			Clip, Front Panel
28	<a href="#">33-2653</a>			Bumper, Cabinet
29	35-2106-25		Not Available	CABINET ASSY. (HW)
30	<a href="#">33-2653</a>			Bumper, Cabinet
31	35-2108	<a href="#">21001871</a>		Cabinet
32	25-7733	<a href="#">681414</a>		Screw, 10AB X 1/2

