


Magic Chef W224LM 02 - CONTROL PANEL

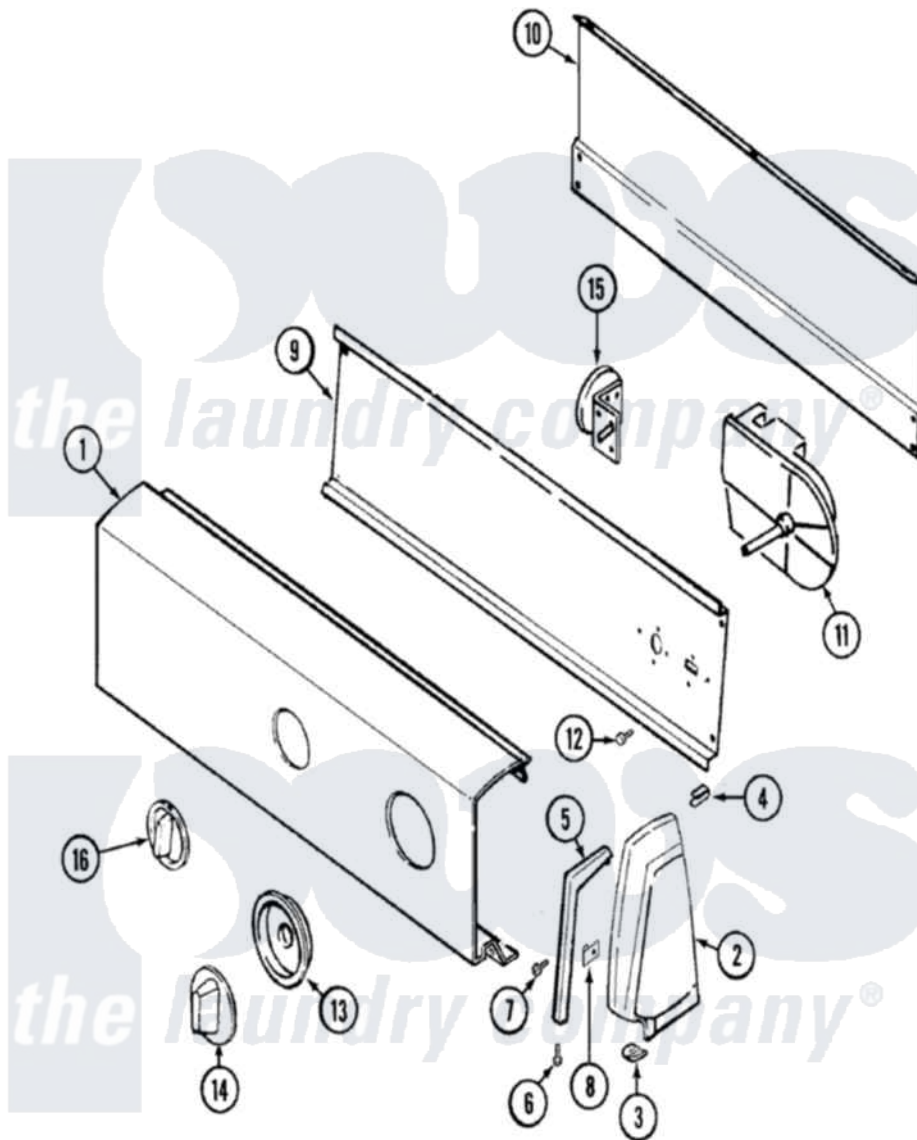

Magic Chef [Residential Magic Chef W224LM Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	21001160		Not Available	PANEL, CONTROL
"	25-7793			Screw
2	21001069	12002263		Endcap Kit
"	21001070	21001456		Cap- End
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
5	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
"	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel

9	31001146	31001193	Pad, Shield
"	31001128		Not Available SHIELD, CONTROL
10	35-2688	21001460	Shield, Rear
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	25-7853	25-7933	Ring, Retaining
11	21001340		Timer
"	35-3839		Timer
12	31001029	3400094	Screw, 10-32 X 3/8
13	21001117		Not Available SKIRT & RING ASSY. (ALM)
14	21001120	12500058	Knob Ski
15	35-3691	21001554	Switch, Water Level
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	21001119		Knob, Selector
17	21001177		Not Available MANUAL, USE & CARE
"	21001053		Not Available MANUAL, USE & CARE
18	16000329		Not Available GUIDE, QUICK REF. - MAGIC CHEF

