


# Magic Chef W224LV 02 - CONTROL PANEL

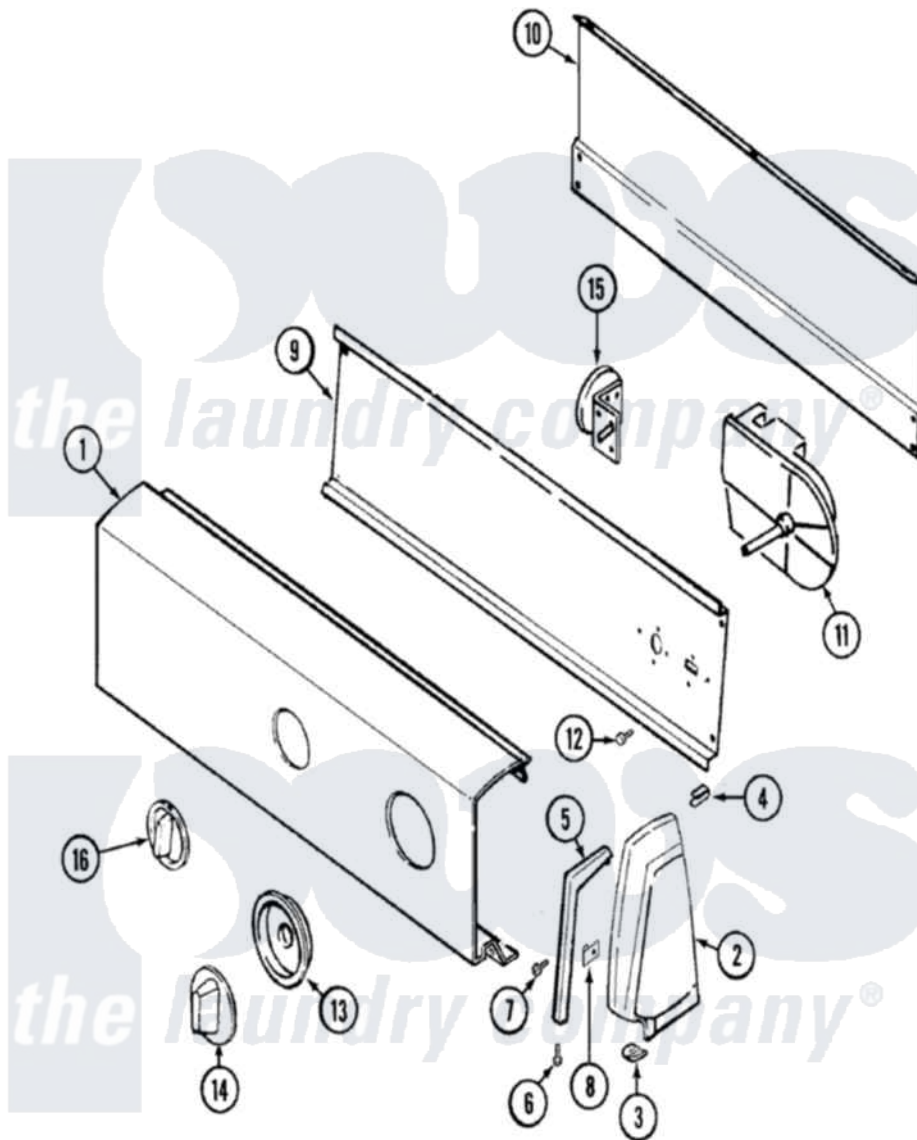

Magic Chef [Residential Magic Chef W224LV Washer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-7793</a>			Screw
"	21001159		Not Available	PANEL, CONTROL
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
2	35-2668	<a href="#">21001453</a>		Cap- End
"	35-2669		Not Available	CAP, END (LT)(WHT)
3	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	31001055		Not Available	TRIM, ENDCAP (LT WHT)
"	31001054		Not Available	TRIM, ENDCAP (RT WHT)
6	<a href="#">25-7760</a>			Screw
7	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
8	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel

9	31001146	<a href="#">31001193</a>		Pad, Shield
"	31001128		Not Available	SHIELD, CONTROL
10	25-7853	<a href="#">25-7933</a>		Ring, Retaining
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-3457</a>			Screw, Sems
"	35-2688	<a href="#">21001460</a>		Shield, Rear
11	<a href="#">21001340</a>			Timer
"	<a href="#">35-3839</a>			Timer
12	31001029	<a href="#">3400094</a>		Screw, 10-32 X 3/8
13	35-3965	<a href="#">21001502</a>		Skirt Ri
14	35-3963	<a href="#">21001237</a>		Knob, Timer
15	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-3691	<a href="#">21001554</a>		Switch, Water Level
16	35-3961	<a href="#">21001239</a>		Knob, Selector
17	21001177		Not Available	MANUAL, USE & CARE
"	21001053		Not Available	MANUAL, USE & CARE
18	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

