


# Magic Chef W225LM 02 - CONTROL PANEL

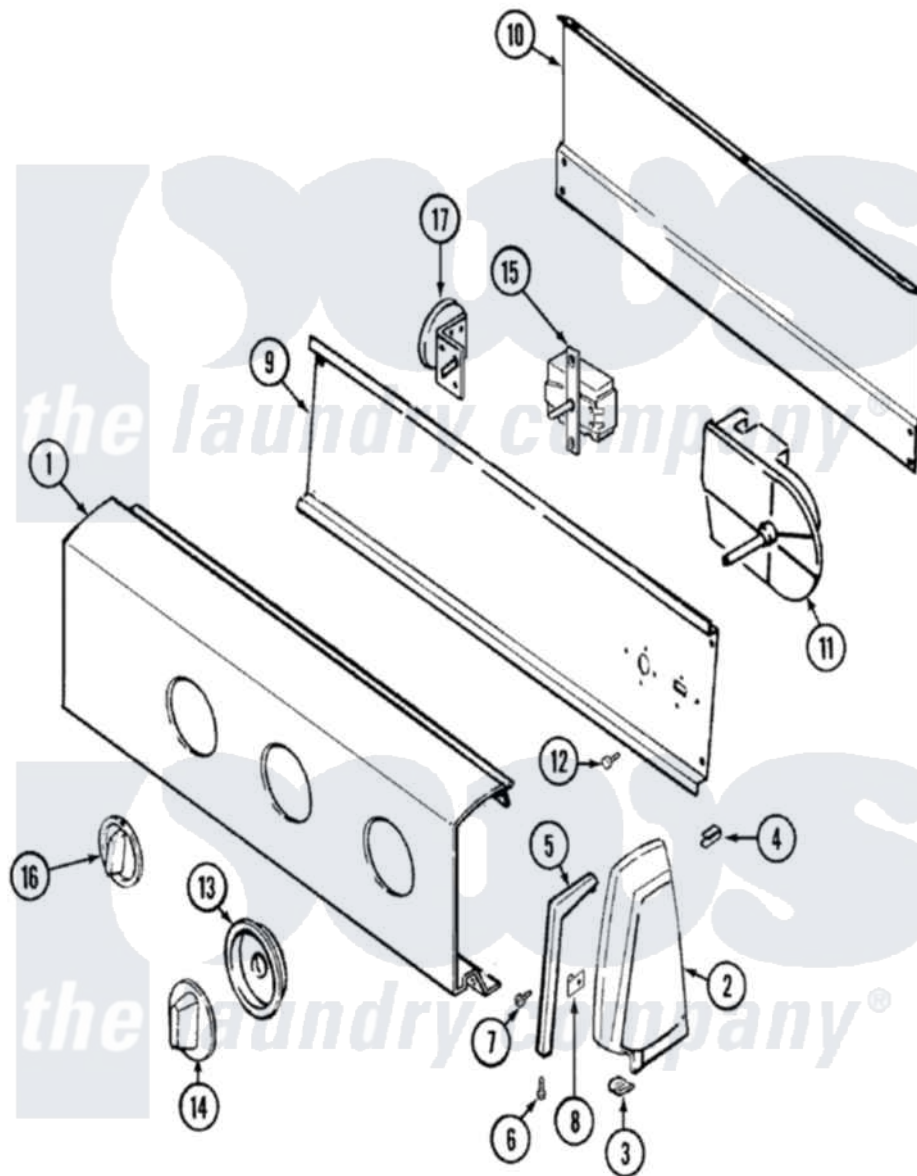

Magic Chef [Residential Magic Chef W225LM Washer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001143		Not Available	PANEL, CONTROL
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	<a href="#">25-7793</a>			Screw
2	21001069	<a href="#">12002263</a>		Endcap Kit
"	21001070	<a href="#">21001456</a>		Cap- End
3	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
"	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
6	<a href="#">25-7760</a>			Screw
7	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
8	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel

9	31001146	<a href="#">31001193</a>	Pad, Shield
"	31001128		Not Available SHIELD, CONTROL
10	35-2688	<a href="#">21001460</a>	Shield, Rear
"	<a href="#">25-3457</a>		Screw, Sems
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7853	<a href="#">25-7933</a>	Ring, Retaining
11	<a href="#">35-3840</a>		Timer
"	<a href="#">21001341</a>		Timer
12	31001029	<a href="#">3400094</a>	Screw, 10-32 X 3/8
13	21001117		Not Available SKIRT & RING ASSY. (ALM)
14	21001120	<a href="#">12500058</a>	Knob Ski
15	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">21001139</a>		Switch, Water Temp. 3 Position
16	<a href="#">21001119</a>		Knob, Selector
17	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-3691	<a href="#">21001554</a>	Switch, Water Level
18	16000329		Not Available GUIDE, QUICK REF. - MAGIC CHEF
19	21001053		Not Available MANUAL, USE & CARE
20	21001176		Not Available MANUAL, USE & CARE

