


Magic Chef W226LV 02 - CONTROL PANEL

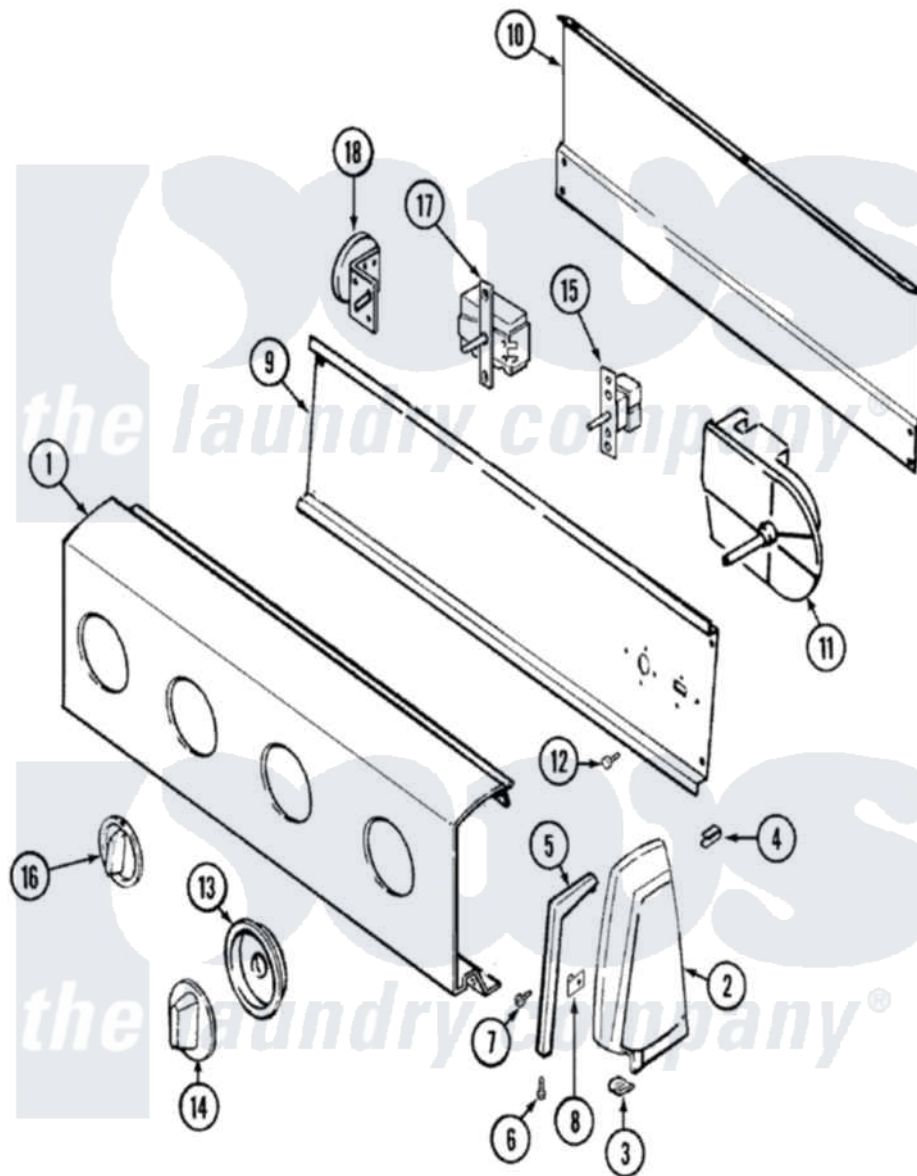

Magic Chef [Residential Magic Chef W226LV Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	21001146		Not Available	PANEL, CONTROL
"	25-7793			Screw
2	35-2669		Not Available	CAP, END (LT)(WHT)
"	35-2668	21001453		Cap- End
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	31001055		Not Available	TRIM, ENDCAP (LT WHT)
"	31001054		Not Available	TRIM, ENDCAP (RT WHT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel

9	31001128		Not Available	SHIELD, CONTROL
"	31001146	31001193		Pad, Shield
10	25-3457			Screw, Sems
"	25-7853	25-7933		Ring, Retaining
"	35-2688	21001460		Shield, Rear
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
11	21001342			Timer
"	35-3841			Timer
12	31001029	3400094		Screw, 10-32 X 3/8
13	35-3965	21001502		Skirt Ri
14	35-3963	21001237		Knob, Timer
15	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001139			Switch, Water Temp. 3 Position
16	35-3961	21001239		Knob, Selector
17	21001173	21001687		Switch, Speed
"	21001140	21001898		Switch, Speed
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
18	35-3691	21001554		Switch, Water Level
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
19	21001174		Not Available	MANUAL, USE & CARE
"	21001053		Not Available	MANUAL, USE & CARE
20	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

the laundry company[®]

the laundry company[®]