


Magic Chef W227LM 02 - CONTROL PANEL

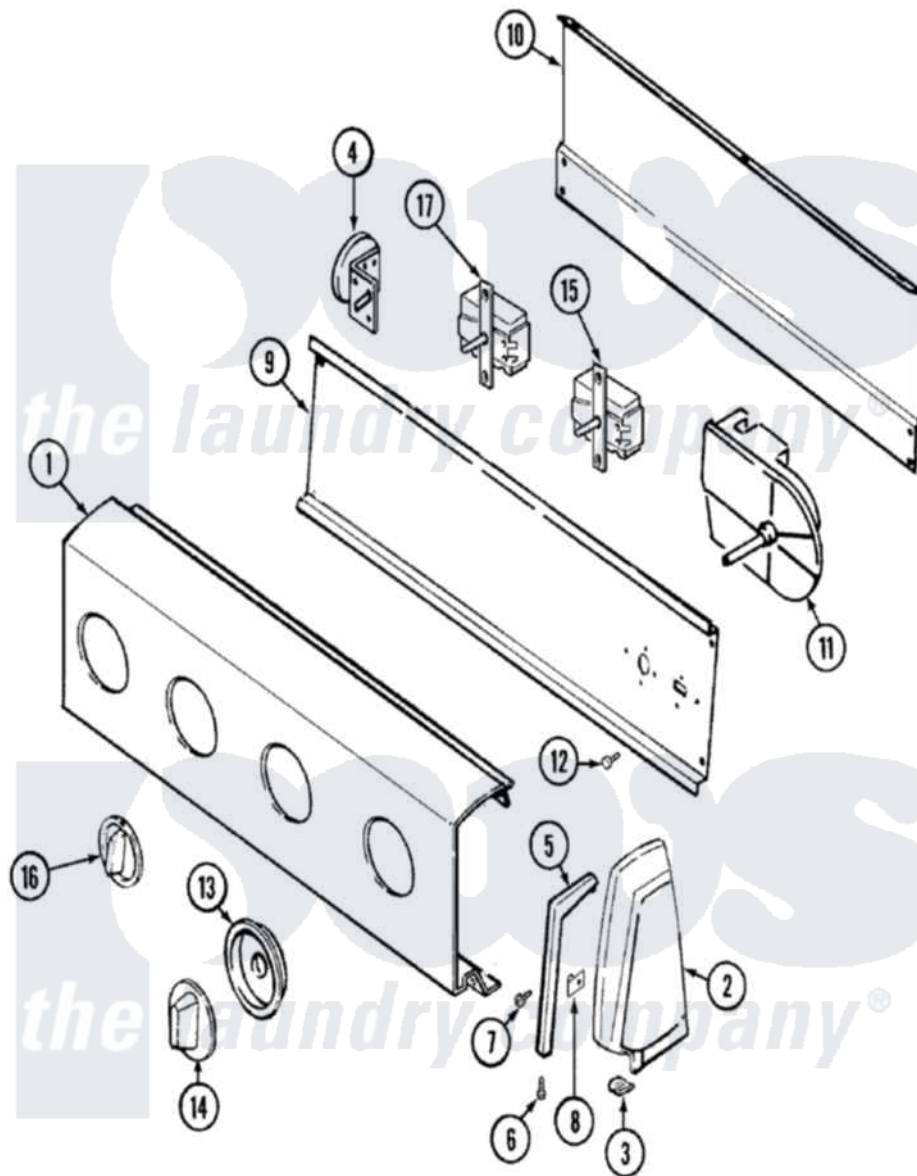

Magic Chef [Residential Magic Chef W227LM Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	21001153		Not Available	PANEL, CONTROL
"	25-7760			Screw
2	21001070	21001456		Cap- End
"	21001069	12002263		Endcap Kit
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	35-3691	21001554		Switch, Water Level
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
"	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel

9	31001146	31001193		Pad, Shield
"	31001128		Not Available	SHIELD, CONTROL
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
10	35-2688	21001460		Shield, Rear
"	25-3457			Screw, Sems
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
11	21001339		Not Available	TIMER
"	35-3838			Timer
12	31001029	3400094		Screw, 10-32 X 3/8
13	21001117		Not Available	SKIRT & RING ASSY. (ALM)
14	21001120	12500058		Knob Ski
15	21001141			Switch, Water Temperature
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
16	21001119			Knob, Selector
17	21001142			Switch, Speed
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
18	21001175		Not Available	MANUAL, USE & CARE
"	21001053		Not Available	MANUAL, USE & CARE
19	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

