


Magic Chef W227LV 02 - CONTROL PANEL

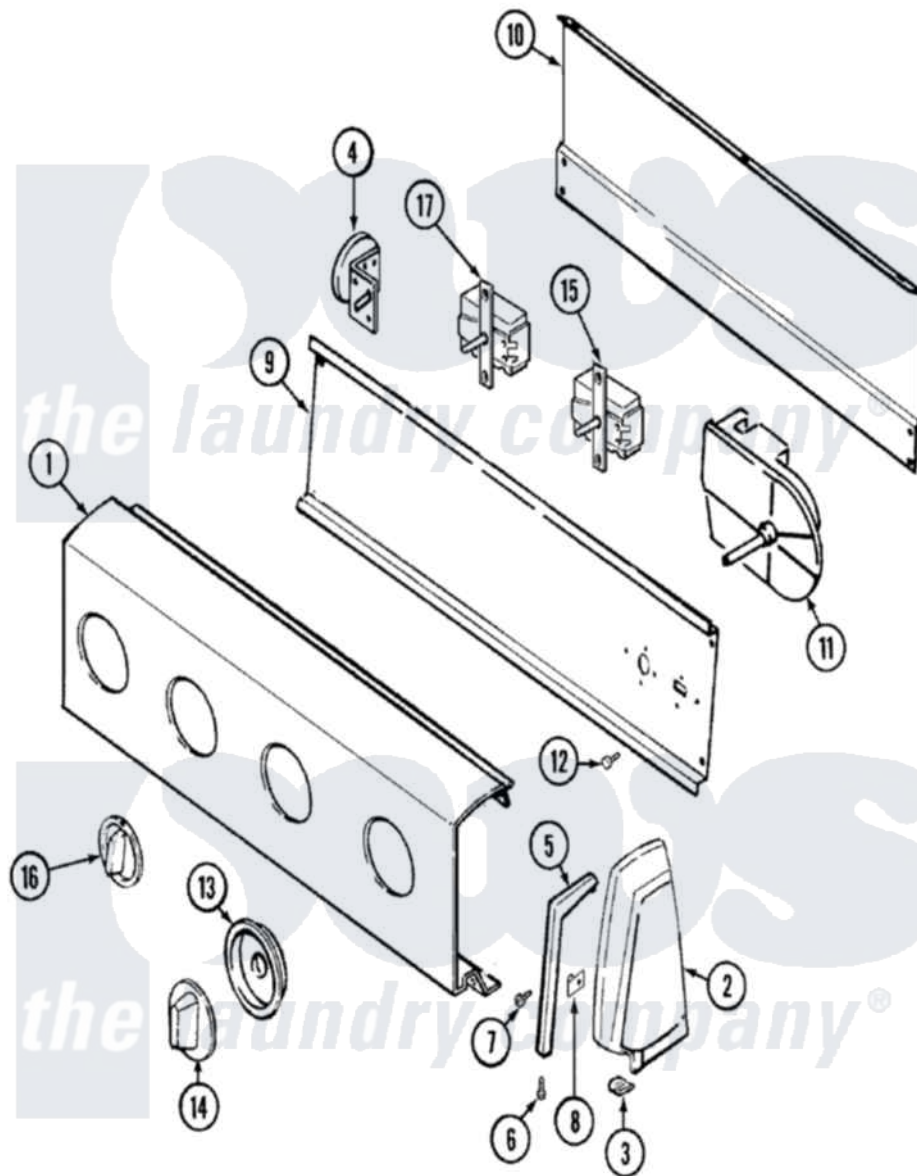

Magic Chef [Residential Magic Chef W227LV Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7760			Screw
"	21001154		Not Available	PANEL, CONTROL
"	25-7702			Speedclip, End Cap To Control Panel
2	35-2669		Not Available	CAP, END (LT)(WHT)
"	35-2668	21001453		Cap- End
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	35-3691	21001554		Switch, Water Level
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	31001055		Not Available	TRIM, ENDCAP (LT WHT)
"	31001054		Not Available	TRIM, ENDCAP (RT WHT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel

9	31001146	31001193	Pad, Shield
"	31001128	Not Available	SHIELD, CONTROL
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	35-2688	21001460	Shield, Rear
11	35-3838		Timer
"	21001339	Not Available	TIMER
12	31001029	3400094	Screw, 10-32 X 3/8
13	35-3965	21001502	Skirt Ri
14	35-3963	21001237	Knob, Timer
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001141		Switch, Water Temperature
16	35-3961	21001239	Knob, Selector
17	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001142		Switch, Speed
18	21001175	Not Available	MANUAL, USE & CARE
"	21001053	Not Available	MANUAL, USE & CARE
19	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF

