


Magic Chef W227LV 03 - PUMP

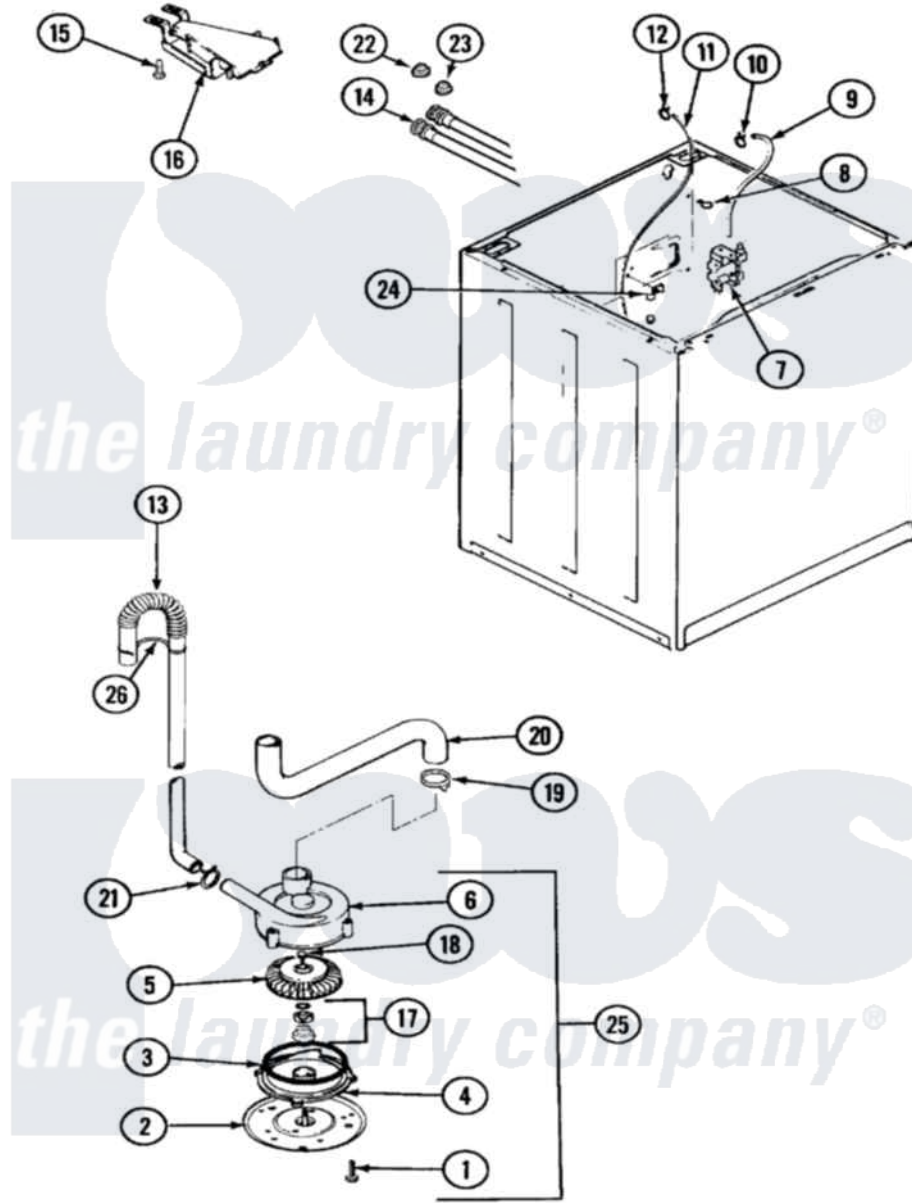

Magic Chef [Residential Magic Chef W227LV Washer Parts](#) Parts Diagram 03 - PUMP
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7419		Not Available	SCREW
2	33-6035		Not Available	PLATE & PULLEY ASSY.
3	33-6032			Gasket
4	35-2058			Base, Pump
5	35-2057	35-6465		Pump Assem
6	35-2056		Not Available	HOUSING, PUMP
7	21001396	35-2374N		Valve, Water
"	35-2374N			Valve, Water
"	25-7430			Clip, Wiring Harness
8	25-7867	596669		Clamp, Manifold
9	35-2378	12002749		Hose, Flume Kit
10	25-7867	596669		Clamp, Manifold
11	35-0706		Not Available	PAD, FOAM
"	21001060	21001748		Hose, Pressure Switch
12	33-6099			Clamp
13	35-3538	21001872		Hose, Drain

14	35-0873	76313	Hosefill
"	33-7046	89503	Hose-Inlet
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-2051	21001760	Flume Assembly / Water Diverter
17	35-0707		Seal, Seat And "O" Ring
18	25-7828	489483	Screw 10-32 X 1/2
19	25-6068	285655	Clamp, Hose
20	35-3584	21001915	Hose, Tub To Pump
21	25-7080	285655	Clamp, Hose
22	25-7048		Washer
23	33-4264N		Strainer And Washer Kit
24	25-7796	596669	Clamp, Manifold
25	35-3834	35-6465	Pump Assem
"	35-2344		Restrictor, Flow
26	33-9537	22003814	Retainer, Drain Hose

