


# Magic Chef W228LM 02 - CONTROL PANEL

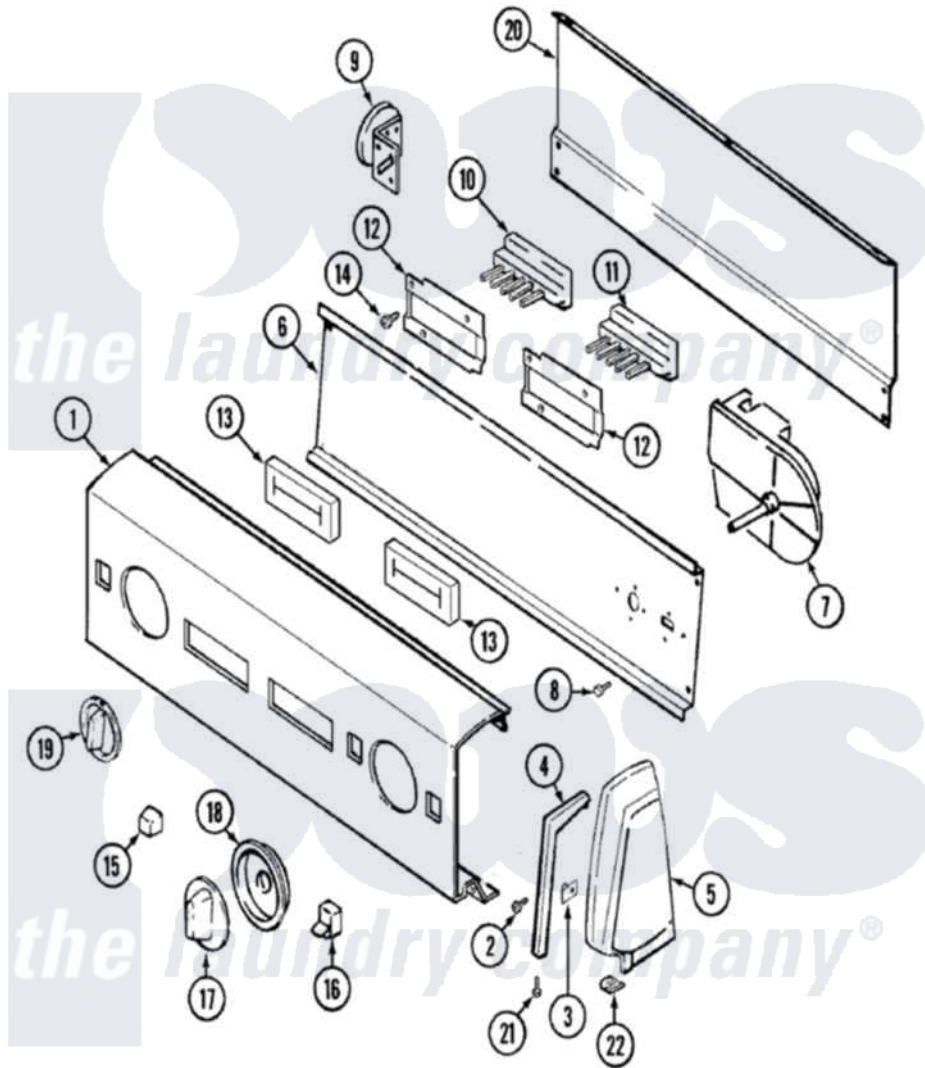

Magic Chef [Residential Magic Chef W228LM Washer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-3457</a>			Screw, Sems
"	21001155		Not Available	PANEL, CONTROL (ALM)
2	<a href="#">25-7760</a>			Screw
3	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
4	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
"	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
5	21001070	<a href="#">21001456</a>		Cap- End
"	21001069	<a href="#">12002263</a>		Endcap Kit
6	35-3190		Not Available	SHIELD, CONTROL
"	31001146	<a href="#">31001193</a>		Pad, Shield
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
7	<a href="#">21001325</a>			Timer
"	<a href="#">35-3843</a>			Timer
8	31001029	<a href="#">3400094</a>		Screw, 10-32 X 3/8
9	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer

9	25-3092	<a href="#">90707</a>		Head Tapping
"	35-3691	<a href="#">21001554</a>		Switch, Water Level
10	<a href="#">35-3862</a>			Switch, 4 Pushbutton
11	<a href="#">35-3861</a>			Switch, 5 Pushbutton
12	33-6621		Not Available	BRACKET, SWITCH
13	35-3515		Not Available	PAD, SWITCH
14	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7712		Not Available	SCREW
15	<a href="#">21001118</a>			Pushbutton
16	21001116	<a href="#">74008765</a>		Switch, Rocker
17	21001120	<a href="#">12500058</a>		Knob Ski
18	21001117		Not Available	SKIRT & RING ASSY. (ALM)
19	<a href="#">21001119</a>			Knob, Selector
20	35-2688	<a href="#">21001460</a>		Shield, Rear
21	25-7496	<a href="#">25-7760</a>		Screw
22	<a href="#">25-7851</a>			Speedclip, End Cap To Top
23	21001172		Not Available	MANUAL, USE & CARE
"	21001053		Not Available	MANUAL, USE & CARE
24	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

