


Magic Chef W229LV 02 - CONTROL PANEL

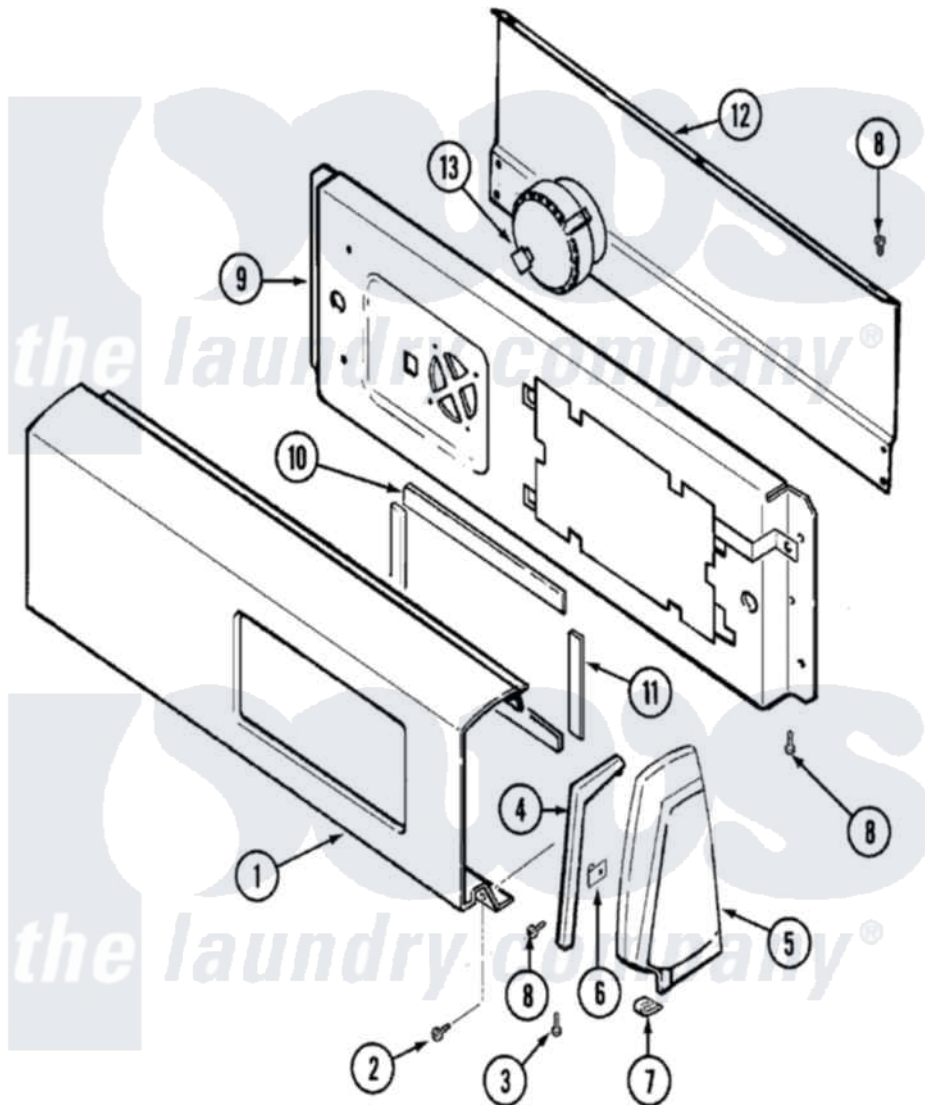

Magic Chef [Residential Magic Chef W229LV Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|--------------------------|---------------|---|
| 1 | 21001158 | | Not Available | PANEL, CONTROL |
| 2 | 25-7649 | 910187 | | Screw |
| 3 | 25-7760 | | | Screw |
| 4 | 31001054 | | Not Available | TRIM, ENDCAP (RT WHT) |
| " | 31001055 | | Not Available | TRIM, ENDCAP (LT WHT) |
| 5 | 35-2669 | | Not Available | CAP, END (LT)(WHT) |
| " | 35-2668 | 21001453 | | Cap- End |
| 6 | 25-7702 | | | Speedclip, End Cap To Control Panel |
| 7 | 25-7851 | | | Speedclip, End Cap To Top |
| 8 | 25-3092 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 9 | 35-3540 | | | Speaker Assembly |
| " | 35-3473 | | | Control Shield And Electronic As |
| 10 | 35-3450 | | | Seal, Panel Long |
| 11 | 35-3453 | | | Seal, Panel Short |

| | | | |
|----|-------------------------|--------------------------|--------------------------------|
| 12 | 35-2688 | 21001460 | Shield, Rear |
| " | 25-3457 | | Screw, Sems |
| 13 | 35-3454 | | Switch, Water Level |
| " | 25-7947 | 21001063 | Screw, Shoulder |
| 14 | 21001053 | | Not Available |
| | | | MANUAL, USE & CARE |
| 15 | 16000329 | | Not Available |
| | | | GUIDE, QUICK REF. - MAGIC CHEF |

