


Magic Chef W236LM 03 - CONTROL PANEL

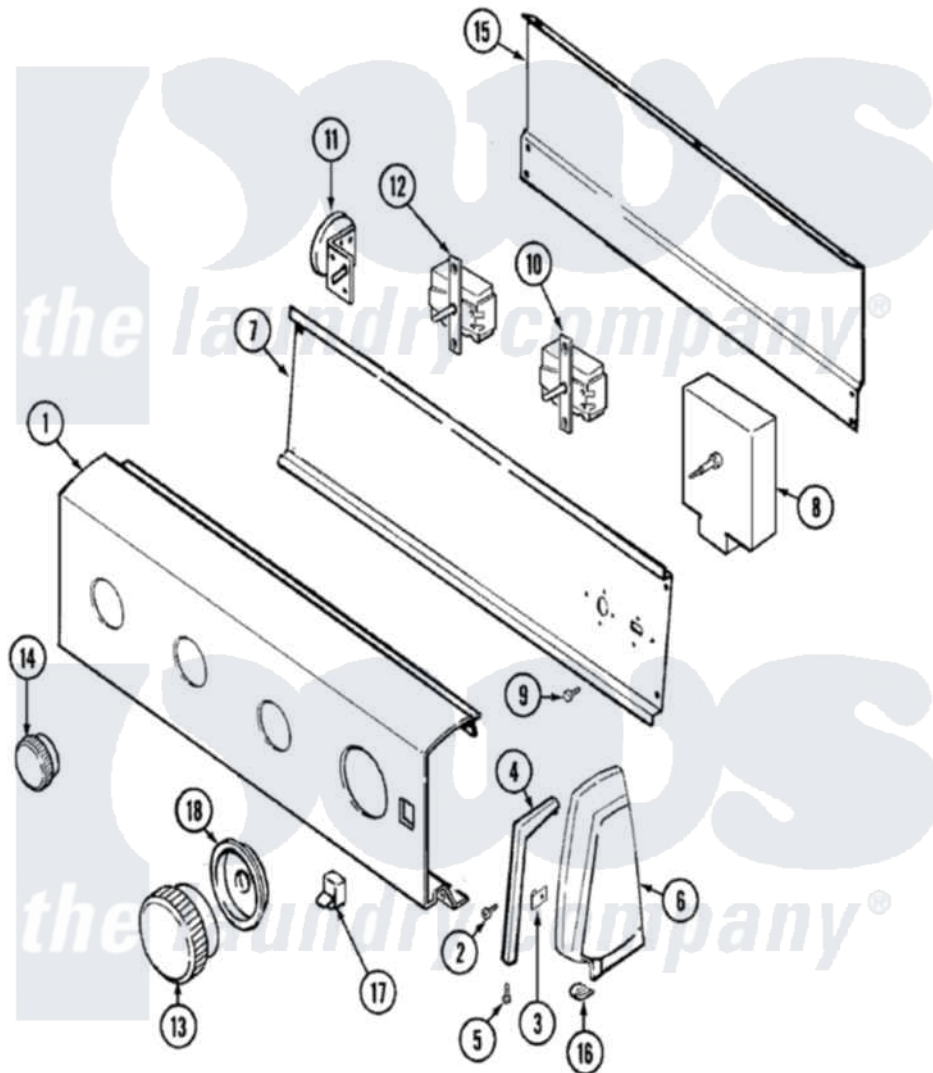

Magic Chef [Residential Magic Chef W236LM Washer Parts](#) Parts Diagram 03 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001151			Panel, Control
2	25-7649	910187		Screw
3	25-7702			Speedclip, End Cap To Control Panel
4	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
"	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
5	25-7760			Screw
6	21001069	12002263		Endcap Kit
"	21001070	21001456		Cap- End
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001128		Not Available	SHIELD, CONTROL
8	21001047			Timer
9	31001029	3400094		Screw, 10-32 X 3/8
10	21001139			Switch, Water Temp. 3 Position
11	35-3691	21001554		Switch, Water Level

12	21001173	21001687		Switch, Speed
13	21001120	12500058		Knob Ski
14	21001119			Knob, Selector
15	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457			Screw, Sems
"	35-2688	21001460		Shield, Rear
16	25-7851			Speedclip, End Cap To Top
17	21001116	74008765		Switch, Rocker
18	21001117		Not Available	SKIRT & RING ASSY. (ALM)
20	21001053		Not Available	MANUAL, USE & CARE
"	21001291		Not Available	MANUAL, USE & CARE
21	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]