


EXTERIOR

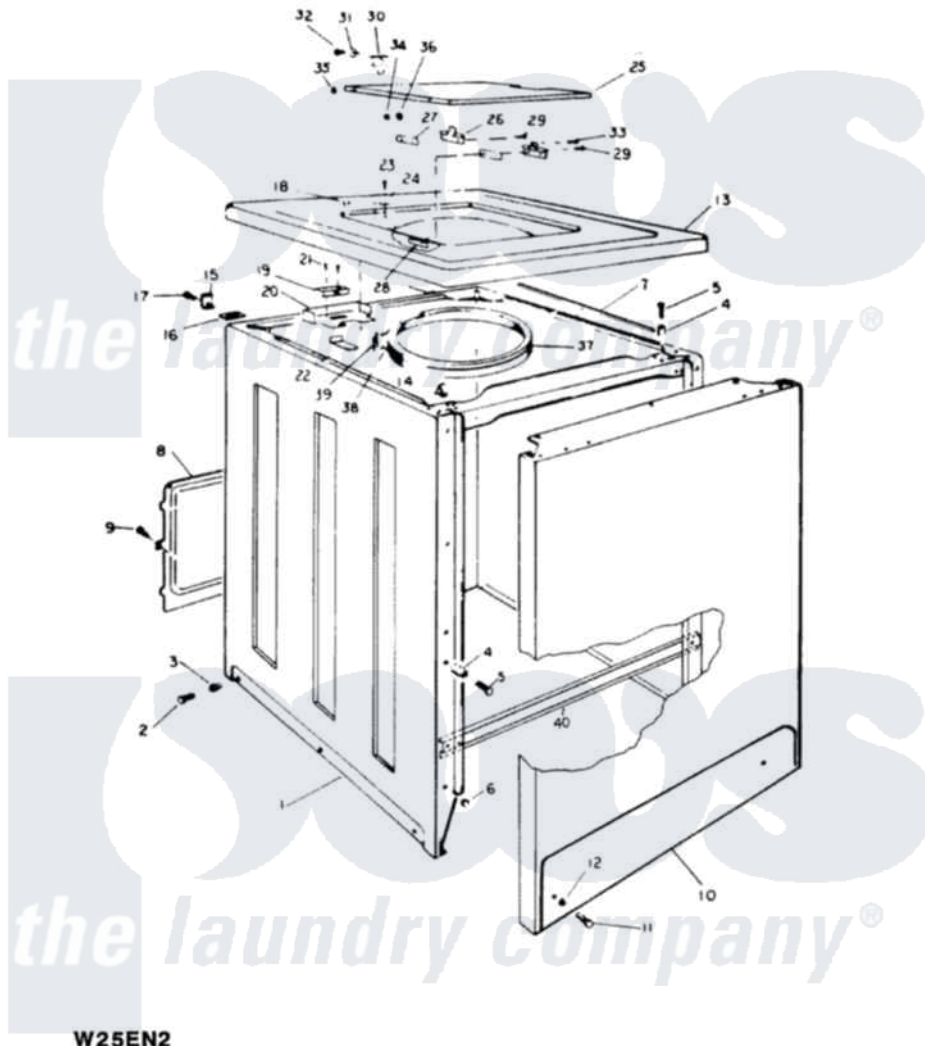

W25EN2

C-4

Magic Chef [Residential Magic Chef W25EN2 Washer Parts](#) Parts Diagram 03 - EXTERIOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0061		Not Available	CABINET BODY
2	25-7001	308685		Side Trim)
3	33-2088		Not Available	SLEEVE
"	25-7458	308685		Side Trim)
4	34-9701			Guide, Cabinet
5	25-6109			Screw
6	33-2653			Bumper, Cabinet
7	33-9948		Not Available	CUSHION STRIP
8	33-8687		Not Available	REAR SHIELD
10	35-0056		Not Available	FRONT PANEL
11	25-7001	308685		Side Trim)
13	35-0586		Not Available	CABINET TOP
14	25-7285			Clip
15	33-7450	35-2846		Hinge, Cabinet Top
16	33-0930			Pad, Top Hinge
17	25-7732	681414		Screw, 10AB X 1/2

18	33-2653		Bumper, Cabinet
19	33-8911	12001187	Kit, Lid Switch Assembly
20	33-8289	12001187	Kit, Lid Switch Assembly
21	25-7437	40040701	Screw, Tapping No.6b-20
22	33-8828	12001187	Kit, Lid Switch Assembly
23	25-7463	7101P012-60	Screw
24	25-7436		Nylite Washer
25	35-0610	Not Available	CLOTHES DOOR
26	33-6956		Hinge
27	33-6957		Hinge Pad
28	33-8058	Not Available	SPEEDNUT
29	25-7455	99002757	Screw
30	43-0057		Actuator, Door Switch
31	25-7436		Nylite Washer
32	25-7438		Screw
33	25-7455	99002757	Screw
34	25-7086	Y0308025	Washer, Stainless Steel
35	25-7436		Nylite Washer
36	33-8057	Not Available	PLASTIC NUT
37	33-9399	Not Available	SPLASH GUARD
38	33-6093	Not Available	RETAINING RING
39	33-0767		Spring
40	35-0663	Not Available	CABT BRACE
"	25-7883		Screw

the laundry company[®]

the laundry company[®]