



W25EN2

C-10

N-27-9

Magic Chef [Residential Magic Chef W25EN2 Washer Parts](#) Parts Diagram 05 - TUB  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9392		Not Available	TUB ASSEMBLY
2	33-8800	<a href="#">33-8800K</a>		Plate
3	<a href="#">33-6905</a>			Gasket
4	25-7783	<a href="#">4356852</a>		Screw
5	33-3232	<a href="#">35-0538</a>		Pad
6	35-0004		Not Available	BASKET ASM
7	<a href="#">33-8959</a>			Gasket
8	33-8799		Not Available	REINF PLATE
9	35-0537	<a href="#">35-0993</a>		Tub Top
10	<a href="#">33-3055</a>			Gasket
11	<a href="#">25-7748</a>			Clip
12	35-0049		Not Available	AGITATOR
13	<a href="#">33-6241</a>			Cap
14	<a href="#">25-7330</a>			Rubber Washer
15	35-0731		Not Available	LINT FILTER
16	35-0732	<a href="#">35-2550</a>		Dispenser, Rinse