



W25EN2

C-10

N-27-9

Magic Chef [Residential Magic Chef W25EY2 Washer Parts](#) Parts Diagram 04 - TUB
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9392		Not Available	TUB ASSEMBLY
2	33-8800	33-8800K		Plate
3	33-6905			Gasket
4	25-7783	4356852		Screw
5	33-3232	35-0538		Pad
6	35-0004		Not Available	BASKET ASM
7	33-8959			Gasket
8	33-8799		Not Available	REINF PLATE
9	35-0537	35-0993		Tub Top
10	33-3055			Gasket
11	25-7748			Clip
12	35-0049		Not Available	AGITATOR
13	33-6241			Cap
14	25-7330			Rubber Washer
15	35-0731		Not Available	LINT FILTER
16	35-0732	35-2550		Dispenser, Rinse