


Magic Chef W25HN2 04 - CONTROL PANEL (REV. A-D)

MAGIC CHEF W25HN-2 BACKGUARD

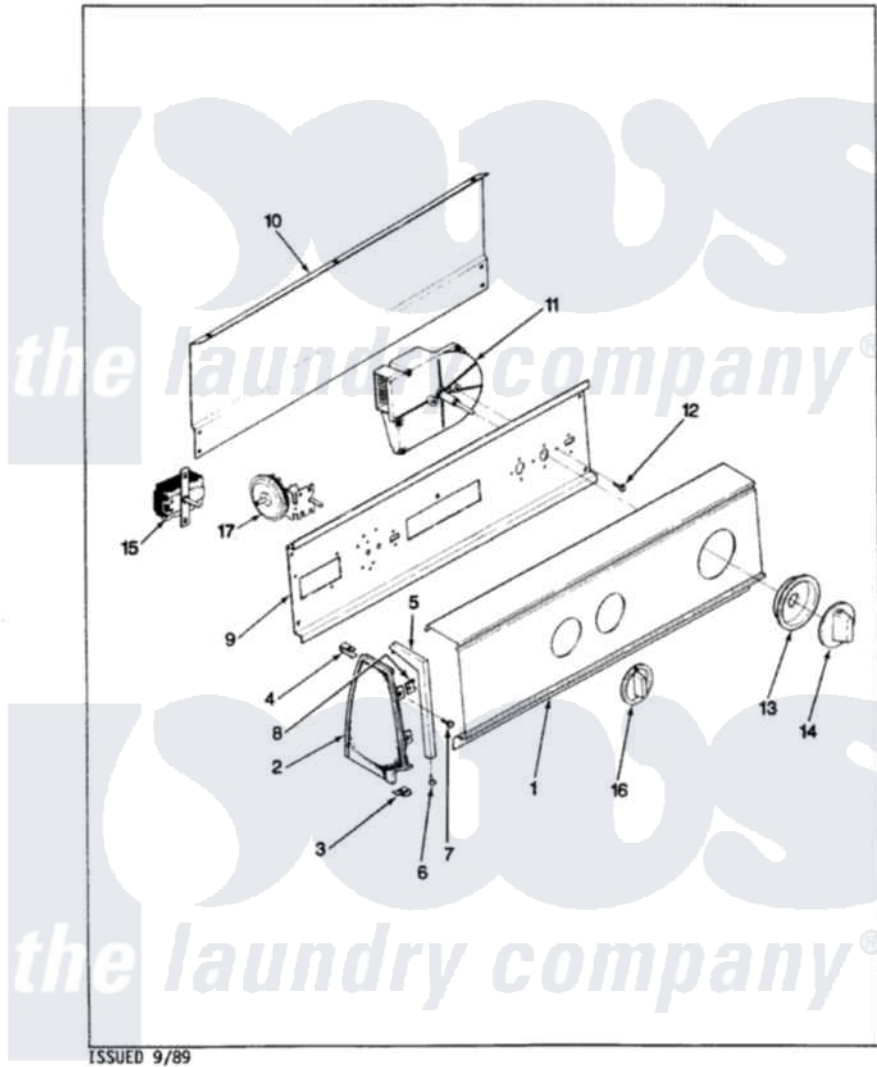

ISSUED 9/89

Magic Chef [Residential Magic Chef W25HN2 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL (REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7793			Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2169		Not Available	CONTROL PANEL
2	53-0265			LH Endcap
"	53-0264			RH Endcap
"	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw

7	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702		Speedclip, End Cap To Control Panel
9	53-1676		Shield, Control
"	53-0365	53-1676	Shield, Control
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	35-2688	21001460	Shield, Rear
"	53-0268	21001460	Shield, Rear
11	35-2324	35-2788	Timer
12	25-0087	Not Available	LOCKWASHER
13	35-2254	12500058	Knob Ski
14	35-2486	12500058	Knob Ski
"	35-2187	12500058	Knob Ski
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2617	35-0119	Rotary Switch
16	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2185	21001283	Knob, Selector----Piq
17	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2145	21001554	Switch, Water Level
18	35-2394	Not Available	MANUAL, U&C INSERT

