


Magic Chef W25HN2 08 - EXTERIOR (REV. E-F)

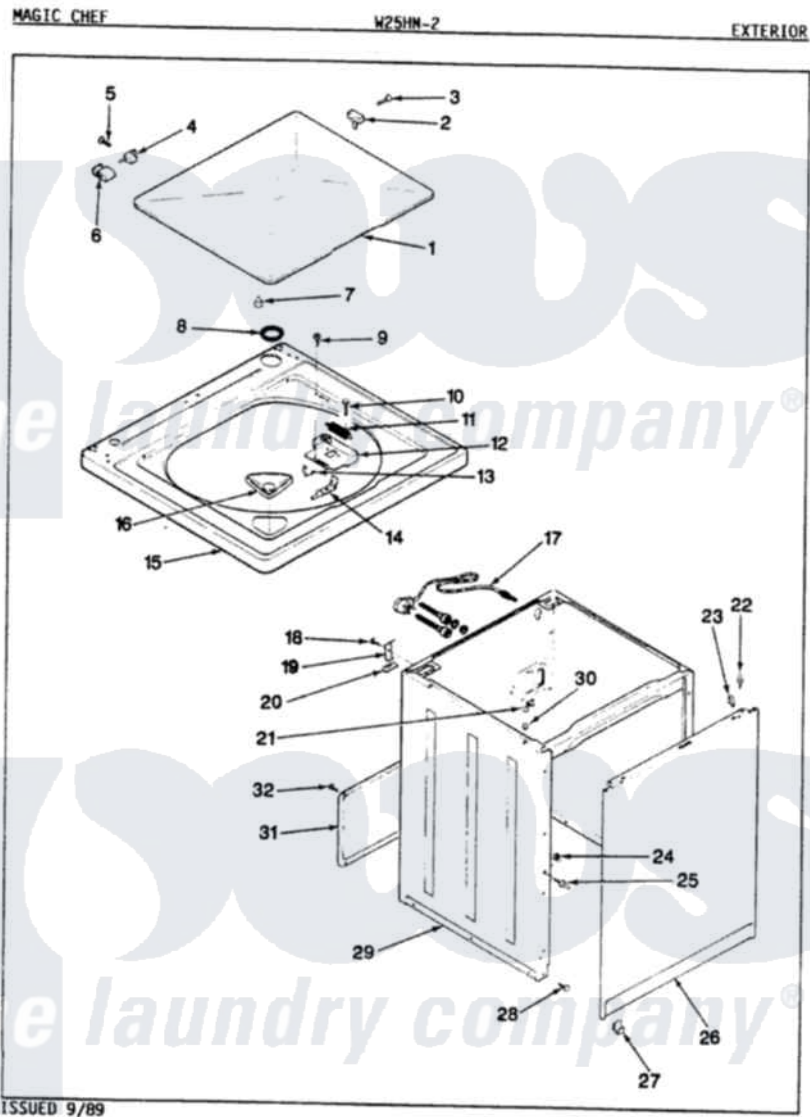

Magic Chef [Residential Magic Chef W25HN2 Washer Parts](#) Parts Diagram 08 - EXTERIOR (REV. E-F)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2341-25		Not Available	CLOTHES DOOR
"	35-2341	35-2026		Lid
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	25-7086	Y0308025		Washer, Stainless Steel
"	35-2045			Pin, Hinge
5	25-7893			Screw
6	35-2044			Hinge, Lid
7	35-0581			Bumper, Door
8	35-2063			Bushing, Insulator
"	35-2064			Bushing, Insulating
9	25-7463	7101P012-60		Screw
10	25-7437	40040701		Screw, Tapping No.6b-20
11	33-9064	12001187		Kit, Lid Switch Assembly
"	33-8911	12001187		Kit, Lid Switch Assembly

12	33-8289	12001187	Kit, Lid Switch Assembly
13	25-7878		Clip
14	33-9063	12001187	Kit, Lid Switch Assembly
15	35-2739		Top, Cabinet
"	35-2739-24		Not Available TOP, CABINET (ALM)
16	33-9906	21001167	Dispenser, Bleach
17	35-0680		Not Available CORD, POWER
18	25-7893		Screw
19	33-7450	35-2846	Hinge, Cabinet Top
20	33-0930		Pad, Top Hinge
21	33-6099		Clamp
22	53-0643		Pin, Locator
23	34-9701		Guide, Cabinet
24	25-0224	3400029	Nut, Adapter Plate
25	53-0643		Pin, Locator
26	35-2084		Panel, Front
27	53-0120		Clip, Front Panel
28	33-2653		Bumper, Cabinet
29	35-2106	21001871	Cabinet
"	35-2106-25		Not Available CABINET ASSY. (HW)
30	33-2653		Bumper, Cabinet
31	35-2108	21001871	Cabinet
32	25-7733	681414	Screw, 10AB X 1/2

