


Magic Chef W26D6HW 03 - EXTERIOR (REV. A)

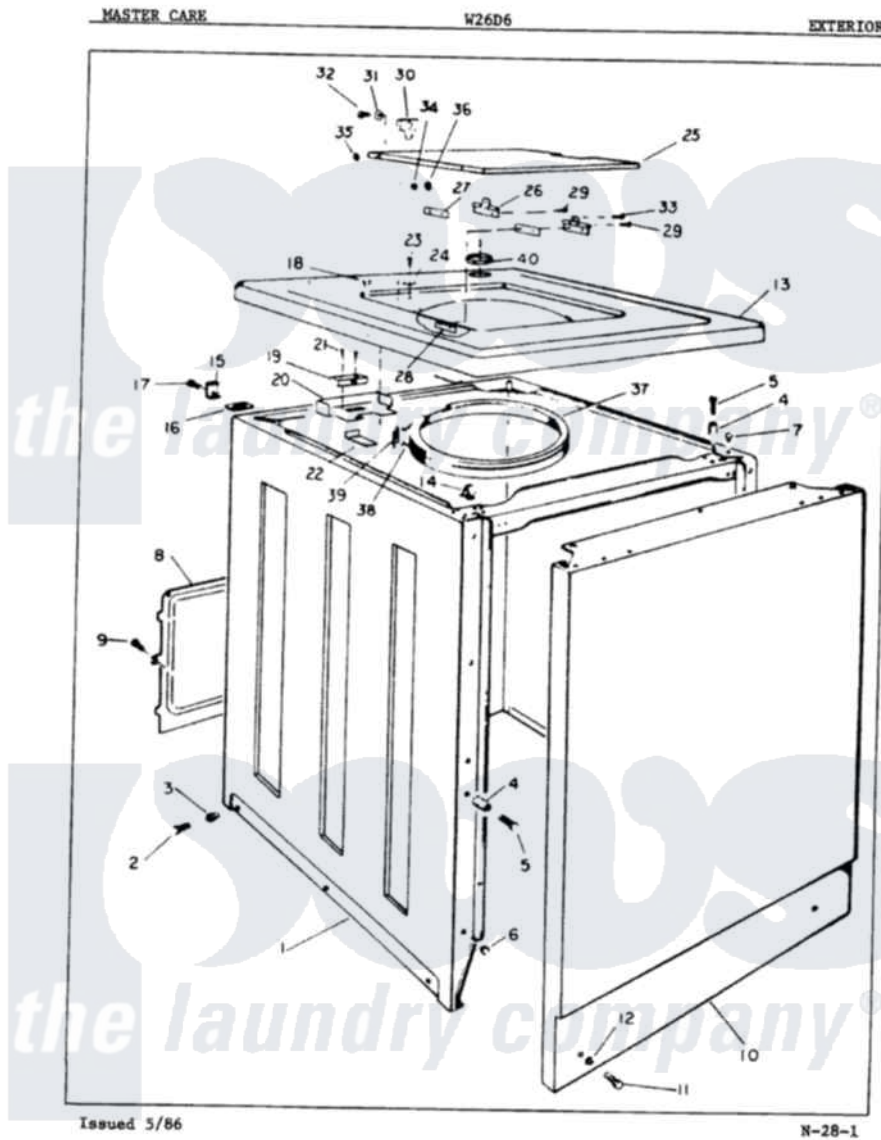

Magic Chef [Residential Magic Chef W26D6HW Washer Parts](#) Parts Diagram 03 - EXTERIOR (REV. A)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-6068-25		Not Available	CABINET BODY
2	25-7001	308685		Side Trim)
3	33-2088		Not Available	SLEEVE
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE WASHER (PURCHASED LOCALLY)
"	25-7458	308685		Side Trim)
4	34-9701			Guide, Cabinet
5	25-6109			Screw
6	33-2653			Bumper, Cabinet
7	33-2653			Bumper, Cabinet
8	33-8687		Not Available	REAR SHIELD
9	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-PURCHASED LOCALLY
10	33-9255-25		Not Available	FRONT PANEL
11	25-7001	308685		Side Trim)
				NOT REQUIRED PART OR

12	W10124350		Not Available	SEE NOTE WASHER (PURCHASED LOCALLY)
13	33-9362-25		Not Available	CABINET TOP
14	25-7285			Clip
15	33-7450	35-2846		Hinge, Cabinet Top
16	33-0930			Pad, Top Hinge
17	25-7732	681414		Screw, 10AB X 1/2
18	33-2653			Bumper, Cabinet
19	33-7745	12001187		Kit, Lid Switch Assembly
20	33-8289	12001187		Kit, Lid Switch Assembly
21	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW- PURCHASED LOCALLY
22	33-8828	12001187		Kit, Lid Switch Assembly
23	25-7463	7101P012-60		Screw
24	25-7436			Nylite Washer
25	33-7929-25		Not Available	CLOTHES DOOR
26	33-6956			Hinge
27	33-6957			Hinge Pad
28	33-8058		Not Available	SPEEDNUT
29	25-7455	99002757		Screw
30	43-0057			Actuator, Door Switch
31	25-7436			Nylite Washer
32	25-7438			Screw
33	25-7455	99002757		Screw
34	25-7086	Y0308025		Washer, Stainless Steel
35	25-7436			Nylite Washer
36	25-8057		Not Available	PLASTIC NUT
37	33-6092		Not Available	SPLASH GUARD
38	33-6093		Not Available	RETAINING RING
39	33-0767			Spring

