


Magic Chef W26D6HW 05 - TUB (REV. A)

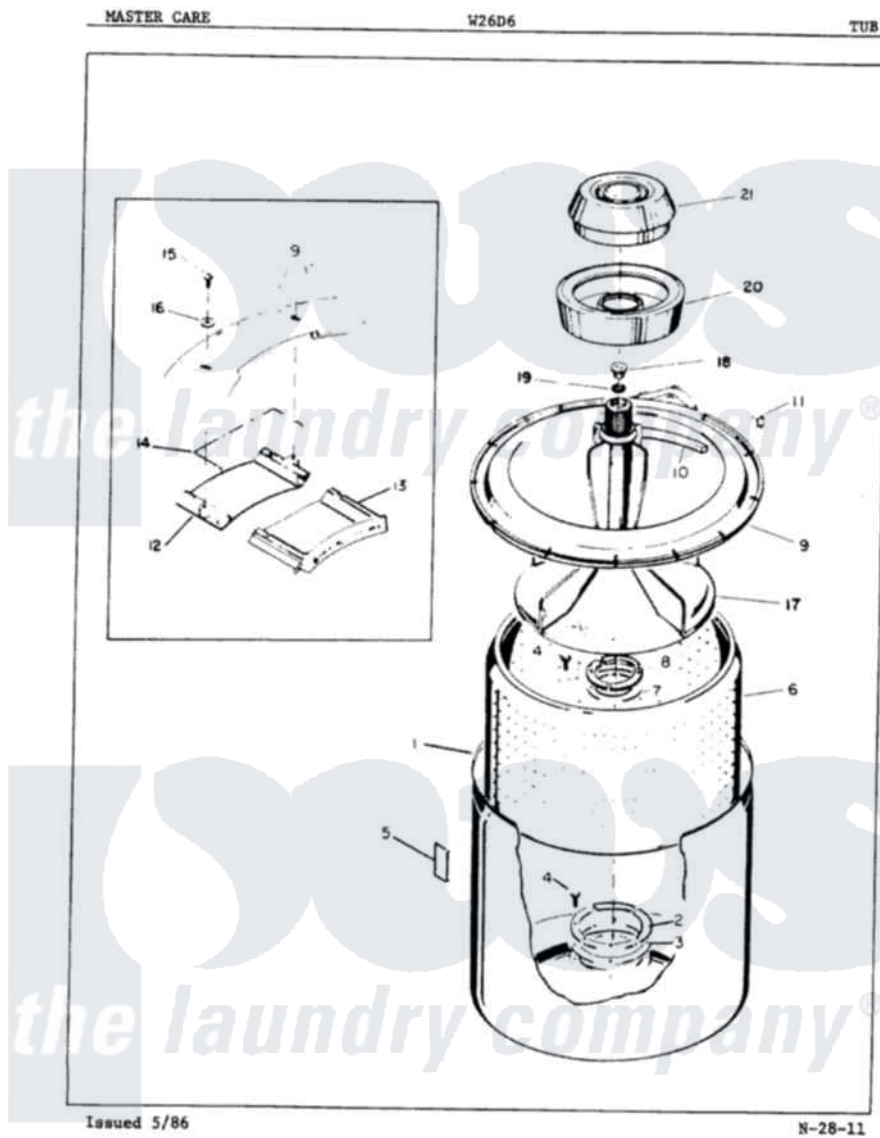

Magic Chef [Residential Magic Chef W26D6HW Washer Parts](#) Parts Diagram 05 - TUB (REV. A)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9392		Not Available	TUB ASSEMBLY
2	33-8800	33-8800K		Plate
3	33-6905			Gasket
4	25-7783	4356852		Screw
5	33-3232	35-0538		Pad
6	33-9566	33-9500N		Basket Kit
7	33-6902			Gasket
8	33-8799		Not Available	REINF PLATE
9	33-6524			Tub Top
10	33-3055			Gasket
11	25-7748			Clip
12	33-8265		Not Available	DISPENSER BASE
13	33-8264		Not Available	DISPENSER ASSEMB
14	33-6521		Not Available	CLIP
15	25-7082	400022-1		Screw
16	25-7224		Not Available	FLAT WASHER

17	33-5983	Not Available	AGITATOR
18	33-6241		Cap
19	25-7330		Rubber Washer
20	33-6107	LA-1012	Lint Filter Kit
21	33-7507	LA-1012	Lint Filter Kit

